


Modification on page 3-3.13, 3-3.14, 4-4.4, 4-4.5, 4-4.10


CPU Jumper Settings

Function	Jumper	Settings
CPU Core Voltage	JP4	1-2 3-4 5-6 7-8 9-10
On= Cap On (One cap for this jumper)		2.2V On
		2.8V On [D]
		2.93V On
		3.2V On
		3.3V On


2.2V

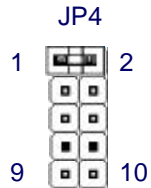


2.8V

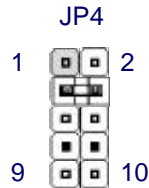

2.93V

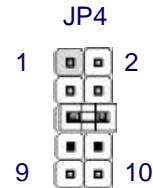

3.2V

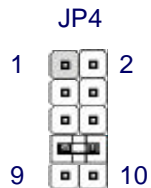

3.3V

