

# SERVICE MANUAL

LP200SC / LP200ST

LCD PC



# **SERVICE MANUAL**

## **LCD PC**

### **LP200SC/LP200ST**

## NOTICE

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

Version 1.0

©September, 2001

## ABOUT THIS MANUAL

This manual is intended for service personnel who have completed sufficient training to undertake the maintenance and inspection of personal computers.

It is organized to allow you to look up basic information for servicing and/or upgrading components of the LCD PC. The following information is included:

*Chapter 1, Introduction*, provides general information about the location of system elements and their specifications.

*Chapter 2, Disassembly*, provides step-by-step instructions for disassembling parts and subsystems and how to upgrade elements of the system.

*Appendix A, Part Lists*

*Appendix B, Switches and Jumpers*

*Appendix C, Circuit Diagrams*

## RELATED DOCUMENT

You may also need to consult the following manual for additional information:

*User's Manual*

This describes the LCD PC's features and the procedures for operating the computer and its ROM-based setup program. It also describes the installation and operation of the utility programs provided with the LCD PC.

# Table of Contents

## **PREFACE**

Notice .....	II
Trademarks.....	II
About This Manual .....	III
Related Document .....	III
Table of Contents .....	IV

## **CHAPTER 1. INTRODUCTION**

Overview .....	1-1
System Specifications .....	1-2
CPU .....	1-2
Intel Celeron .....	1-2
Intel Pentium III .....	1-2
System Memory .....	1-2
Core Logic .....	1-2
BIOS .....	1-3
Video .....	1-3
Storage Devices .....	1-3
Audio .....	1-4
PCMCIA .....	1-4
I/O.....	1-4
Input .....	1-5
Communications .....	1-5
Security.....	1-5
Power System .....	1-5
Physical Specifications.....	1-6
Environmental Specifications .....	1-6

Temperature ..... 1-6  
Humidity (non-condensing) ..... 1-6  
External Locator ..... 1-7  
    Front View ..... 1-7  
    Left View ..... 1-8  
    Right View ..... 1-9  
    Rear View ..... 1-10  
System Board Overview ..... 1-11  
    Key Parts ..... 1-11  
    Cable Connectors, Switches & Jumpers ..... 1-12

**CHAPTER 2. DISASSEMBLY**

Overview ..... 2-1  
    Maintenance Tools ..... 2-2  
    Connections ..... 2-2  
    Maintenance Precautions ..... 2-3  
        Cleaning ..... 2-3  
Back Cover Removal ..... 2-4  
CPU Removal ..... 2-5  
    CPU Upgrade Notes ..... 2-6  
Memory Module Removal ..... 2-7  
    Removing DIMMs ..... 2-7  
    Installing DIMMs ..... 2-7  
Modem Module Removal ..... 2-8  
IEEE 1394 Module Removal ..... 2-9  
FDD Module Removal ..... 2-10  
CD Device Module Removal ..... 2-11  
Inverter Board Removal ..... 2-12  
I/O Bracket Removal ..... 2-13  
System Board Removal ..... 2-14  
LCD Module Removal ..... 2-16

## **SERVICE MANUAL**

LED + Inverter Board Removal .....	2-19
Converter Board Removal .....	2-20
Speaker Removal .....	2-21
Base Assembly Removal .....	2-22
Power Supply Removal .....	2-24
USB Board Removal .....	2-27
Hard Disk Drive Removal .....	2-28

### **APPENDIX A. PART LISTS**

### **APPENDIX B. SWITCHES AND JUMPERS**

### **APPENDIX C. CIRCUIT DIAGRAMS**

# 1 INTRODUCTION

This manual covers the information you need to service or upgrade the LP200SC/ST LCD PC. Information about operating the computer (e.g. getting started, and the System Configuration Utility) is in the *User's Manual*. Information about drivers (e.g. VGA & audio) is also found in the *User's Manual*. That manual is shipped with the computer.

Operating systems (e.g. *Windows 98 Second Edition*, *Windows 2000 Professional*, etc.) have their own manuals as do application software (e.g. word processing and database programs). If you have questions about those programs, you should consult those manuals.

The LCD PC comes with a built-in 15" LCD display and is upgradeable in the areas of CPU, system memory and hard disk. See *Chapter 2, "Disassembly,"* for a detailed description of the upgrade procedures for each specific component. In addition, the BIOS can be updated using software.

This chapter briefly introduces the computer's technical specifications, external features and system board features.



## SYSTEM

### CPU

#### INTEL CELERON

**Socket Type**  
**Speed**

Socket 370 (FCPGA/FCPGA2)  
533/600/633/667/700/733/766MHz (FSB66)  
800/850/900/950MHz (FSB100)  
16KB code + 16KB data  
128KB

**L1 cache** (in CPU)  
**L2 cache** (on die)

#### INTEL PENTIUM III

**Socket Type**  
**Speed**

Socket 370 (FCPGA/FCPGA2)  
600/650/700/750/800/850/1100MHz (FSB100)  
600/733/800/866/933/1000MHz (FSB133)  
16KB code + 16KB data  
256KB

**L1 cache** (in CPU)  
**L2 cache** (on die)

### SYSTEM MEMORY

**Type**  
**Base**  
**Expansion**

SDRAM, 3.3V, 100/133MHz (PC100/133)  
0MB (onboard)  
up to 512MB using one or both 168-pin DIMM sockets  
(DIMM sizes: 64MB, 128MB, 256MB)

### CORE LOGIC

SiS630S digital I/F

## SPECIFICATIONS

## BIOS

Insyde 2Mb Flash ROM, APM 1.2, ACPI

## VIDEO

<b>Controller</b>	built-in SiS630S
<b>Memory*</b>	SSMA
<b>Interface</b>	digital I/F
<b>Display</b>	built-in 15" LCD color TFT
<b>Port</b>	XGA (1024 x 768), 256K colors analog 15-pin VGA port for CRT

\*The system allocates or "shares" a portion of system memory for video use. "Shared" memory size is user-configurable via the SCU.

## STORAGE DEVICES

<b>HDD</b>	fixed, 3.5", 25.4mm, PCI local bus IDE interface
<b>FDD</b>	3.5", 1.44MB (3-mode)
<b>CD Device</b>	(manufacturer's option)
<b>CD-ROM</b>	24X, full size (5.25") ATAPI interface tray-loading mechanism, access time below 100ms
<b>DVD</b>	8X, full size (5.25") ATAPI interface tray-loading mechanism, access time below 100ms (with software MPEG support)
<b>CD-RW</b>	4X, full size (5.25") ATAPI interface tray-loading mechanism, access time below 100ms

## AUDIO

<b>Controller</b>	built-in SiS630S
<b>Compatibility</b>	Sound Blaster, MS Windows Sound System
<b>Compliance</b>	AC'97 specs
<b>Output</b>	2 built-in speakers
<b>Ports</b>	line-in phones-out microphone-in

## PCMCIA

<b>Controller</b>	PCI1420PDV
<b>Socket</b>	(x 2) Type II or (x 1) Type III

## I/O

<b>Controller</b>	NSC99A3
<b>Ports</b>	
<b>USB</b>	x 2 (LP200ST) x 4 (LP200SC)
<b>Serial</b>	(x 1) 9-pin, 16550A compatible (x 1) infrared (modes: IrDA, ASK, FIR)
<b>Parallel</b>	(x 1) 25-pin (modes: Standard AT, Bidirectional, ECP, EPP)
<b>PS/2</b>	(x 2) 6-pin, for mouse and keyboard
<b>IEEE 1394</b>	(x 1) 6-pin (unpowered)

## **INPUT**

**Keyboard**

104-key, AT-compatible, with special function keys

**Mouse**

Genius, scroll type, Microsoft compatible

## **COMMUNICATIONS**

### **MODEM (DEALER OPTION)**

**Type**

MDC, V.90, 56K (software-based)

**Output**

RJ-11 jack (on-board)

### **LAN**

**Type**

built-in SiS630S

**Output**

RJ-45 jack (on-board)

## **SECURITY**

**BIOS Password**

**Kensington Lock Slot**

## **POWER SYSTEM**

**Adapter**

internal AC, 90W, 90-264V (full range, auto-sensing)

**Power Management**

ACPI-compliant (S1, S4 & S5)



## PHYSICAL SPECIFICATIONS

<b>Dimensions</b>	<b>W:</b> 369mm (14.5") <b>L:</b> 384mm (15.1") <b>D:</b> 175mm (6.9")
<b>Weight</b>	7.9Kg
<b>Panel Tilt</b>	0° to 15°
<b>Stand Swivel</b>	270°

## ENVIRONMENTAL SPECIFICATIONS

### TEMPERATURE

<b>Operating</b>	5°C to 35°C (41°F to 95°F)
<b>Storage</b>	-10°C to 65°C (14°F to 149°F)

### HUMIDITY (NON-CONDENSING)

<b>Operating</b>	20 % to 80 %
<b>Storage</b>	10 % to 90 %

# EXTERNAL LOCATOR

The following figures show the external locations of the main features of the LCD PC's system unit.

## FRONT VIEW



FRONT VIEW  
FIG. 1 - 1

- 1. 15" LCD
- 2. Speakers
- 3. FDD activity LED
- 4. CD-device activity LED
- 5. HDD activity LED
- 6. Power LED
- 7. Infrared port
- 8. Power button
- 9. Reset button\*  
(\*LP200ST only)




**LEFT VIEW**

**1**


LEFT VIEW  
**Fig. 1 - 2**

1. PC Card (PCMCIA) socket
2. PC Card eject button
3. LCD brightness control
4. Microphone input jack
5. Line-in jack
6. Phones out jack
7. Volume control knob
8. HDD bay

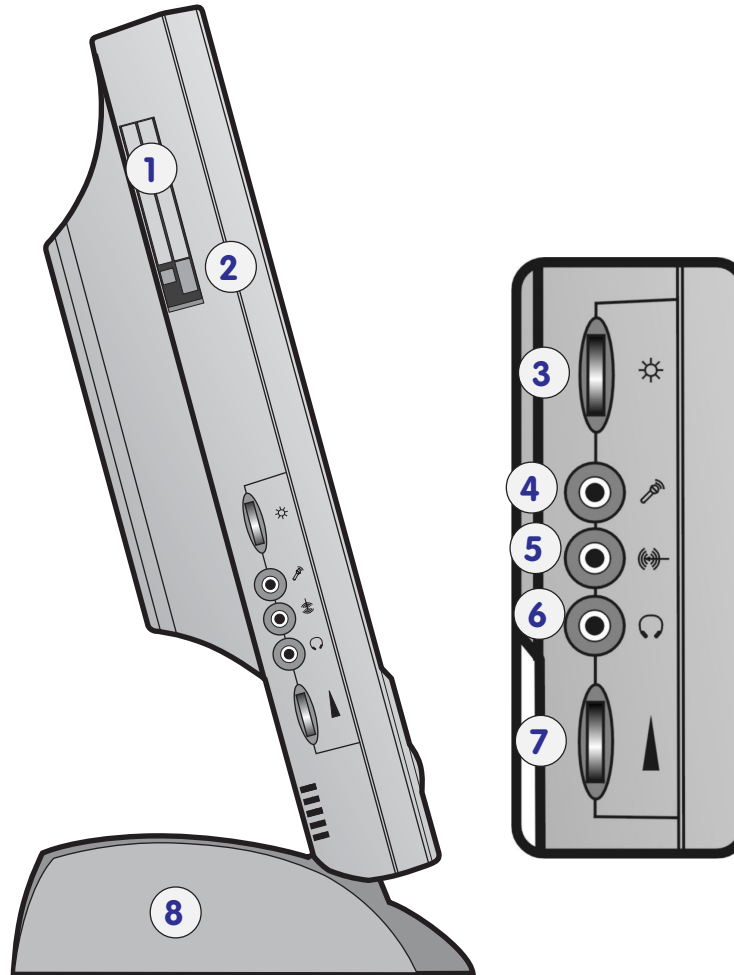


# RIGHT VIEW

LP200SC

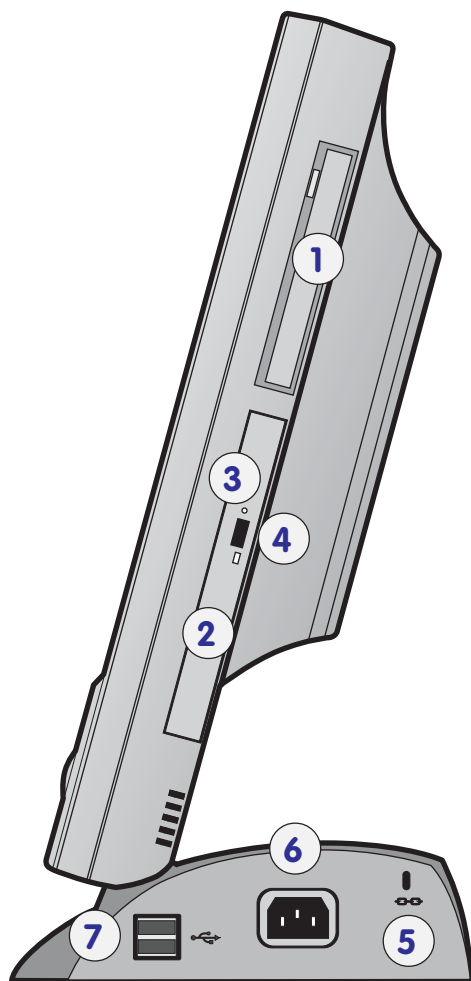

LP200ST

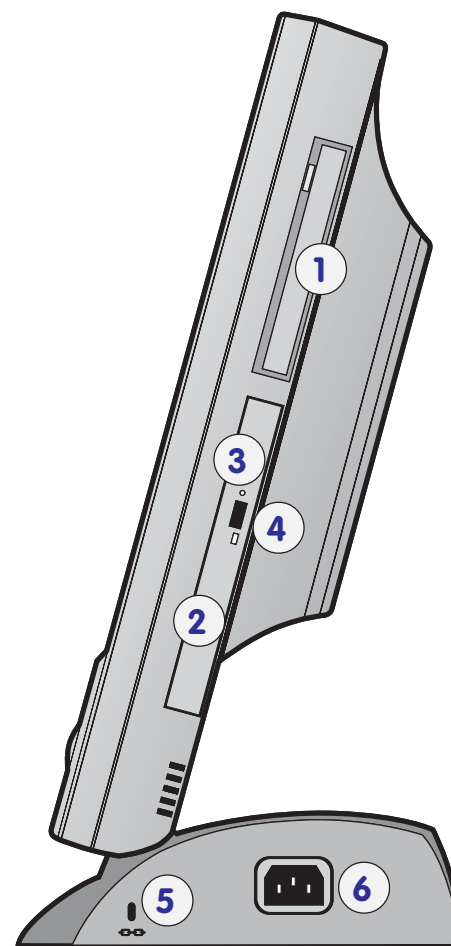

RIGHT VIEW  
FIG. 1 - 3

- 1. FDD bay
- 2. CD-Device bay
- 3. Emergency eject button  
- Use a probe (e.g. a straightened paper clip).
- 4. Eject button
- 5. Kensington Lock slot
- 6. AC-in port
- 7. two USB ports\* (\*LP200SC only)







**REAR VIEW**

1

REAR VIEW

**Fig. 1 - 4**


1. Carrying handle
2. Serial port (COM A)
3. Printer/Parallel port
4. VGA port
5. PS/2 mouse port
6. PS/2 keyboard port
7. IEEE 1394 port
8. USB ports (x2)
9. RJ-45 LAN port
10. RJ-11 Modem port

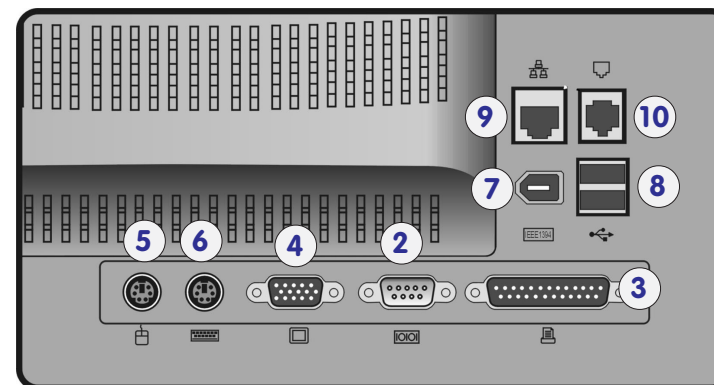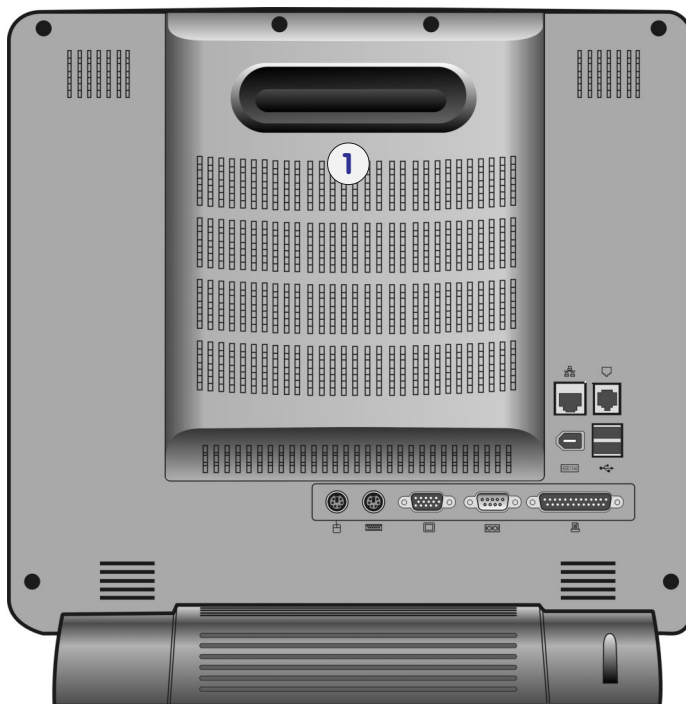


# SYSTEM BOARD OVERVIEW

## KEY PARTS

Top View

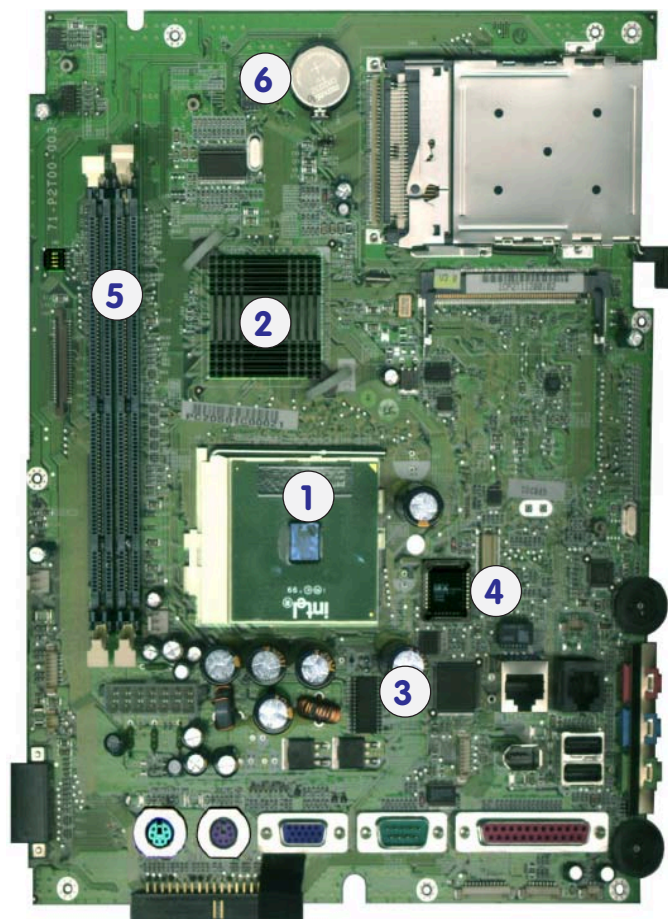

Bottom View

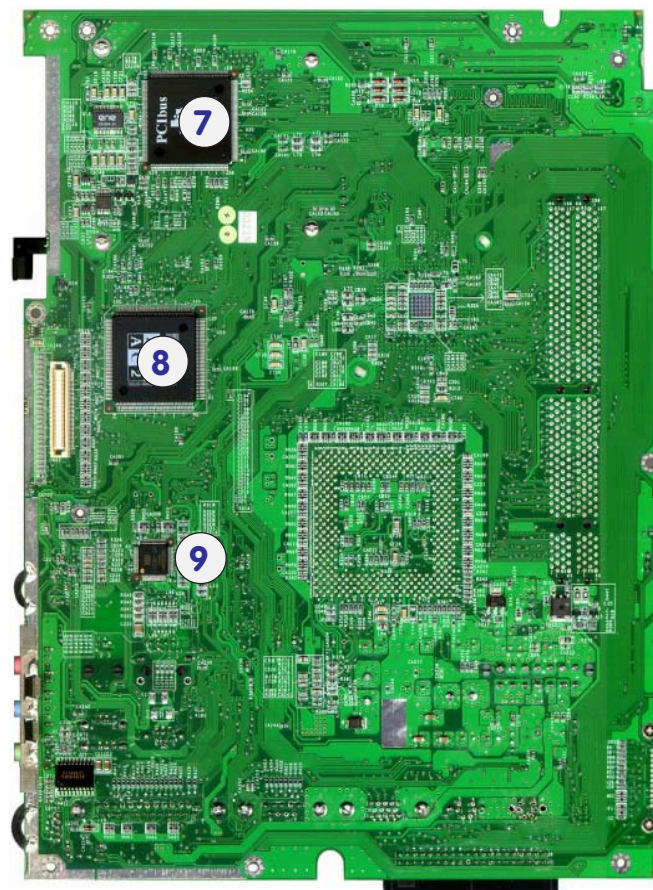

KEY PARTS

**FIG. 1 - 5**

1. CPU  
(Intel Pentium III or Celeron)
2. SiS630S Single Chipset (Core Logic, Audio, Video & LAN)
3. NSC99A3 Super I/O Controller
4. Flash ROM
5. two DIMM Sockets
6. CMOS Battery
7. PCI1420PDV Cardbus Controller
8. ZURAC2 (Zoom Up/Down Rate Converter)
9. ICS1893 PHY (LAN)




## CABLE CONNECTORS, SWITCHES & JUMPERS

CONNECTORS, SWITCHES & JUMPERS

**Fig. 1 - 6**

1. CN1 (Inverter Cable)
2. CN2 (Bluetooth Module)
3. CN5 (FDD Cable)
4. CN7 (System Fan Cable)
5. CN12 (USB Cable)
6. CN17 (Right Speaker Cable)
7. CN23 (CD Device Cable)
8. CN10 (CPU Fan Cable)
9. CN16 (Power Cable)
10. CN29 (HDD Cable)
11. CN4 (IEEE 1394 Module)
12. CN6 (Modem Module)
13. CN11 (Modem Cable)
14. CN19 (IEEE 1394 Cable)
15. CN30 (LED Cable)
16. CN31 (Inverter Cable)
17. CN32 (Left Speaker Cable)
18. SW1 (CPU Frequency Switch)
19. SW2 (LCD Type Switch)
20. J1 (CMOS Clear Jumper)
21. J2 (Panel VCC Jumper)

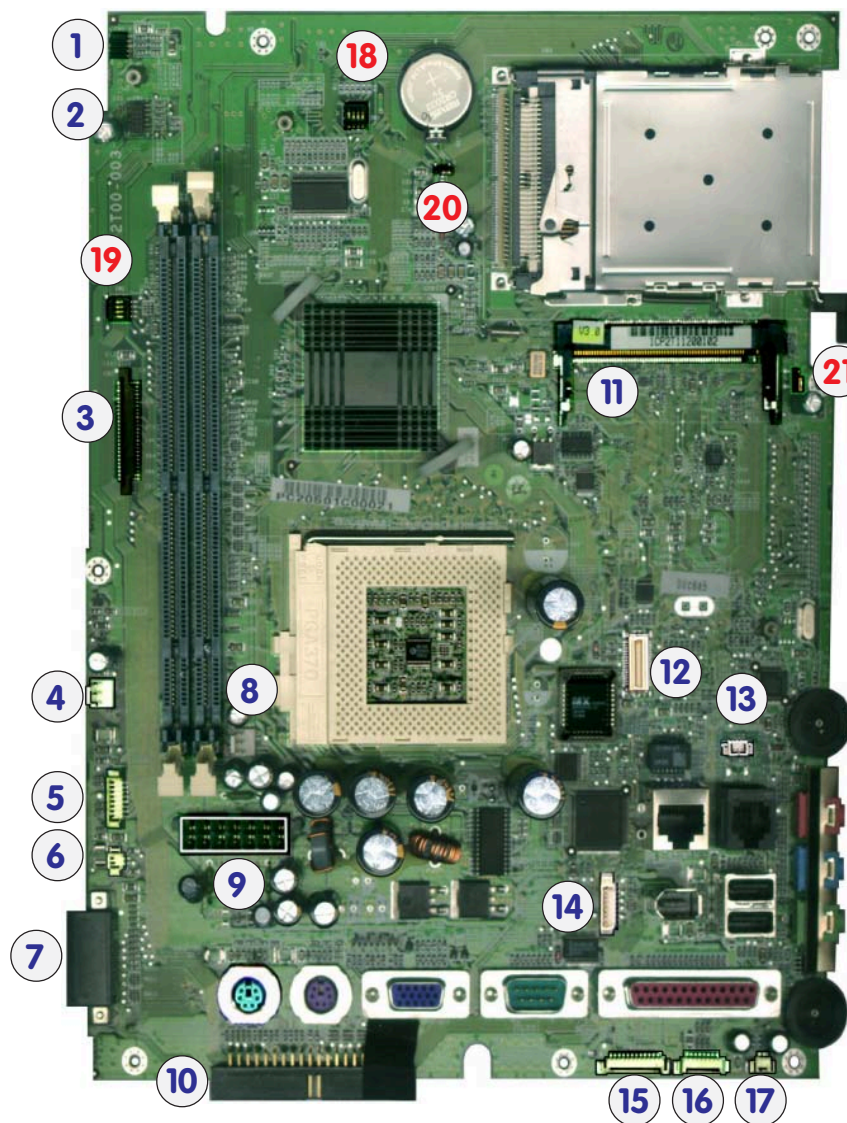

## 2 DISASSEMBLY

This chapter provides step-by-step instructions for disassembling parts and subsystems. When it comes to reassembly, reverse the procedures (unless otherwise indicated).

We suggest you completely review any procedure before you take the computer apart.

### **CPU and Memory Upgrades:**

The upgrade procedures for CPU and system memory involve more than the component-specific removal and replacement procedure. Please pay attention to the component-specific upgrade notes.

### **Illustrations:**

To enhance procedural clarity, the illustrations in this chapter do not include all components. Mylar insulation and adhesive attachments are not shown unless they are critical to the disassembly process.

## MAINTENANCE TOOLS

The following tools are recommended when working on the LCD PC:

- M3 Philips-head screwdriver
- M2.5 Philips-head screwdriver (magnetized)\*
- M2 Philips-head screwdriver
- Small flat-head screwdriver
- Pair of needle-nose pliers
- Anti-static wrist-strap

\* note Maintenance Precaution #3.

## CONNECTIONS

Connections within the computer are one of four types:

Locking collar sockets for ribbon connectors

To release these connectors, use a small flat-head screwdriver to gently pry the locking collar away from its base. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually *not* indicated.

Pressure sockets for multi-wire connectors

To release this connector type, grasp it at its head and gently rock it from side to side as you pull it out. *Do not pull on the wires themselves.* When replacing the connection, do not try to force it. The socket only fits one way.

Pressure sockets for ribbon connectors

To release these connectors, use a small pair of needle-nose pliers to gently lift the connector away from its socket. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually *not* indicated.

Board-to-board or multi-pin sockets

To separate the boards, gently rock them from side to side as you pull them apart. If the connection is very tight, use a small flat-head screwdriver - *use just enough force to start the separation.*

## MAINTENANCE PRECAUTIONS

The following precautions are a reminder.

To avoid personal injury or damage to the computer while performing a removal and/or replacement job, take the following precautions:

1. **Don't drop it.** Perform your repairs and/or upgrades on a stable surface. If the computer falls, the case and other components could be damaged.
2. **Don't overheat it.** Note the proximity of any heating elements. Keep the computer out of direct sunlight.
3. **Avoid interference.** Note the proximity of any high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage components and/or data. You should also monitor the position of magnetized tools (i.e. screwdrivers).
4. **Keep it dry.** This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.
5. **Be careful with power.** Avoid accidental shocks, discharges or explosions.
  - Before removing or servicing any part from the computer, turn the computer off and detach any power supplies.
  - When you want to unplug the power cord or any cable/wire, be sure to disconnect it by the plug head. Do not pull on the wire.
6. **Peripherals** – Turn off and detach any peripherals.
7. **Beware of static discharge.** ICs, such as the CPU and main support chips, are vulnerable to static electricity. Before handling any part in the computer, discharge any static electricity inside the computer. When handling a printed circuit board, do not use gloves or other materials which allow static electricity buildup. We suggest that you use an anti-static wrist strap instead.
8. **Beware of corrosion.** As you perform your job, avoid touching any connector leads. Even the cleanest hands produce oils which can attract corrosive elements.
9. **Keep your work environment clean.** Tobacco smoke, dust or other air-borne particulate matter is often attracted to charged surfaces, reducing performance.
10. **Keep track of the components.** When removing or replacing any part, be careful not to leave small parts, such as screws, loose inside the computer.

## CLEANING

Do not apply cleaner directly to the computer, use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.


## BACK COVER REMOVAL

1. Place the system with its LCD display facing down.
2. Remove the 8 screws (A, B, C, D, E, F, G & H) which secure the Back Cover to the rest of the system.

2

REMOVING 6 SCREWS FROM  
THE BACK OF THE SYSTEM

FIG. 2-1

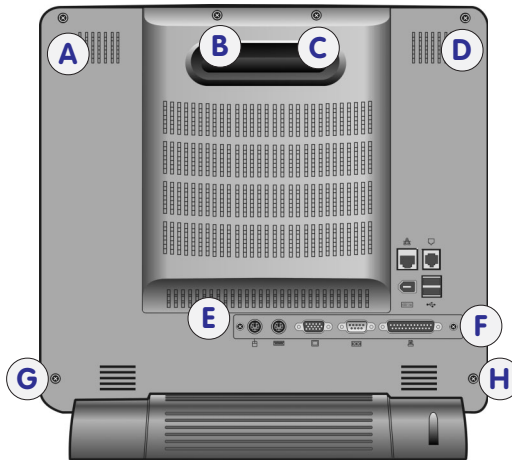

3. Gently remove the cover from the rest of the system.

BACK COVER AND THE REST  
OF THE SYSTEM

FIG. 2-2



# CPU REMOVAL


## Part A

Remove the Back Cover (page 2-4).

## Part B

**Note:** If you want to upgrade the CPU, replace the old CPU with the upgraded one and also see the CPU Upgrade Notes on the next page.

1. Unplug the Fan Cable from Connector **CN10**.
2. Disengage both caches at the sides of the Fan from the CPU socket.
3. A thermal pad is attached to the Fan. Remove the Fan with the Thermal Pad from the CPU.
4. Disengage the CPU lever and remove the CPU.

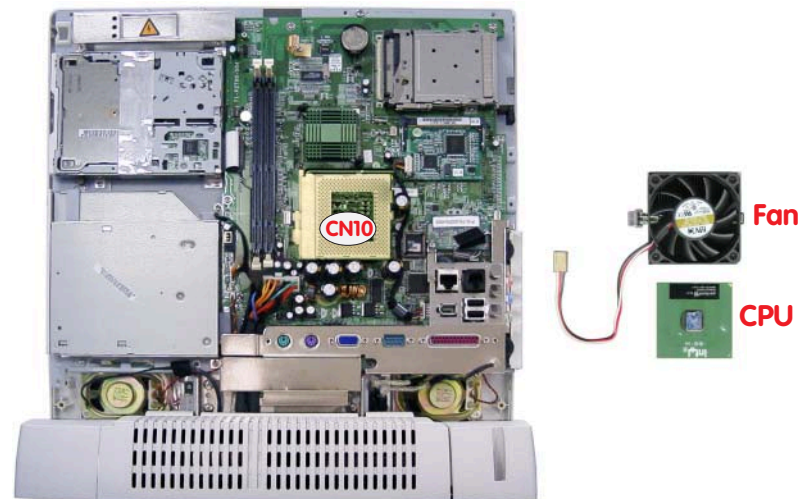

REMOVING THE FAN  
AND THE CPU

**FIG. 2-3**

**Note for Replacing the CPU:** Reverse the removal procedure. Please also note the following:

When inserting the CPU, put the CPU in the CPU socket with the notched corner of the CPU aligning with the notched corner of the CPU socket and then engage the lever.



## CPU UPGRADE NOTES

After you install the upgraded CPU, check against the following table to see if you need to adjust switch settings. (Refer to Fig. 2-4 for the location of the SW1 CPU Frequency Switch.)

2


SW1 CPU FREQUENCY  
SWITCH SETTINGS

**TABLE 2-1**

CPU		SDRAM	SW1-1	SW1-2	SW1-3	SW1-4
Type	FSB Speed (MHz)	MHz				
Celeron 533A	66	100	OFF	OFF	OFF	OFF
Celeron 600	66	100	OFF	OFF	OFF	OFF
Celeron 633	66	100	OFF	OFF	OFF	OFF
Celeron 667	66	100	OFF	OFF	OFF	OFF
Celeron 700	66	100	OFF	OFF	OFF	OFF
Celeron 733	66	100	OFF	OFF	OFF	OFF
Celeron 766	66	100	OFF	OFF	OFF	OFF
Celeron 800	100	100	ON	OFF	OFF	OFF
Celeron 850	100	100	ON	OFF	OFF	OFF
Celeron 900	100	100	ON	OFF	OFF	OFF
Celeron 950	100	100	ON	OFF	OFF	OFF
PIII 600	100	100	ON	OFF	OFF	OFF
PIII 650	100	100	ON	OFF	OFF	OFF
PIII 700	100	100	ON	OFF	OFF	OFF
PIII 750	100	100	ON	OFF	OFF	OFF
PIII 800	100	100	ON	OFF	OFF	OFF
PIII 850	100	100	ON	OFF	OFF	OFF
PIII 1100	100	100	ON	OFF	OFF	OFF
PIII 600EB	133	133	ON	ON	ON	OFF
PIII 733	133	133	ON	ON	ON	OFF
PIII 800EB	133	133	ON	ON	ON	OFF
PIII 866	133	133	ON	ON	ON	OFF
PIII 933	133	133	ON	ON	ON	OFF
PIII 1000	133	133	ON	ON	ON	OFF

SWITCH SW1 LOCATION

**FIG. 2-4**

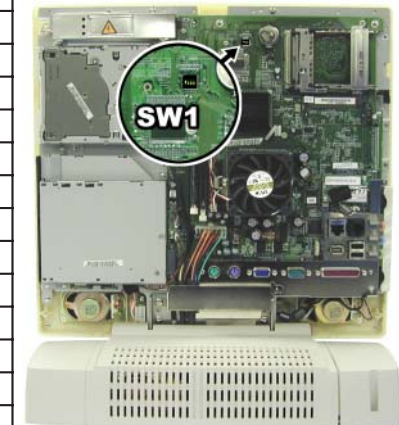

# MEMORY MODULE REMOVAL

## REMOVING DIMMs

### Part A

Remove the Back Cover (page 2-4).

### Part B


Release the levers on the two ends of the DIMM slot. As you do so, the module will rise slightly and remove the seated DIMM, one at a time.

## INSTALLING DIMMs


1. Insert a DIMM in either slot at about a 20° angle. Grooves on the sides of the module allow you to insert it only one way. Make sure it is seated as far into the slot as it will go. DO NOT FORCE IT. The module should fit in without much pressure. If there is a lot of resistance, check to make sure the DIMM is properly seated.
2. Click in the slot levers to secure the module.
3. Reinstall the Back Cover.

### Memory Upgrade Note:

- If you have changed the memory configuration, run SCU so the new total can be registered in the CMOS.
- If you have increased memory, check to see if you need to recreate the Hibernate-specific file if the system runs Windows 98 SE with Hibernate support enabled. (Refer to *Chapter 3, Advanced Controls & Chapter 5, Drivers & Utilities* of the *User's Manual* for details.)

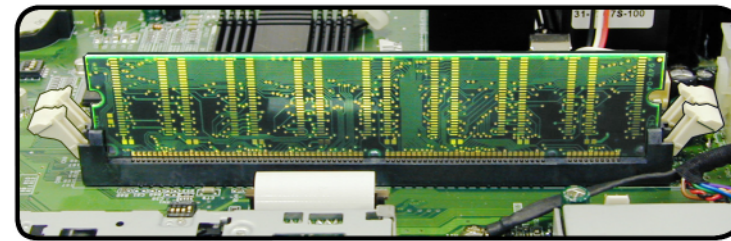

REMOVING THE DIMMs  
**FIG. 2-5**

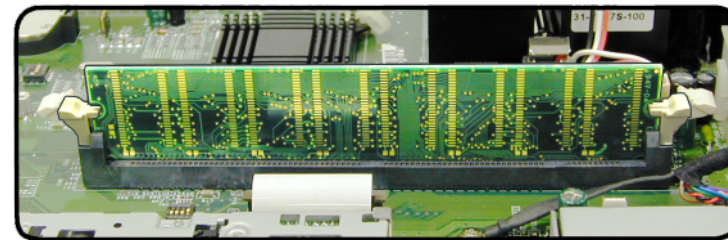

INSTALLING THE DIMMs  
**FIG. 2-6**

# MODEM MODULE REMOVAL

## Part A


Remove the Back Cover (page 2-4).

## Part B

1. Remove 2 screws (**A** & **B**) securing the Modem Module to the System Board.
2. Disconnect the Modem Cable from Connector **CNT1** on the System Board.
3. Remove the Modem Module from Connector **CN6** on the System Board.

2

REMOVING THE MODEM  
MODULE  
FIG. 2-7

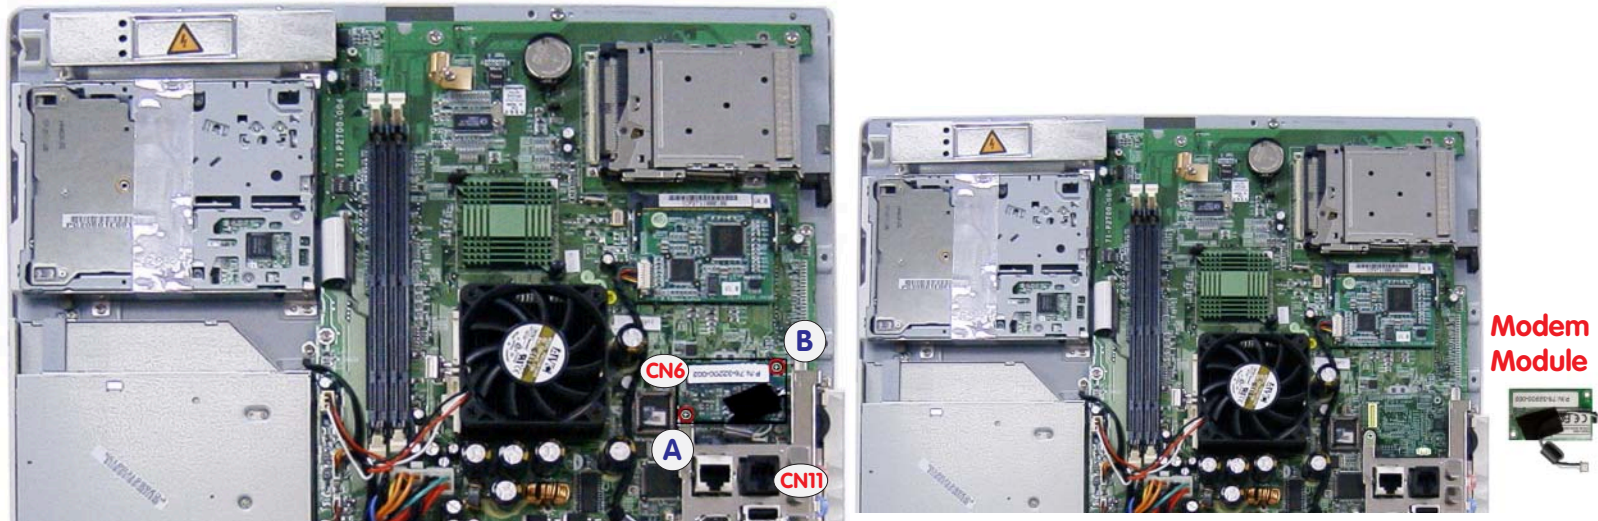

# IEEE 1394 MODULE REMOVAL

## Part A

Remove the Back Cover (page 2-4).

## Part B

1. Disconnect the IEEE 1394 Cable from Connector **CN19** on the System Board.
2. Remove the IEEE 1394 Module from Connector **CN4** on the System Board.



REMOVING THE IEEE  
1394 MODULE  
FIG. 2-8

## FDD MODULE REMOVAL

### Part A

Remove the Back Cover (page 2-4).

### Part B

1. Remove 4 screws (**A**, **B**, **C** & **D**).
2. Separate the FDD Module from the rest of the system by disconnecting the FDD Cable from the System Board at Connector **CN5**.

2


REMOVING THE FDD  
MODULE (1)

FIG. 2-9



REMOVING THE FDD  
MODULE (2)

FIG. 2-10

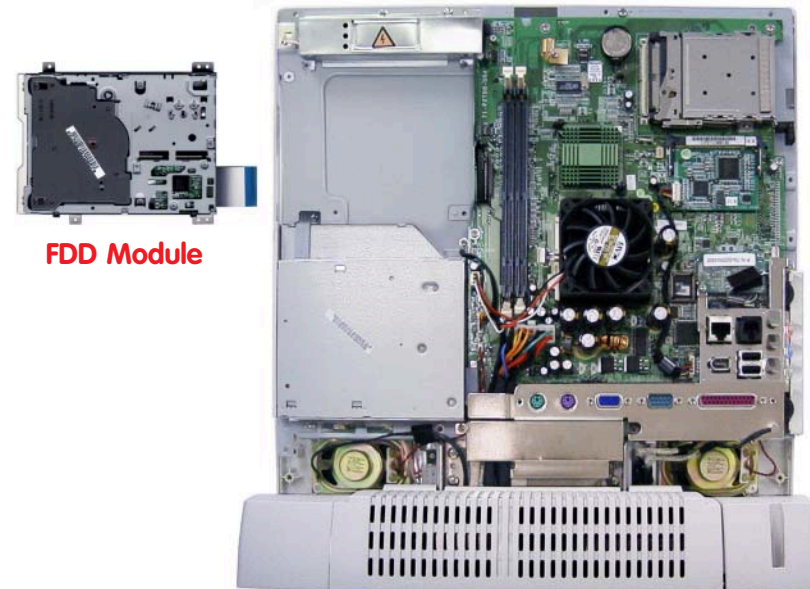

# CD DEVICE MODULE REMOVAL



The CD device module can be the CD-ROM Module, DVD Module or CD-RW Module.

## Part A

Remove the Back Cover (Page 2-4).

## Part B

1. Remove 4 screws (**A, B, C & D**).
2. Separate the CD device module from the rest of the system by disconnecting the device cable from Connector **CN23** on the System Board.

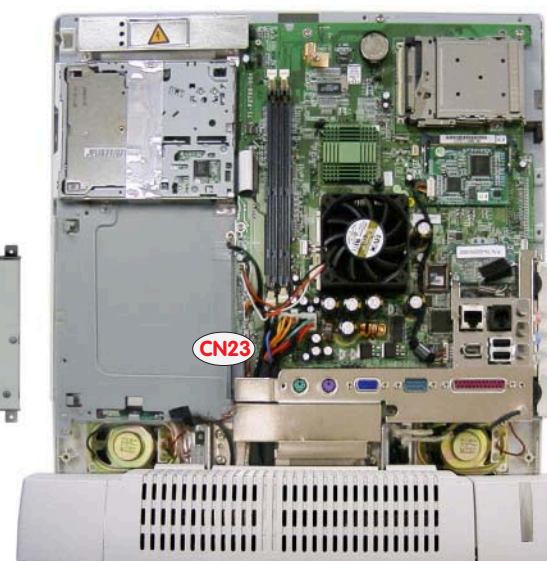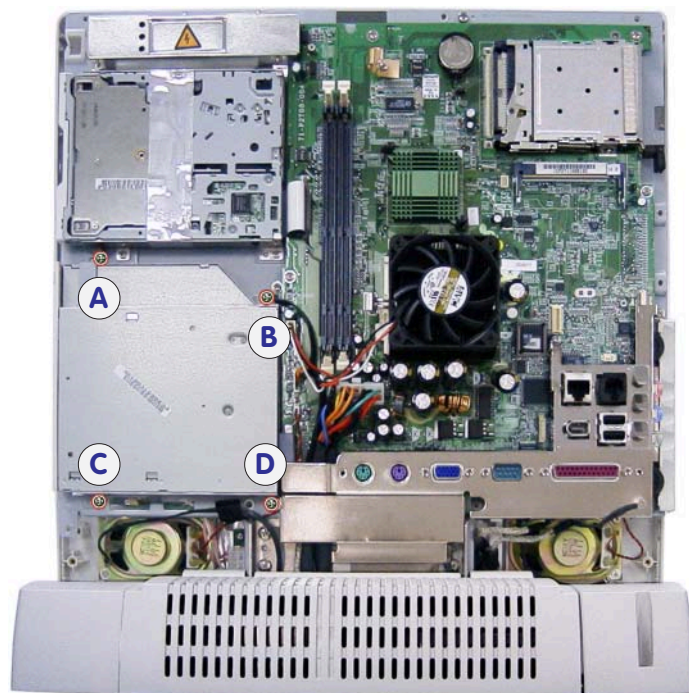

REMOVING THE CD DEVICE MODULE (1)

FIG. 2-11

REMOVING THE CD DEVICE MODULE (2)

FIG. 2-12

# INVERTER BOARD REMOVAL


## Part A

Remove the Back Cover (Page 2-4).

## Part B

1. Remove the Inverter Shielding Plate by removing 3 screws (**A**, **B** & **C**) which secure it to the rest of the system.  
(If you have already removed the FDD module, Screws A & B have already been removed during the process.)
2. Remove 2 screws (**D** & **E**) which secure the Inverter Board and the Inverter Mylar to the rest of the system.
3. Disconnect the following 3 cables:
  - (**C1** & **C2**) The LCD to Inverter Board (two cables from Connector **CN2**).
  - (**C3**) The Inverter Board to System Board (from Connector **CN1**).
4. Separate the Inverter Board and the Inverter Mylar.

REMOVING THE INVERTER BOARD  
BOARD  
Fig. 2-13

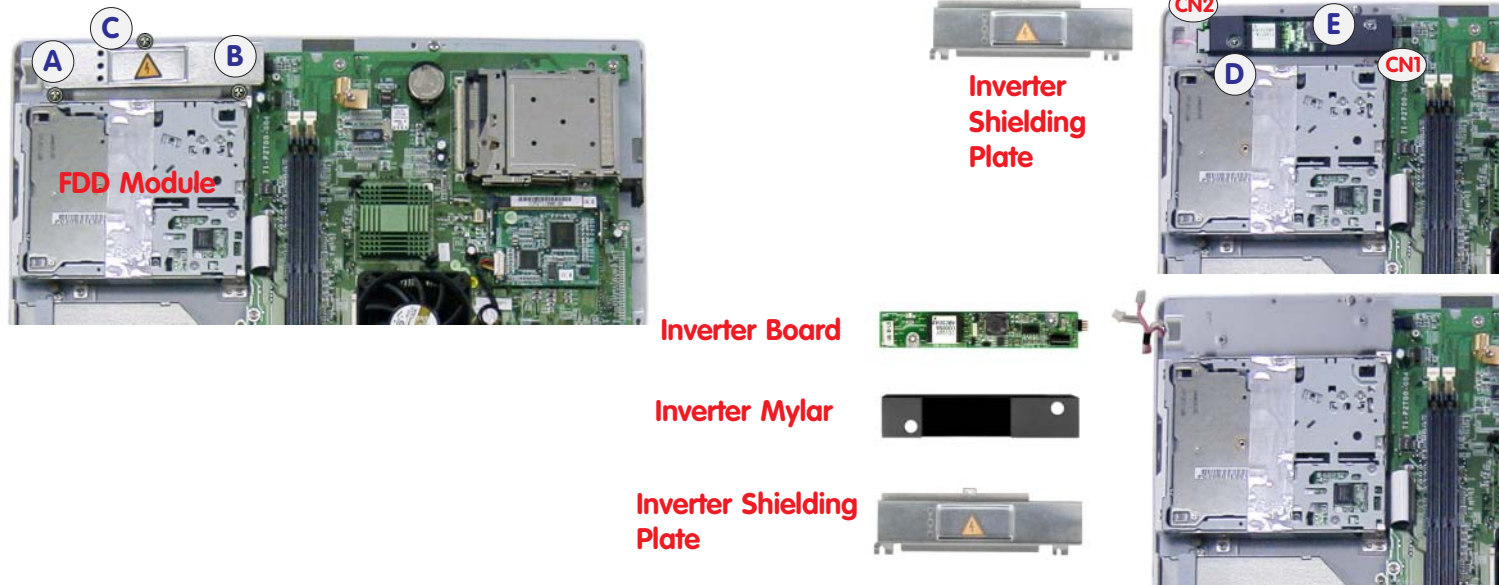



# I/O BRACKET REMOVAL

## Part A

1. Remove the Back Cover (page 2-4).
2. Remove the Modem Module (page 2-8).

## Part B

Remove the I/O Bracket by removing 9 screws (**A, B, C, D, E, F, G, H & I**) which secure it to the rest of the system. (If you have already removed the CD device module, Screw **A** has already been removed during the process.)

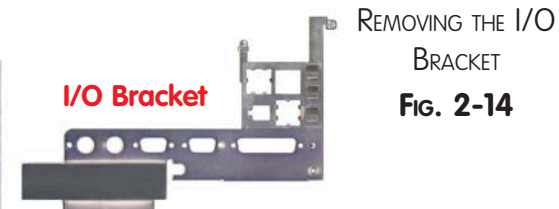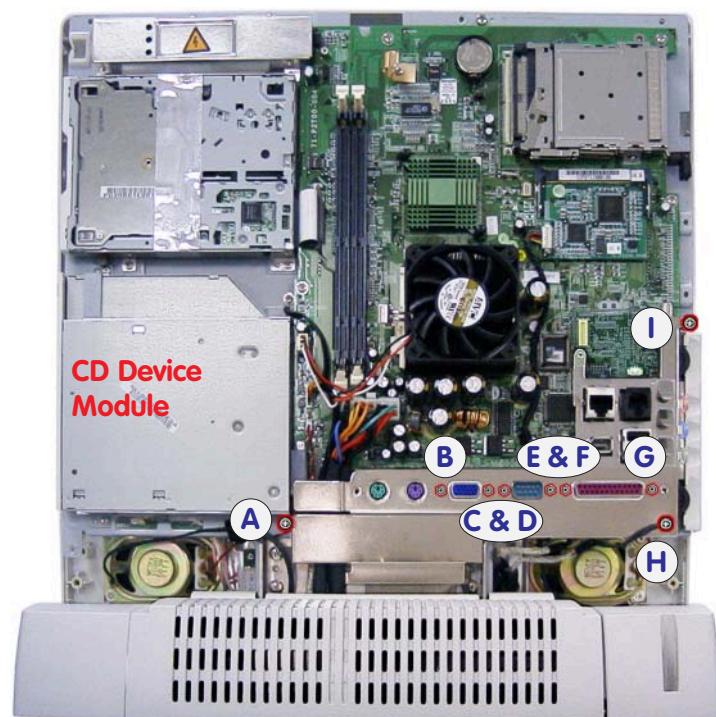

REMOVING THE I/O  
BRACKET  
FIG. 2-14



## SYSTEM BOARD REMOVAL

### Part A

Remove the Back Cover (page 2-4).

Remove the Modem Module (page 2-8).

Remove the I/O Bracket (page 2-13).

### Part B

1. Disconnect the following 10 cables from the System Board:

#### **10 Cables**

**(C1)** The Inverter Board to System Board (from Connector **CN1**).

(If you have already removed the Inverter Board, the Inverter Cable has already been removed during the process.)

**(C2)** The FDD Module to System Board (from Connector **CN5**).

(If you have already removed the FDD Module, the FDD Cable has already been removed during the process.)

**(C3)** The USB Board to System Board (from Connector **CN12**).

**(C4)** The Right Speaker to System Board (from Connector **CN17**).

**(C5)** The CD device module to System Board (from Connector **CN23**).

(If you have already removed the CD device module, the device cable has already been removed during the process.)

**(C6)** The Power Supply to System Board (from Connector **CN16**).

**(C7)** The HDD to System Board (from Connector **CN29**).

**(C8)** The LED + Inverter Board to System Board (LED Cable from Connector **CN30**).

**(C9)** The LED + Inverter Board to System Board (Inverter Cable from Connector **CN31**).

**(C10)** The Left Speaker to System Board (from Connector **CN32**).

2. Disconnect the following 2 ground wires from the System Board:




#### **2 Ground Wires**

**(W1)** A ground wire with the USB Cable fixed to the System Board with a screw.

**(W2)** A ground wire with the Power Cable fixed to the System Board with a screw.

3. Remove 5 screws (**A, B, C, D & E**)

- 4. The System Board is connected to the rest of the system (i.e. LCD Module) via a board-to-board connector. Remove the System Board from the LCD Connector.

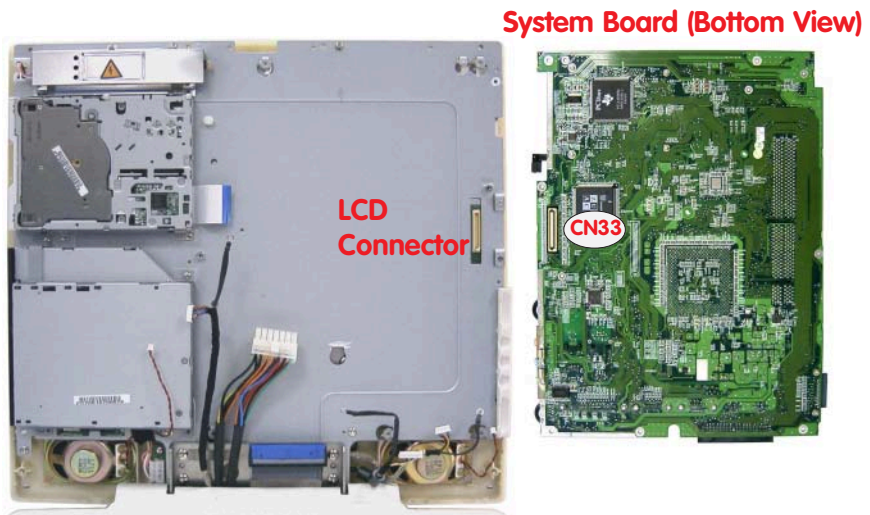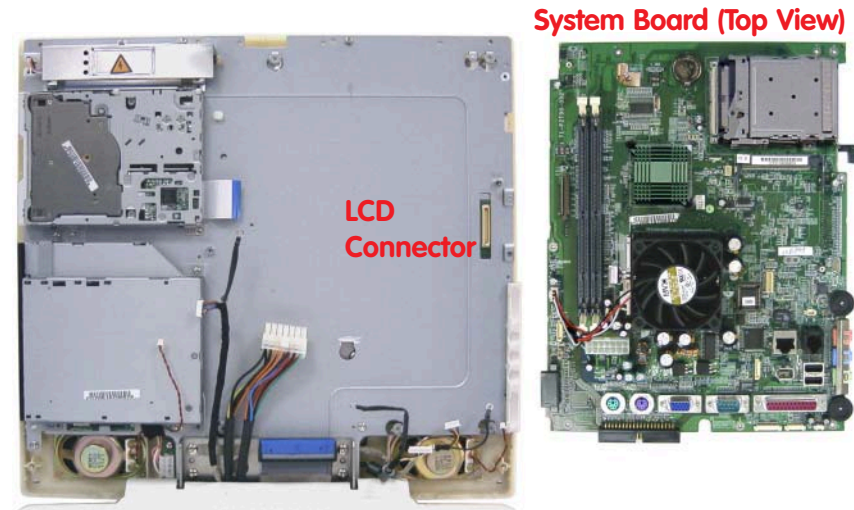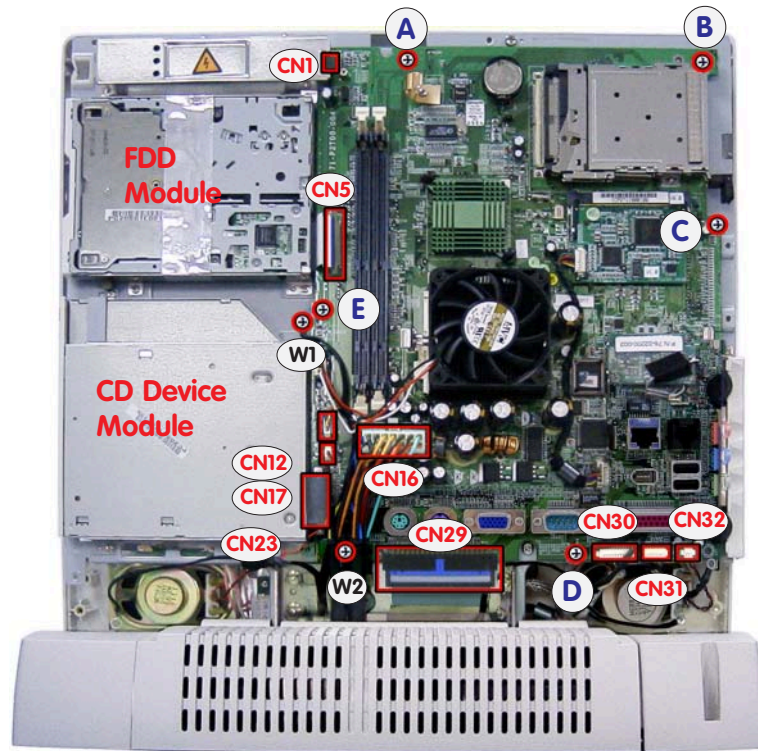

REMOVING THE SYSTEM BOARD  
FIG. 2-15

# LCD MODULE REMOVAL

## Part A

Remove the Back Cover (page 2-4).

Remove the Modem Module (page 2-8).

Remove the I/O Bracket (page 2-13).

## Part B

1. Remove 7 screws (**A, B, C, D, E, F & G**).
2. Disconnect the following 7 cables.

### **7 Cables**

**(C1 & C2)** The LCD to Inverter Board ( 2 cables from Connector **CN2**).

**(C3)** The Right Speaker to System Board (from Connector **CN17**)

**(C4)** The Converter Board to LED + Inverter Board (from Connector **CN1**).

**(C5)** The LED + Inverter Board to System Board (LED Cable from Connector **CN30**).

**(C6)** The LED + Inverter Board to System Board (Inverter Cable from Connector **CN31**).

**(C7)** The Left Speaker to System Board (from Connector **CN32**)


3. Disconnect the following 3 ground wires.

**(W1)** A ground wire with the LED Cable fixed to the System Board with a screw.

**(W2)** A ground wire fixed to the Right Speaker with a screw.

**(W3)** A ground wire fixed to the Left Speaker with a screw.

2

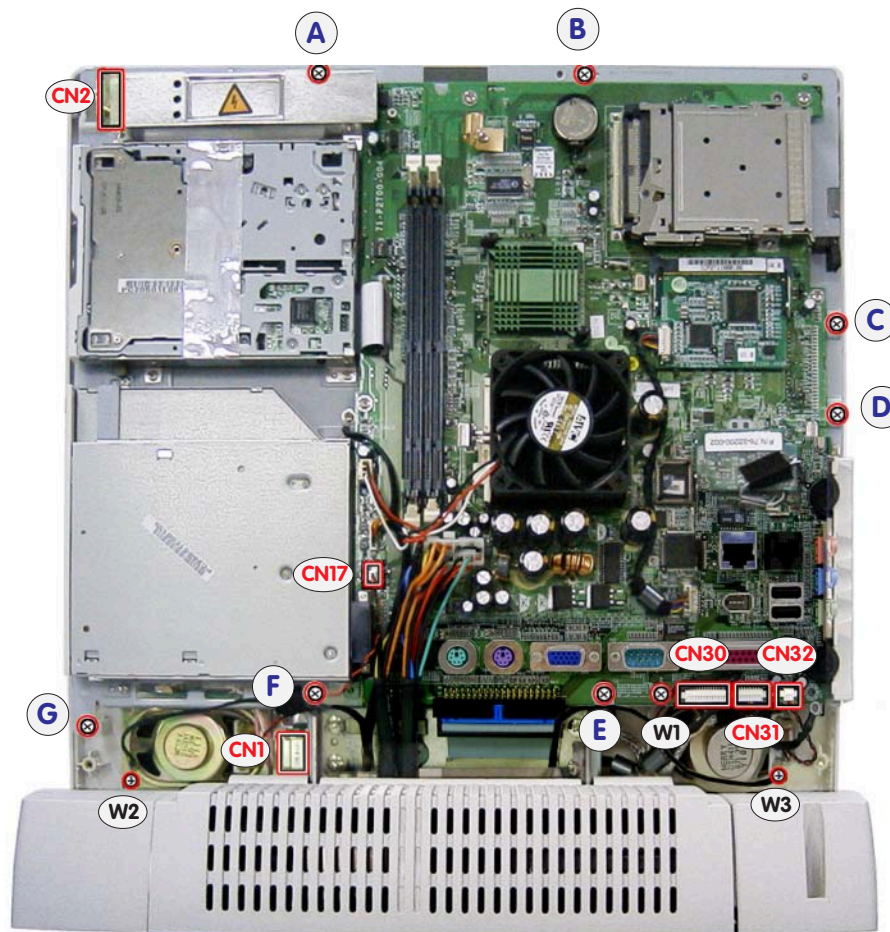

REMOVING 7 SCREWS, 6  
CABLES & 3 GROUND  
WIRES  
**FIG. 2-16**

4. Remove the LCD Module.

**A.** Remove 4 screws (**A**, **B**, **C** & **D**) to separate the Front Panel from the rest of the system.

At this point the LCD Module is still connected to the System Board at a board-to-board connector and to the Converter Board.

**B.** Remove the LCD Module by disconnecting it from Connector **CN33** on the reverse side of the System Board and disconnecting the Converter Cable.



REMOVING THE LCD  
MODULE

FIG. 2-17

# LED + INVERTER BOARD REMOVAL

## Part A

Remove the Back Cover (page 2-4).


Remove the Modem Module (page 2-8).

Remove the I/O Bracket (page 2-13).

Perform Steps 1, 2 & 3 of Part B of the LCD Module Removal Procedure (page 2-16).

## Part B

1. Separate the Front Panel from the rest of the system by removing 4 screws (**A**, **B**, **C** & **D**).
2. Separate the LED + Inverter Board from the Front Panel by removing 3 screws (**E**, **F** & **G**).

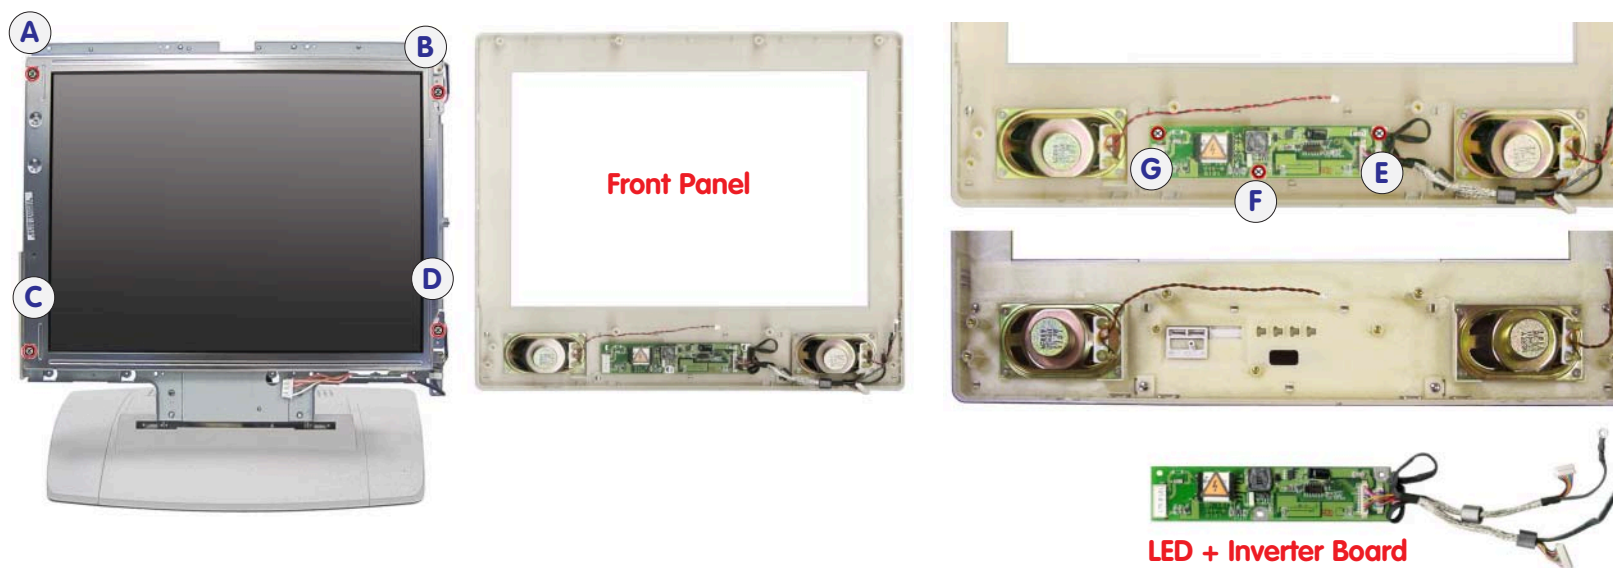

REMOVING THE LED +  
INVERTER BOARD  
**FIG. 2-18**

# CONVERTER BOARD REMOVAL

## Part A

Remove the LCD Module (pages 2-16 ~ 2-18).


## Part B

Separate the Converter Board from the rest of the system by removing Screw **A**.

2

REMOVING THE CONVERTER BOARD

**FIG. 2-19**

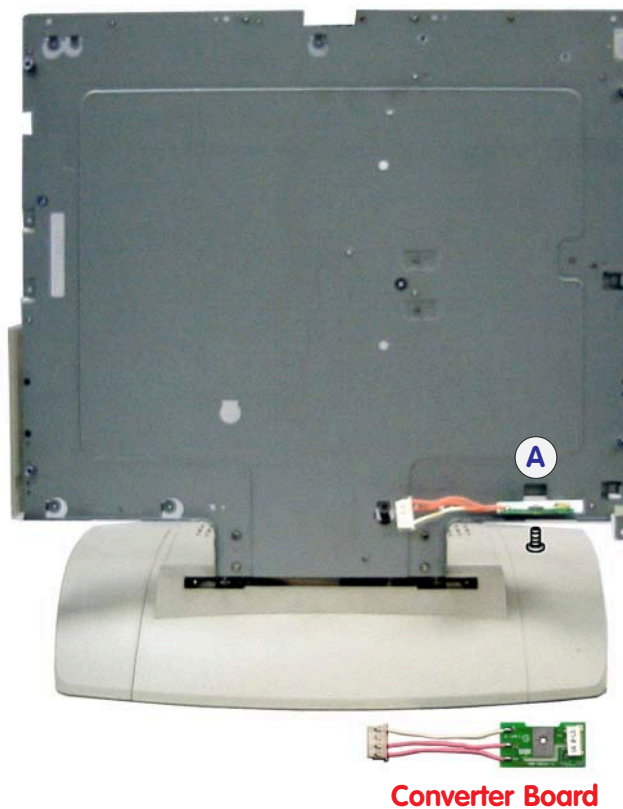

# SPEAKER REMOVAL

## Part A

Remove the Back Cover (page 2-4).

Remove the Modem Module (page 2-8).


Remove the I/O Bracket (page 2-13).

Perform Steps 1, 2 & 3 of Part B of the LCD Module Removal Procedure (page 2-16).

## Part B

1. Separate the Front Panel from the rest of the system by removing 4 screws (A, B, C & D).
2. Separate the Speakers from the Front Panel by removing 8 screws (E, F, G, H, I, J, K & L).

2

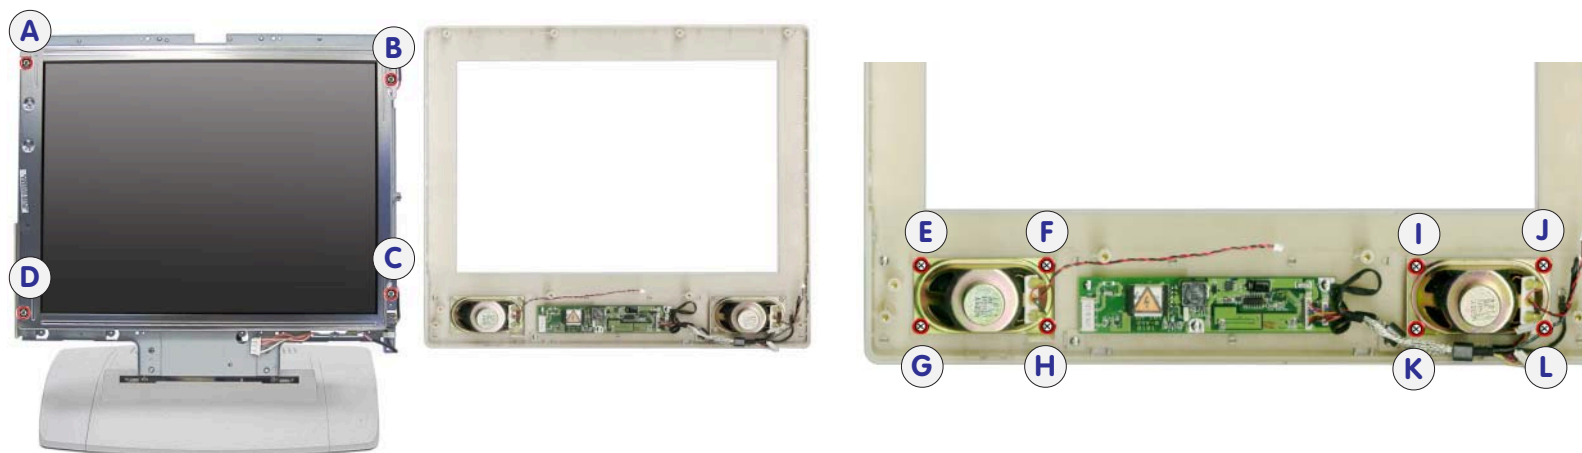

SEPARATING THE  
SPEAKERS FROM THE  
FRONT PANEL  
**FIG. 2-20**



## BASE ASSEMBLY REMOVAL

### Part A

Remove the Back Cover (page 2-4).

Remove the Modem Module (page 2-8).

Remove the I/O Bracket (page 2-13).

### Part B

Separate the Base Assembly from the rest of the system.

A. Disconnect the following 3 cables and 3 ground wires from the System Board.

#### **3 Cables**

**(C1)** The Power Supply to System Board (Connector **CN16**).

**(C2)** The HDD to System Board (from Connector **CN29**)

**(C3)** The USB Board to System Board (from Connector **CN12**)




#### **3 Ground Wires**

**(W1)** A ground wire with the USB Cable fixed to the System Board with a screw.

**(W2)** A ground wire fixed to the Right Speaker with a screw.

**(W3)** A ground wire fixed to the Left Speaker with a screw.

B. Remove 4 screws (**A, B, C & D**).

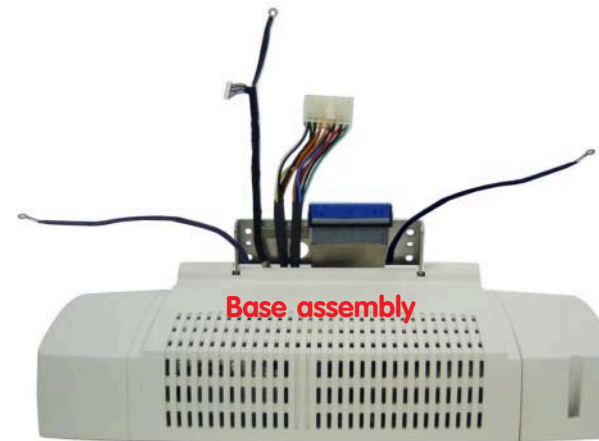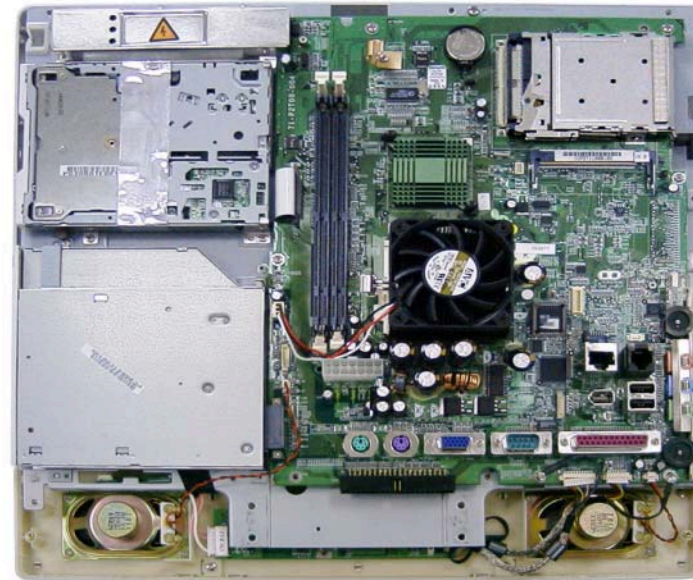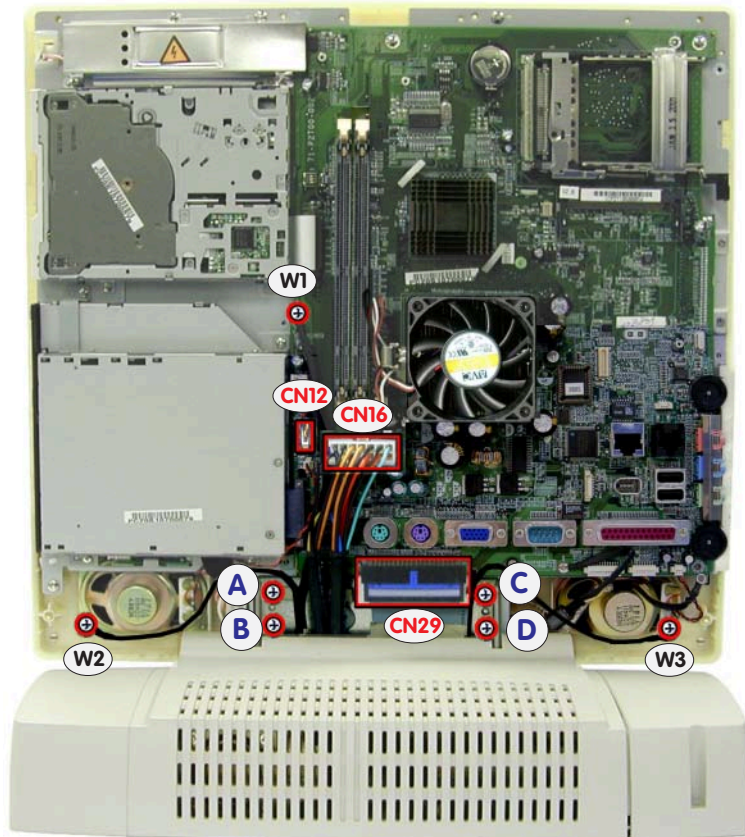

SEPARATING THE BASE ASSEMBLY FROM THE SYSTEM  
FIG. 2-21

## POWER SUPPLY REMOVAL

The Power Supply is in the Base Assembly.

### Part A

Remove the Base Assembly. (pages 2-22 & 2-23)

### Part B


1. Remove the HDD Cartridge.
  - A. Turn the Base Assembly upside down and remove Screw **A**. (Only the LP200ST has this screw.)
  - B. Remove Screw **B** and pull the HDD Cartridge out from its bay until the HDD's connectors are exposed.
  - C. Disconnect the following cables.
    - (C1) The Power Supply to HDD (Power Cable).
    - (C2) The System Board to HDD (HDD Signal Cable).

REMOVING THE HDD  
CARTRIDGE

FIG. 2-22




- Remove the Swivel Stand.
  - Turn the Base Assembly upside down.
  - Remove 4 screws (A, B, C & D).

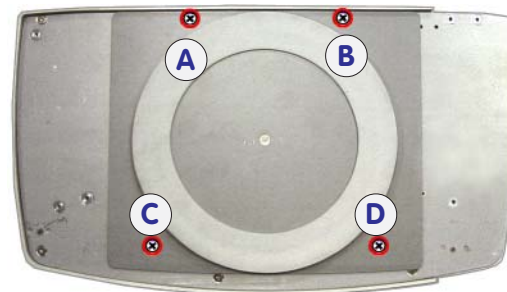


REMOVING THE SWIVEL  
STAND  
FIG. 2-23

- Separate the Top Cover of the Base Assembly from the rest of the Base Assembly by removing 6 screws (A, B, C, D, E & F).

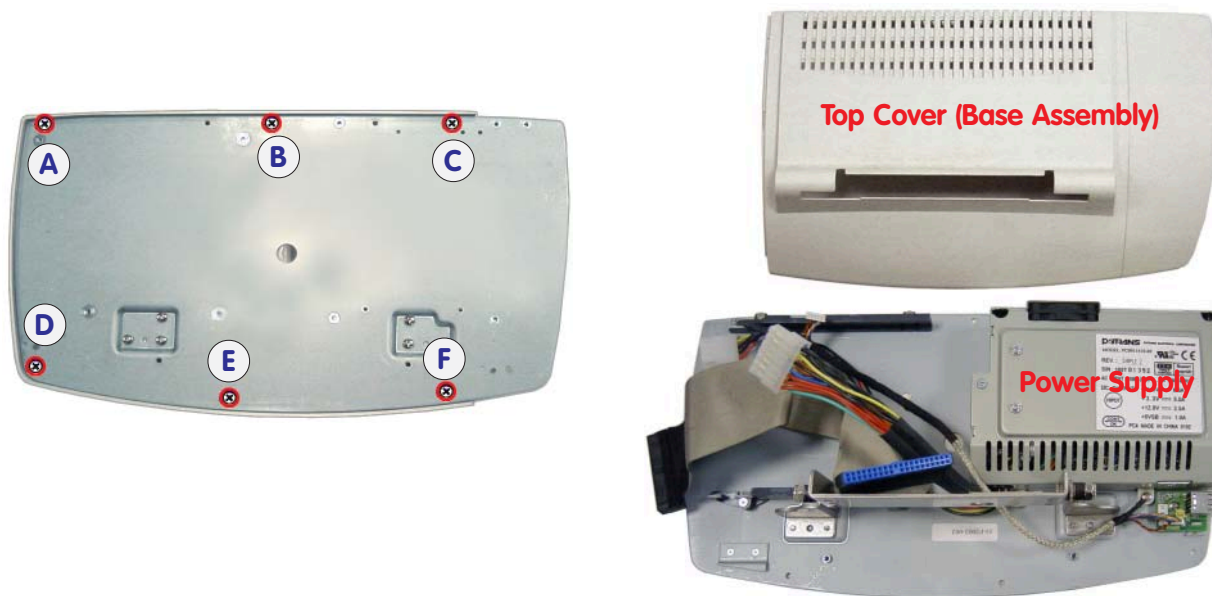


REMOVING THE TOP  
COVER OF THE BASE  
ASSEMBLY  
FIG. 2-24

4. Separate the Power Supply from the rest of the Base Assembly by removing 4 screws (A, B, C & D).

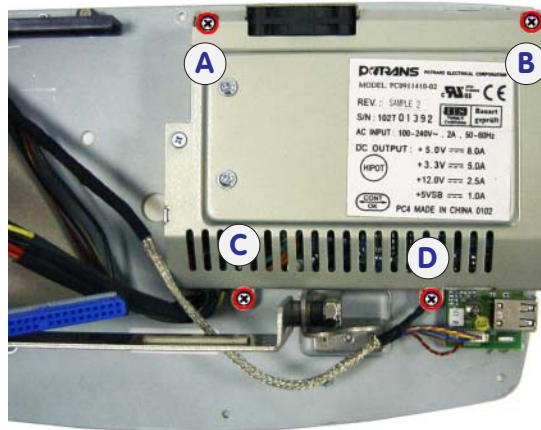

REMOVING THE POWER  
SUPPLY

**FIG. 2-25**

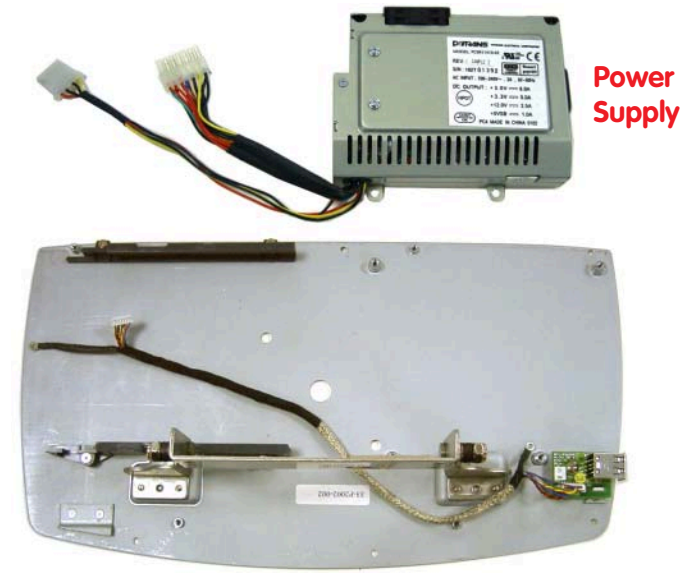

## USB BOARD REMOVAL

The USB Board is in the Base Assembly. (LP200SC only)

### Part A

Remove the Base Assembly. (pages 2-22 & 2-23)

Remove the HDD Cartridge. (Step 1 of Part B of the Power Supply Removal Procedure, page 2-24)


Remove the Swivel Stand. (Step 2 of Part B of the Power Supply Removal Procedure, page 2-25)

Remove the Top Cover of the Base Assembly (Step 3 of Part B of the Power Supply Removal Procedure, page 2-25)

### Part B

Separate the USB Board from the rest of the Base Assembly.

- A. Disconnect the USB Cable from Connector **CN1** on the USB Board.
- B. Remove Screw **A** which secures the board to the Bottom Cover of the Base Assembly.

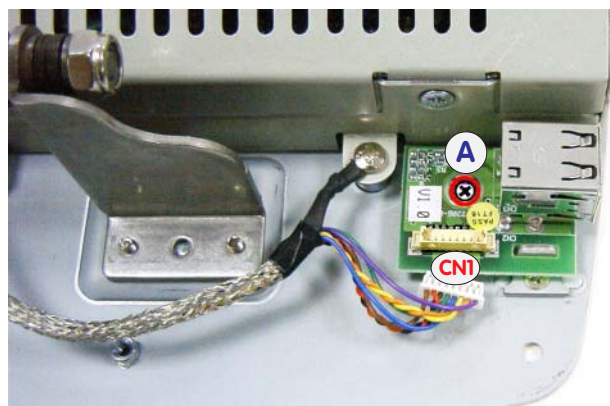

REMOVING THE USB  
BOARD  
**FIG. 2-26**

## HARD DISK DRIVE REMOVAL



The HDD is housed in the Base Assembly.

1. Place the LCD PC with its LCD panel facing up and remove Screw **A**. (Only the LP200ST has this screw.)
2. Remove Screw **B**.

2

REMOVING SCREWS A & B


FIG. 2-27

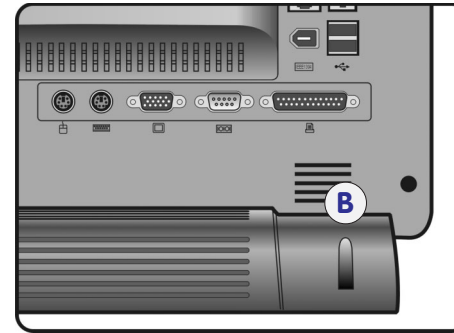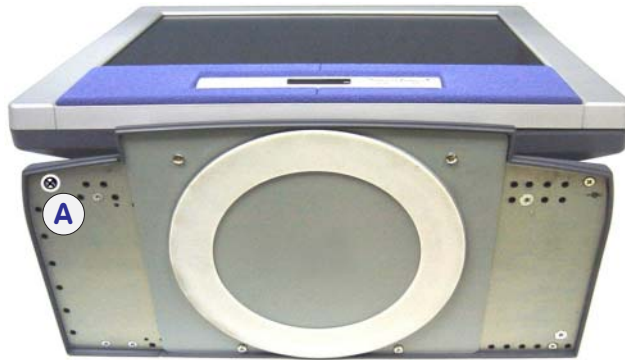


3. Pull the HDD Cartridge out from its bay until the HDD's connectors are exposed.
4. Separate the HDD Cartridge from the rest of the system by disconnecting the HDD's Signal Cable (**A**) and Power Cable (**B**). (Both of these cables are a tight fit.)

PULLING THE HDD  
CARTRIDGE OUT AND  
DISCONNECTING THE HDD  
SIGNAL & POWER CABLES

FIG. 2-28

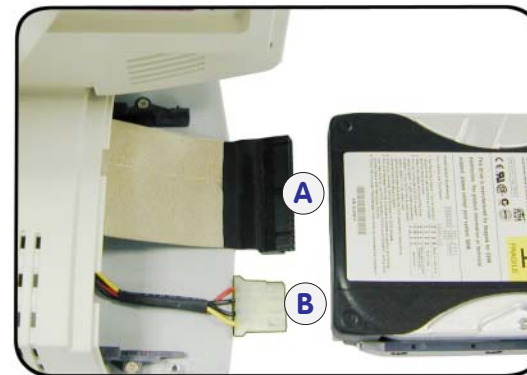


- 4. Turn the cartridge upside down.
- 5. Remove 4 screws (**A, B, C & D**) to separate the HDD Frame from the Cartridge Casing.

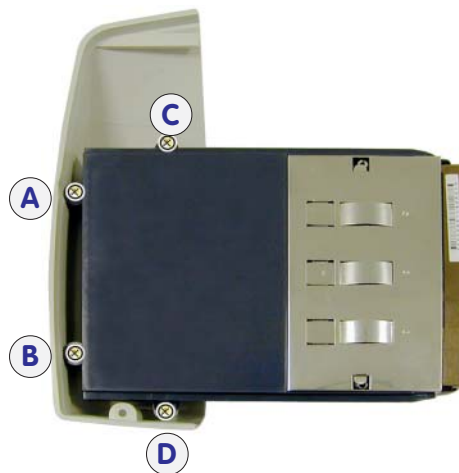

SEPARATING THE HDD  
FRAME FROM THE  
CARTRIDGE CASING  
**FIG. 2-29**

**2**

- 6. Remove 6 screws (**A, B, C, D, E & F**) to separate the HDD from its frame.

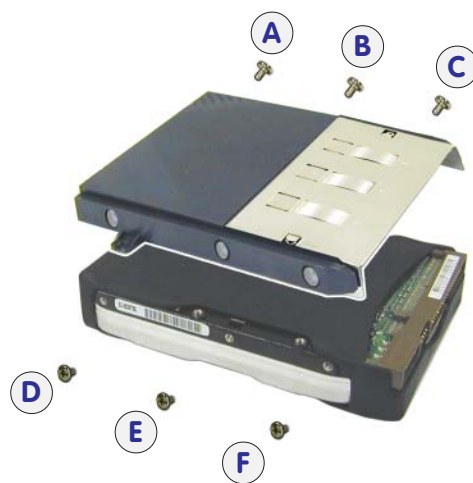

SEPARATING THE HDD  
FROM ITS FRAME  
**FIG. 2-30**



**NOTES:**

2

## **A** PART LISTS


This appendix breaks down the LCD PC's construction into a series of illustrations. The component part numbers are indicated in the tables opposite the drawings. It includes two sets of part lists for the LP200SC and LP200ST respectively.

- Note:** This section indicates the *manufacturer's* part numbers. Your organization may use a different system, so be sure to cross-check any relevant documentation.
- Note:** Be sure to check any update notices. The parts shown in these illustrations are appropriate for the system at the time of publication. Over the product life, some parts may be improved or re-configured, resulting in *new* part numbers.


# LP200SC

**A**

LP200SC FRONT ASSEMBLY (PART I)  
**Fig. A-1**

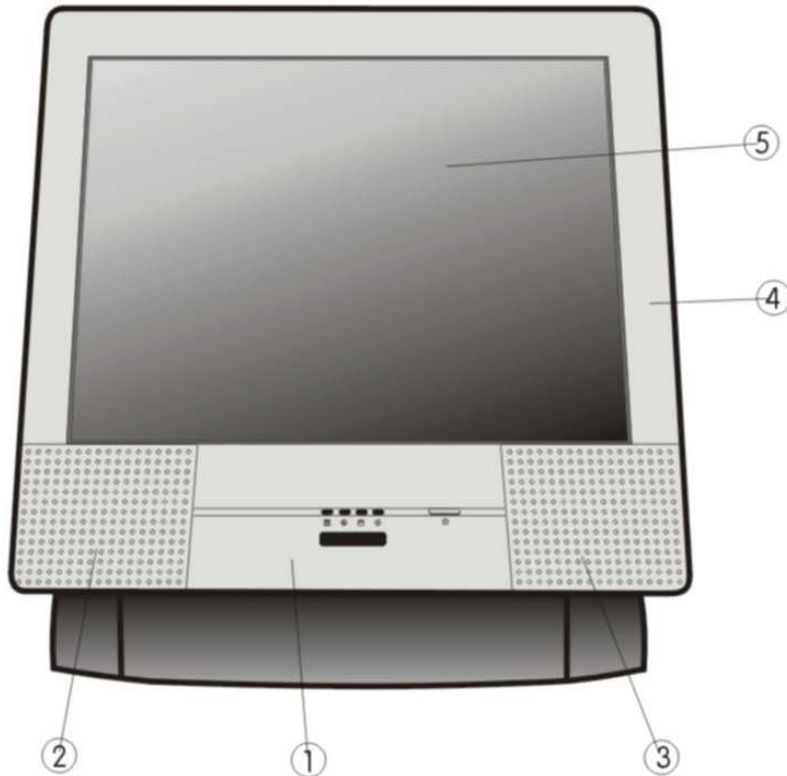

ITEM	PART NAME	PART NO.	QTY	REMARK
01	CONTROL PANEL MODULE (W/O LOGO)	79-P200D-0C1	1	
02	SPEAKER COVER(L) PC/ABS LP200C	39-P2010-001	1	
03	SPEAKER COVER(R) PC/ABS LP200C	39-P2009-001	1	
04	LCD F-CVR MODULE FOR HYU /SHARP LP200C	79-P200D-0AS	1	
05	LCD T SHARP LQ 150X10G51-6E 15" XGA	509-L2215-A01-E	1	

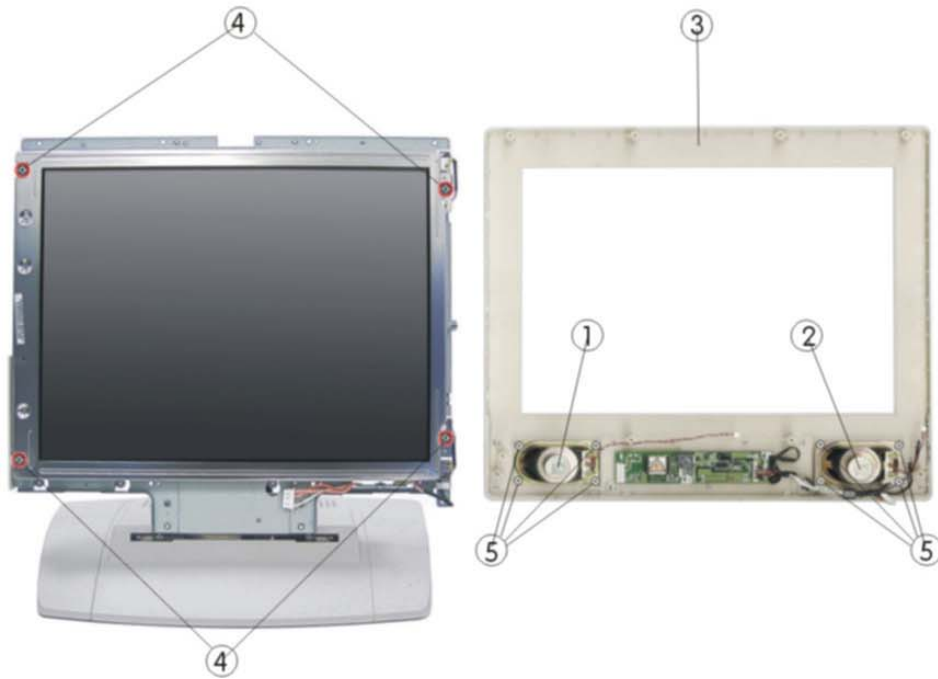

ITEM	PART NAME	PART NO.	QTY	REMARK
01	SPK WITH CABLE(R) 71Wx41Dx28.7H 3W 8n (DSH411-001)	23-5A230-131	1	
02	SPK WITH CABLE(L) 71Wx41Dx28.7H 3W 8n (DSH411-002)	23-5A230-600	1	
03	LCD F-CVR MODULE FOR HYU./SHARP LP200C	79-P200D-0A5	1	
04	SCREW M3x10L PNI ICT NY	35-01130-100	4	
05	SCREW M3x4L KI NI ICT	35-B1130-4RB	8	


LP200SC FRONT ASSEMBLY (PART II)

**Fig. A-2**




**A**

LP200SC FRONT ASSEMBLY (PART III)  
**Fig. A-3**

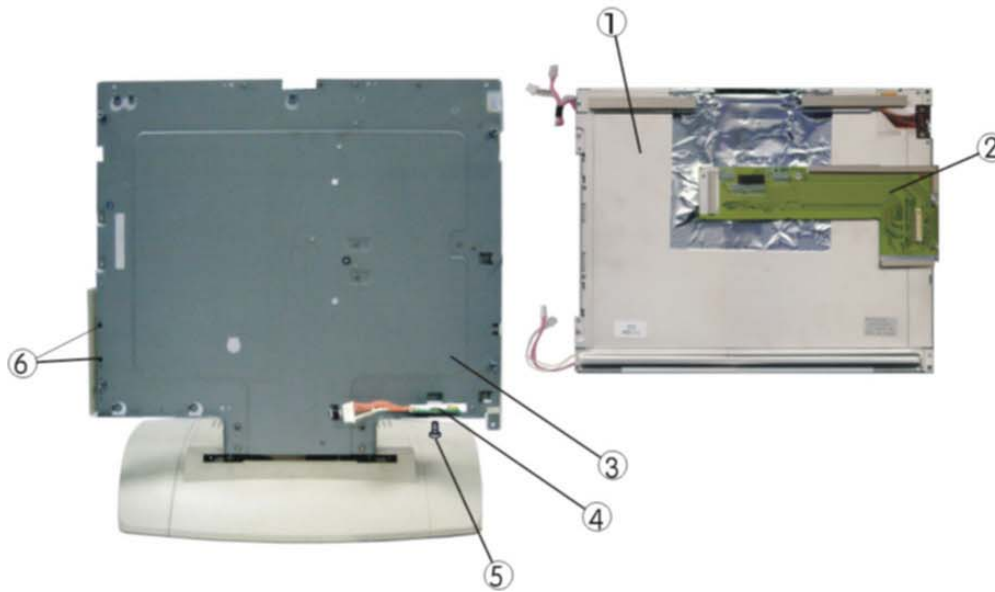

ITEM	PART NAME	PART NO.	Q'TY	REMARK
01	LCD T SHARP LQ150wDG51 15" (EPSON 専用 )	509-L2215-A01-E	1	
02	LCD CONVERTER BOARD FOR SHARP V3.0 LP200SC	77-P2T02-003	1	
03	BRACKET ASS'Y FOR SHARP 150 LP200C	79-P2C01-004	1	
04	CONVERTER BOARD FOR SHARP V4.0 LP200	77-P2204-024	1	
05	SCREW M2.5x4L B NI ICT NY	35-41125-4RA	1	
06	M2xGL KI BZ ICT NY	35-B6120-3R0	2	

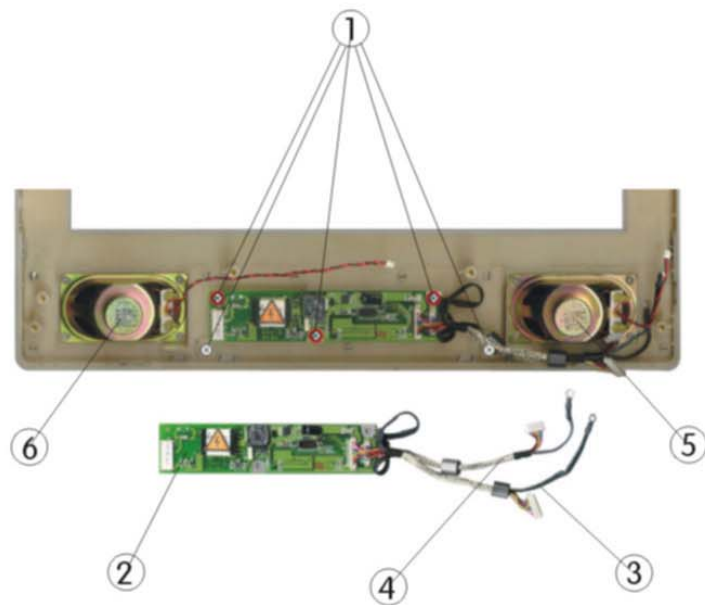

LP200SC FRONT ASSEMBLY (PART IV)

**Fig. A-4**




ITEM	PART NAME	PART NO.	QTY	REMARK
01	SCREW M2.5x5L KI NI ICT	35-41125-5R0	5	
02	INVERTER+LED BOARD FOR HYU/SHARP V7A	77-P2C14-002	1	
03	WIRE CABLE FOR LED SIGNAL 12P V2.0 LP200 ST	43-P2T0F-021	1	
04	WIRE CABLE FOR LED POWER 8P V2.0 LP200 ST	43-P2T0F-012	1	
05	SPK. WITH CABLE (L) 71Wx41Dx28.7H 3W 8Ω (DSH 411-002)	23-5A230-600	1	
06	SPK. WITH CABLE (R) 71Wx41Dx28.7H 3W 8Ω (DSH 411-002)	23-5A230-131	1	


**A**

LP200SC BACK ASSEMBLY (PART I)

**Fig. A-5**

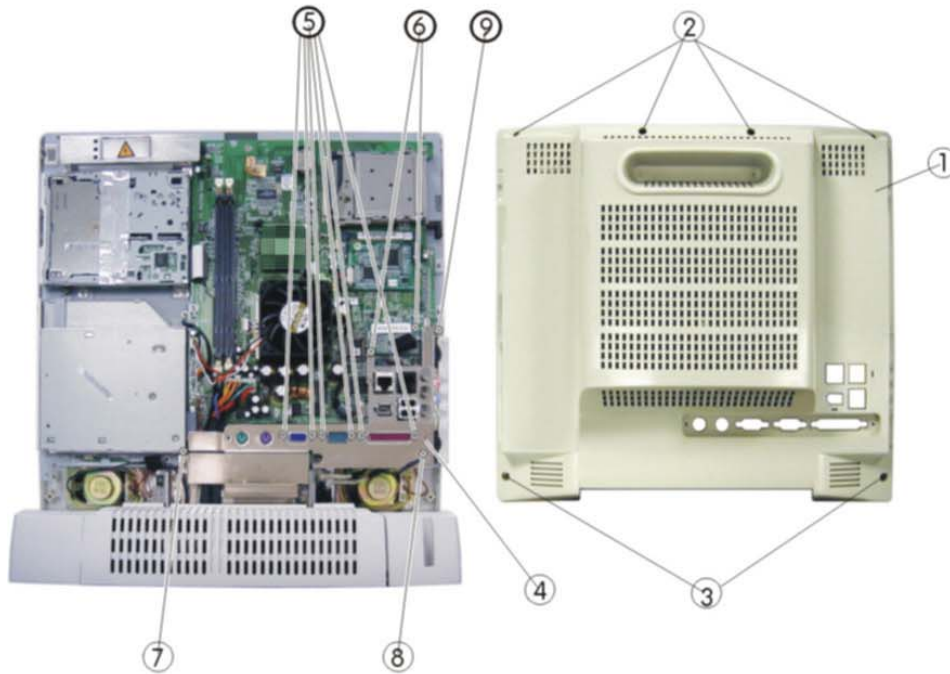

ITEM	PART NAME	PART NO.	QTY	REMARK
01	BACK COVER MODULE LP200SC (EPSON)	42-P2C7B-024	1	
02	M3x6Lx0.5P BIND HEAD NI-PL	35-41130-6R0	4	
03	SCREW M3x6L F NI ICT NY	35-41130-6R0	2	
04	I/O BRACKET MODULE LP200S (ADD GASKET)	33-P2T06-010	1	
05	HEX STUD SUM22 NIPL 10mm	34-96002-000	6	
06	M2x3L K1 BI ICT	35-B6120-3RD	2	
07	SCREW M2.5x6L B NI ICT	35-41125-6RA	1	
08	SCREW M2.5x12L K1 NI ICT NY	35-B1125-120	1	
09	SCREW M2.5x0.45Px4L K1 NI ICT NY	35-B1125-4R0	1	

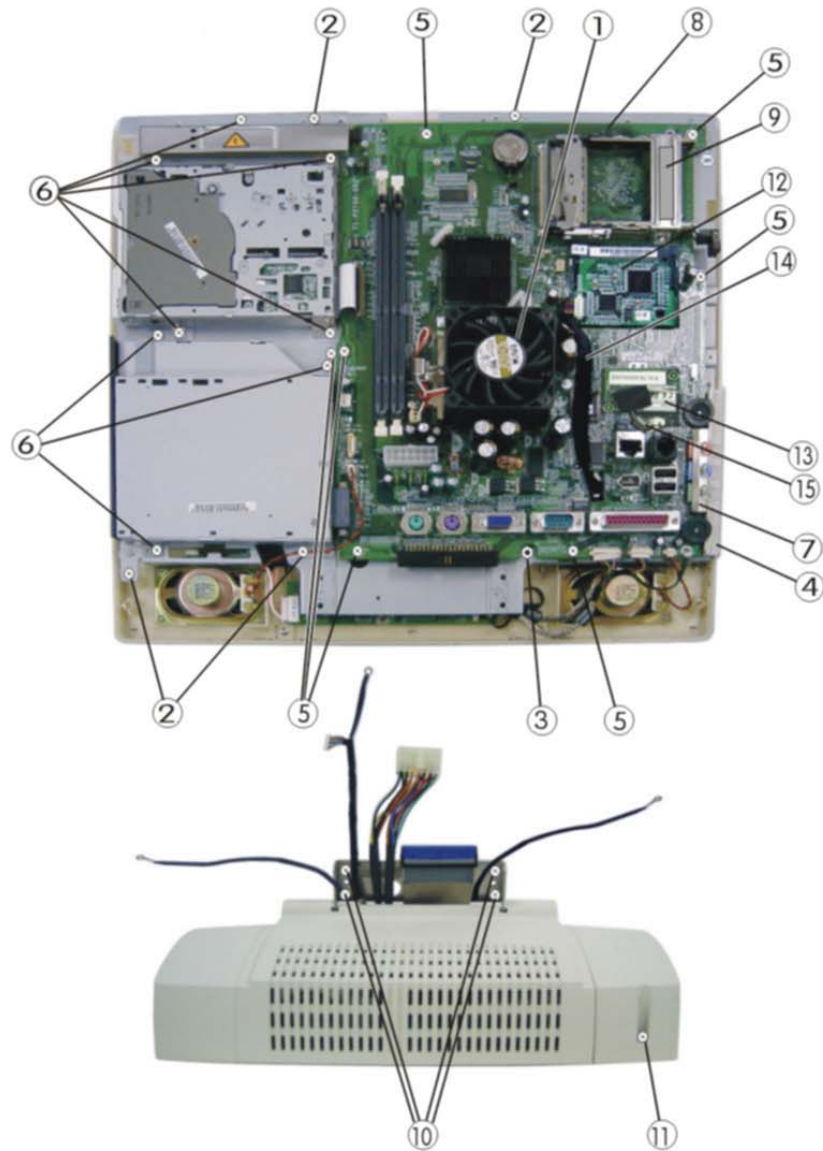

LP200SC BACK ASSEMBLY (PART II)

**Fig. A-6**




ITEM	PART NAME	PART NO.	QTY	REMARK
01	HEAT SINK W/FAN (AD0512LB0-G70) LP200C	33-P2214-002	1	
02	M3x6Lx0.5P BIND HEAD NI-PL	35-41130-6R0	4	
03	HEX STUD NI-PL F FOR GROUNDING, CU LP200	34-P2203-000	1	
04	AUDIO COVER,PC/ABS LP200C	39-P2005-000	1	
05	M2.5x6L B NI ICT NY	35-41125-6R0	5	
06	M2.5x3L K3 NI ICT NY	35-41125-4RA	8	
07	AUDIO GROUNDING PLATE, 鍍青銅 LP2000	33-P2209-000	1	
08	MAIN BOARD LP200C (W/O 1394,PE 133)	77-P2T00-005	1	
09	CONDUCTIVE GASKET (L48xW9xH3.5mm) LP200	47-P2202-200	1	
10	M4x6L B NI ICT NY	35-41140-6RA	4	
11	M3x6L B NI ICT	35-41130-6R0	1	
12	MINI PCI CARD FOR 1394	77-P2205-001A	1	
13	MDC MODEM	76-32200-002	1	
14	WIRE CABLE FOR MINI PCI IEEE-1394	43-P2T01-002	1	
15	WIRE CABLE FOR MDC MODEM	43-P2T02-001	1	




**A**

LP200SC BACK ASSEMBLY (PART III)  
**Fig. A-7**

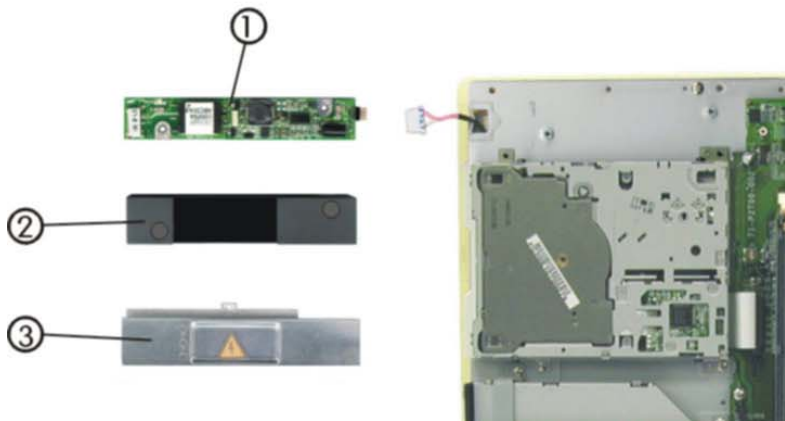

ITEM	PART NAME	PART NO.	QTY	REMARK
01	INVERTER BOARD FOR SHARP V6.0 LP200	77-P2202-026	1	
02	INVERTER MYLAR,PC LP200	40-P2202-002	1	
03	INVERTER SHIELDING PLATE LP200ST	33-P2T02-002	1	

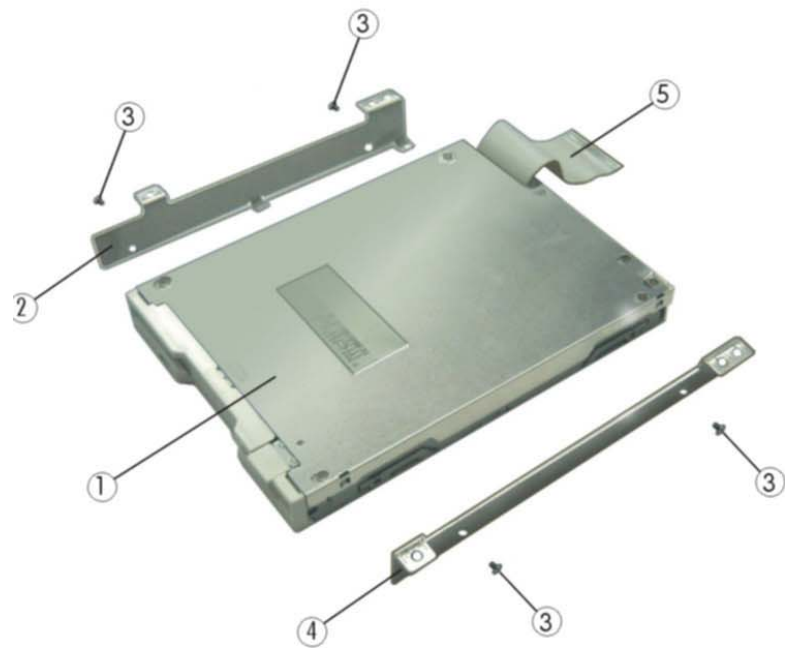


LP200SC FDD  
MODULE  
**Fig. A-8**



ITEM	PART NAME	PART NO.	Q'TY	REMARK
01	FDD 3.5" 1.44 MB 12.7mm YD-702J-6637J	85-11700-Y05	1	
02	FDD BRACKET (R),SUS LP2000	33-P2204-001	1	
03	SCREW M2.5*3L PBZ ICT NY	35-06125-3R0	4	
04	FDD BRACKET (L),SUS LP2000	33-P2205-000	1	
05	FFC CABLE FOR FDD V1.0 P22	43-P2212-001	1	

**A**

LP200SC CD Device  
MODULE  
Fig. A-9

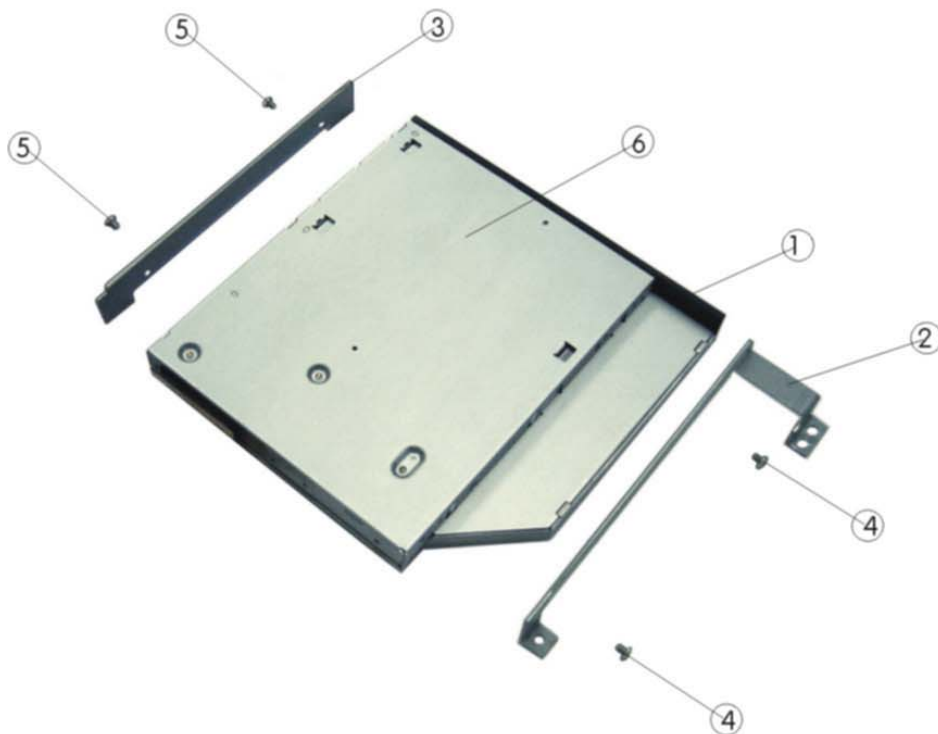

**CD-ROM**


ITEM	PART NAME	PART NO.	QTY	REMARK
01	TEAC CD-ROM BEZEL MODULE	39-P207Z-010	1	
02	CD-ROM BRACKET(R).SECC LP200ST	33-P2T0Z-010	1	
03	CD-ROM BRACKET(L).SECC LP200ST	33-P2T01-001	1	
04	SCREW M2.0*3L F NI ICT NY	35-21120-3RA	2	
05	SCREW M2*3.5L F BNI ICT NY (Dd = φ 3.2)	35-21120-35B	2	
06	CD-ROM 5 1/4" 24X CD-224E-B20 12.7mm	85-6070X-706	1	

**CD-R/W**

ITEM	PART NAME	PART NO.	QTY	REMARK
01	CD-ROM BEZEL MODULE KME 8X	42-P207W-020	1	
02	CD-ROM BRACKET(R).SECC LP200ST	33-P2T0Z-010	1	
03	CD-ROM BRACKET(L).SECC LP200ST	33-P2T01-001	1	
04	SCREW M2.0*3L F NI ICT NY	35-21120-3RA	2	
05	SCREW M2*3.5L F BNI ICT NY (Dd = φ 3.2)	35-21120-35B	2	
06	CD-R/W 5 1/4" 8X UJDA330CL-Z 12.7mm	85-8078X-K00	1	

**DVD**

ITEM	PART NAME	PART NO.	QTY	REMARK
01	CD-ROM BEZEL (WHITE) LP200C	39-P2014-000	1	
02	CD-ROM BRACKET(R).SECC LP200ST	33-P2T0Z-010	1	
03	CD-ROM BRACKET(L).SECC LP200ST	33-P2T01-001	1	
04	SCREW M2.0*3L F NI ICT NY	35-21120-3RA	2	
05	SCREW M2*3.5L F BNI ICT NY (Dd = φ 3.2)	35-21120-35B	2	
06	DVD 5 1/4" 8X 12.7mm CD-S200 HITACHI	985-7078X-501-E	1	

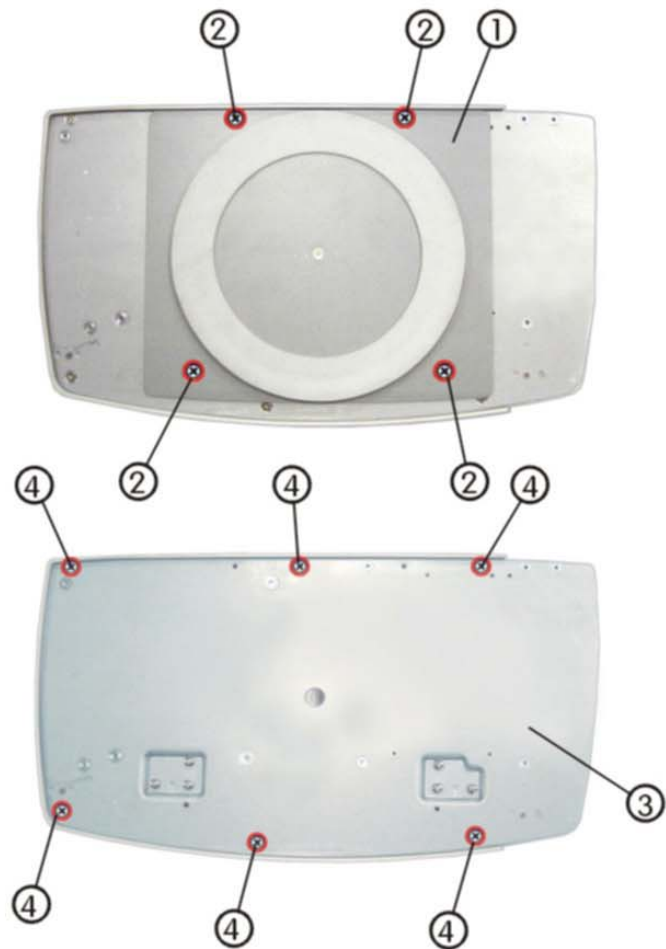

ITEM	PART NAME	PART NO.	QTY	REMARK
01	STAND MODULE LP200	79-P220E-012	1	
02	M3x6L KI NI ICT NY	35-41130-6R0	4	
03	BASE BRACKET,SECC LP200C	33-P2002-002	1	
04	M3x6L F NI ICT NY	35-21130-6R0	6	

LP200SC BASE ASSEMBLY (PART I)


**Fig. A-10**



**A**


LP200SC BASE  
ASSEMBLY (PART II)

**FIG. A-11**

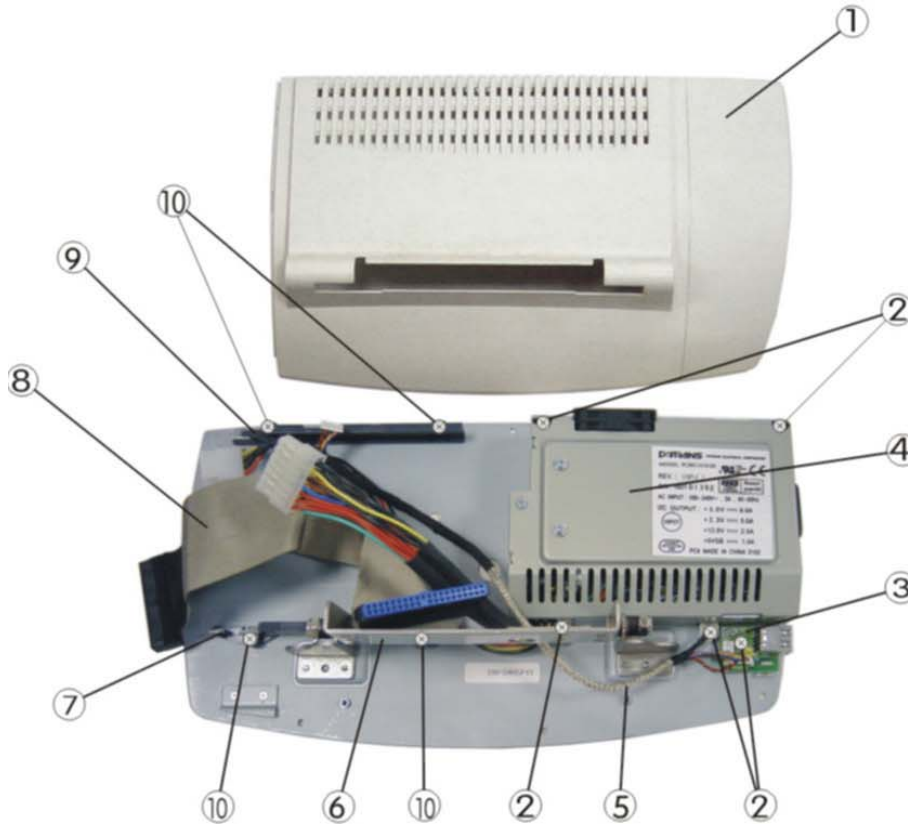

ITEM	PART NAME	PART NO.	QTY	REMARK
01	BASE COVER+BRACKET MODULE LP200C	39-P2003-010	1	
02	M3 x 6L B NI ICT	35-41130-6R0	5	
03	EXT. USB BOARD V1.0 LP200	77-P2206-001	1	
04	POWER SUPPLY 91.5W/LSE9915D05(200S)	51-P2T03-011	1	
05	EXT. USB CABLE V1.0 LP200ST	43-P2T0C-000	1	
06	HINGE ASS'Y,SUS LP200	79-P220Y-013	1	
07	HDD HOLDER (B) PC/ABS LP200	39-P2213-001	1	
08	FLAT CABLE FOR HDD 40P V2.0 LP200	43-P2211-003	1	
09	HDD HOLDER (A) PC/ABS LP200	39-P2212-001	1	
10	M3 x 6L K1 NI ICT NY	35-B1130-6RA	4	

**A**

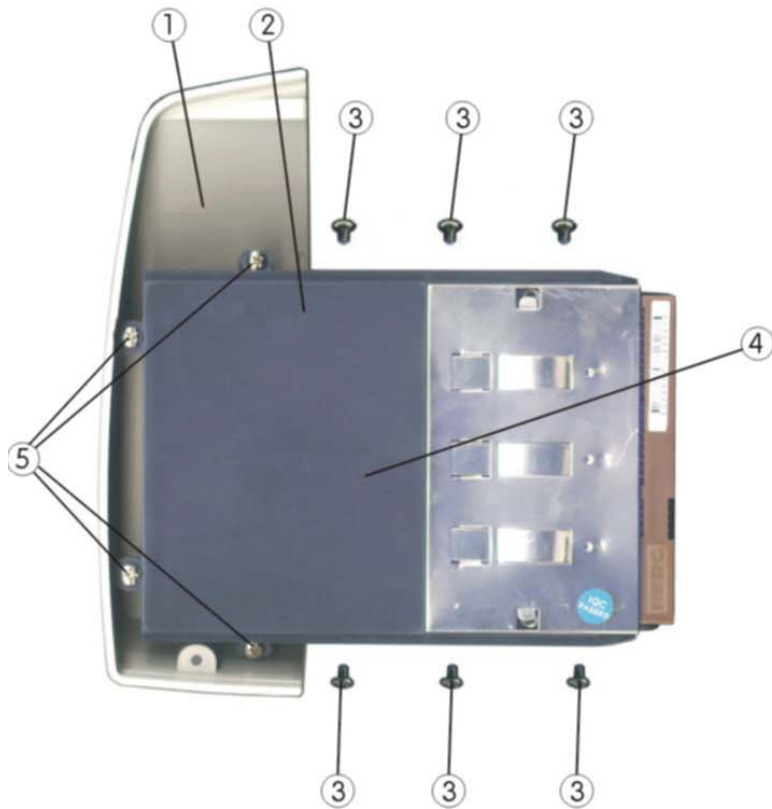

ITEM	PART NAME	PART NO.	Q'TY	REMARK
01	HDD COVER,PC/ABS LP200C	39-P2004-001	1	
02	HDD HOLDER,PC/ABS LP200	39-P2211-001	1	
03	SCREW # 6-32x5L BNI ACT	35-41306-5R0	6	
04	HDD 3.5" 30GB QUANTUM (EPSON)	985-016U0-Q00-E	1	
	HDD 3.5" 30 6GB SAMSUNG (EPSON)	985-01630-S00-E	1	
05	M3x6Lx0.5P BIND HEAD NI-PL	35-41130-6R0	4	
06	HDD SHIELDING COVER	47-P2C71-020	1	


LP200SC HDD  
MODULE  
**Fig. A-12**

# LP200ST


**A**

LP200ST FRONT  
ASSEMBLY (PART I)

**FIG. A-13**

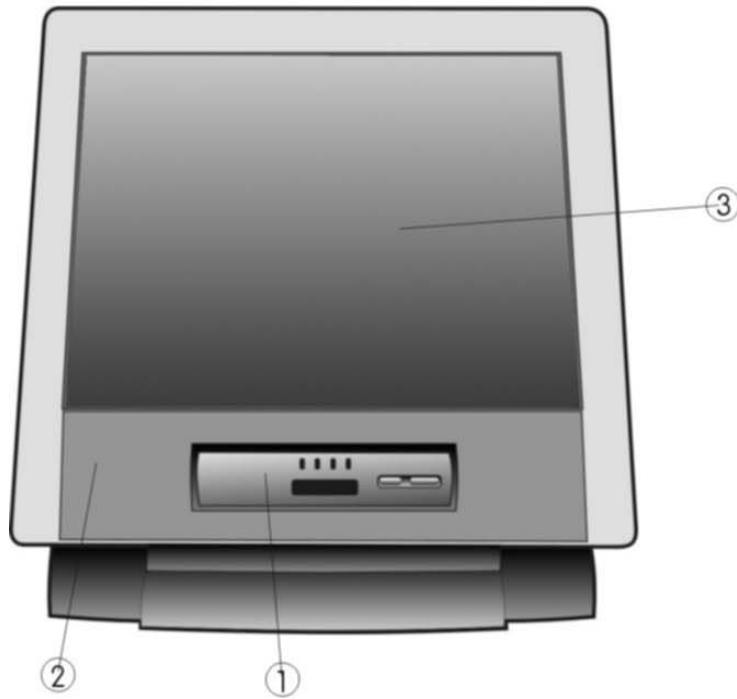

ITEM	PART NAME	PART NO.	QTY	REMARK
01	LCD F-CVR MODULE FOR HYU. LP200	79-P220D-0A3	1	
02	SPEAKER COVER ASS'Y LP200	79-P2200-021	1	
03	LCD 15.0" T HTUNDAI HT15x11-200	50-L22H2-H01	1	

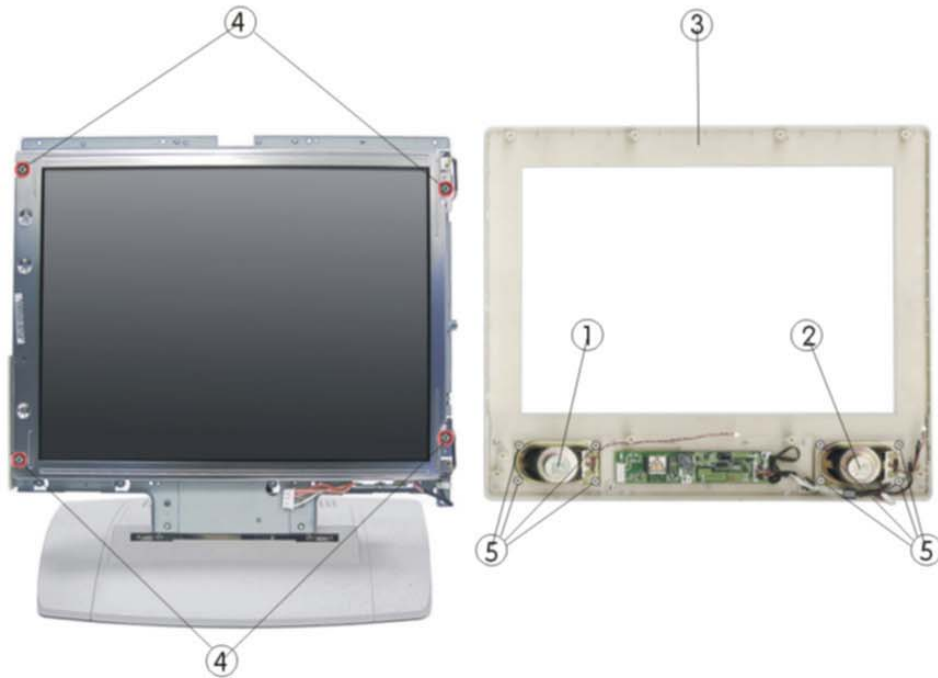

ITEM	PART NAME	PART NO.	QTY	REMARK
01	SPK WITH CABLE(R) 71Wx41Dx28.7H 3W 8Ω(DSH411-001)	23-5A230-131	1	
02	SPK WITH CABLE(L) 71Wx41Dx28.7H 3W 8Ω(DSH411-002)	23-5A230-600	1	
03	LCD F-CVR MODULE FOR HYU.	79-F220D-0A3	1	
04	SCREW M3x6Lx0.5P BIND HEAD NI-PL	35-41130-6R0	4	
05	SCREW M3x4L K3 NI ICT	35-B1130-4RB	8	

LP200ST FRONT ASSEMBLY (PART II)


**Fig. A-14**






**A**

LP200ST FRONT ASSEMBLY (PART III)  
**FIG. A-15**

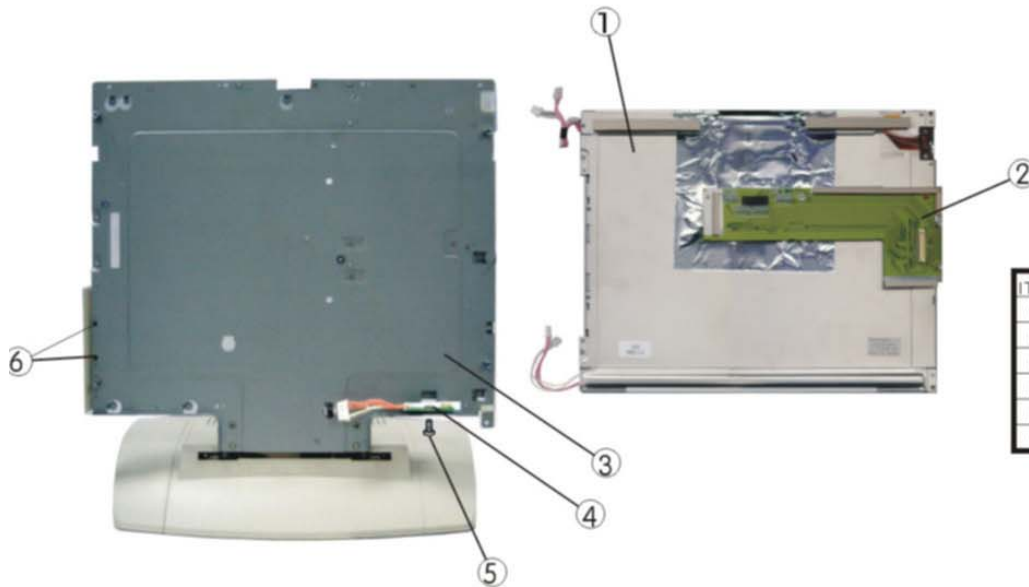

ITEM	PART NAME	PART NO.	QTY	REMARK
01	LCD T HYU(HT15x1)15"	50-L22H2-H01	1	
02	LCD CONVERTER BOARD FOR 11	77-P2T03-002	1	
03	LCD BRACKET FOR HYU15.0'	33-P2T03-002	1	
04	CONVERTER BOARD FOR SHARP V4.0 LP200	77-P2204-024	1	
05	SCREW M2.5x4L B NI ICT NY	35-41125-4RA	1	
06	M2x3L KI BZ ICT NY	35-B6120-3R0	2	

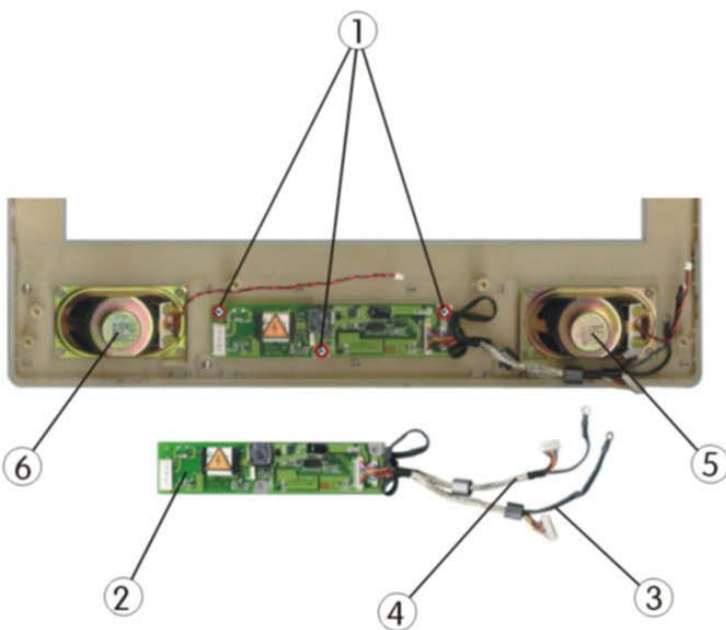

ITEM	PART NAME	PART NO.	QTY	REMARK
01	SCREW M2.5x5L KI NI ICT	35-41125-5R0	3	
02	INVERTER+LED BOARD FOR HYU.	77-P2T14-002	1	
03	WMRE CABLE FOR LED SIGNAL 12P V2.0 LP200ST	43-P2T0F-021	1	
04	WMRE CABLE FOR LED POWER 8P V2.0 LP200ST	43-P2T0F-012	1	
05	SPK WTH CABLE (L) 71Wx41Dx28.7H 3W8Ω (DSH411-002)	23-5A230-600	1	
06	SPK WTH CABLE (R) 71Wx41Dx28.7H 3W8Ω (DSH411-001)	23-5A230-131	1	


LP200ST FRONT ASSEMBLY (PART IV)

**FIG. A-16**




**A**

LP200ST BACK ASSEMBLY (PART I)  
**FIG. A-17**

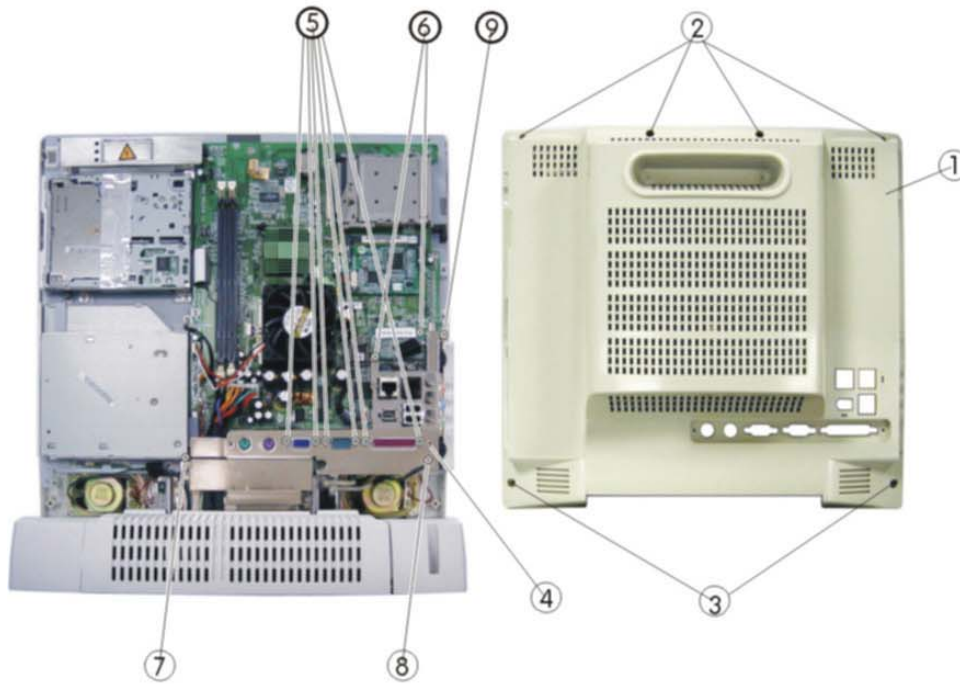

ITEM	PART NAME	PART NO.	QTY	REMARK
01	BACK COVER MODULE LP200SC LP200ST/SE	42-P2T7B-016	1	
02	M3x6Lx0.5P BIND HEAD NI-PL	35-41130-6R0	4	
03	SCREW M3x6L F NI ICT NY	35-41130-6R0	2	
04	I/O BRACKET MODULE LP200S (ADD GASKET)	33-P2T06-010	1	
05	HEX STUD SUM22 NIPL 10mm	34-96002-000	6	
06	M2x3L KI BI ICT	35-B6120-3R0	2	
07	SCREW M2.5x6L B NI ICT	35-41125-6RA	1	
08	SCREW M2.5x12L KI NI ICT NY	35-B1125-120	1	
09	SCREW M2.5x0.45Px4L KI NI ICT NY	35-B1125-4R0	1	

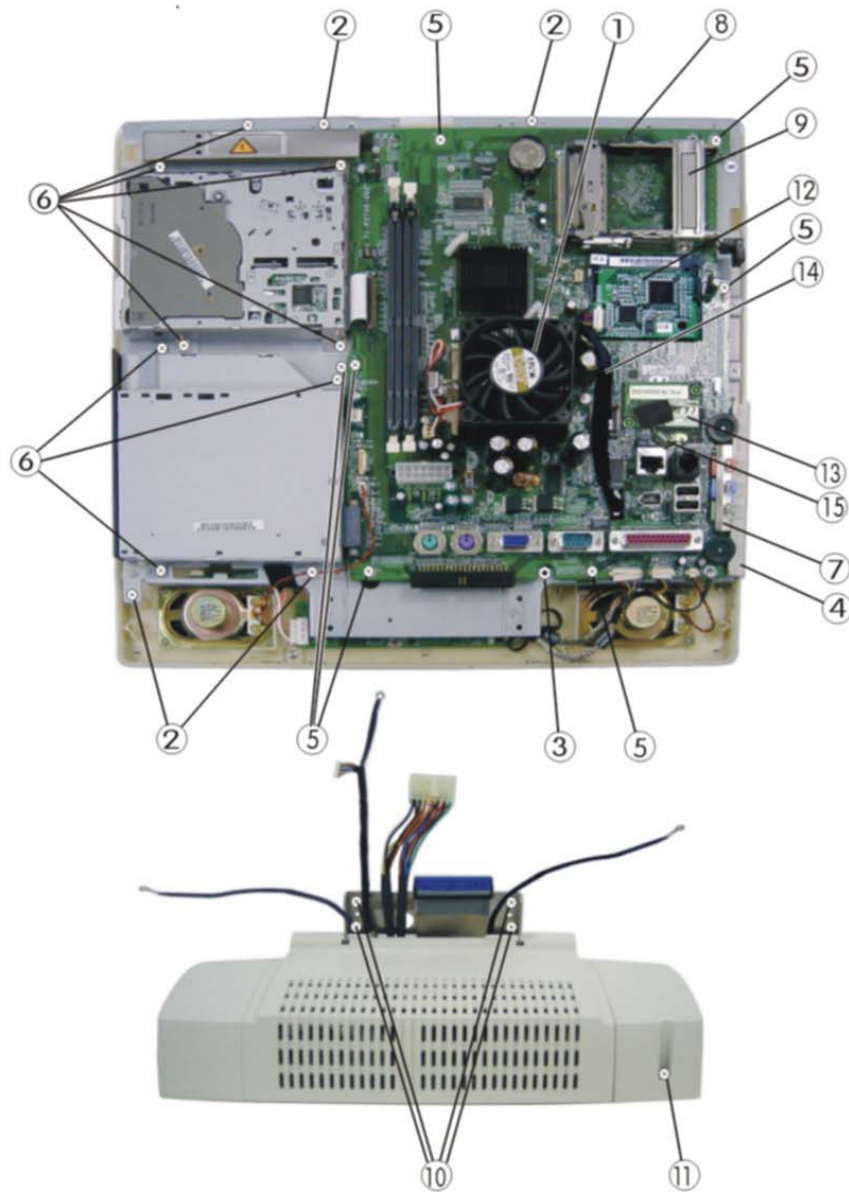

LP200ST BACK ASSEMBLY (PART II)


Fig. A-18




ITEM	PART NAME	PART NO.	QTY	REMARK
01	HEAT SINK W/FAN (AD0512LB0-G70) LP200C	33-P2214-002	1	
02	M3x6Lx0.5P BIND HEAD NI-PL	35-41130-6R0	4	
03	HEX STUD NI-PL FOR GROUNDING, CU LP200	34-P2203-000	1	
04	AUDIO COVER,PC/ABS LP200C	39-P2005-000	1	
05	M2.5x6L B NI ICT NY	35-41125-6R0	5	
06	M2.5x3L KI NI ICT NY	35-41125-4RA	8	
07	AUDIO GROUDING PLATE, 鍍青銅 LP2000	33-P2209-000	1	
08	MAIN BOARD LP200C (W/O 1394,PE 133)	77-P2T00-005	1	
09	CONDUCTIVE GASKET (L48xW9xH3.5)mm LP200	47-P2202-200	1	
10	M4x6L B NI ICT NY	35-41140-6RA	4	
11	M3x6L B NI ICT	35-41130-6R0	1	
12	MINI PCI CARD FOR 1394	77-P2205-001A	1	
13	MDC MODEM	76-32200-002	1	
14	WIRE CABLE FOR MINI PCI IEEE-1394	43-P2T01-002	1	
15	WIRE CABLE FOR MDC MODEM	43-P2T02-001	1	

**A**

LP200ST BACK ASSEMBLY (PART III)  
**FIG. A-19**

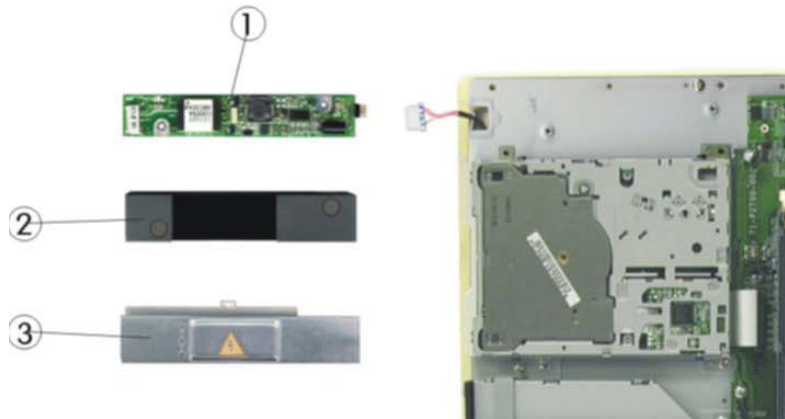

ITEM	PART NAME	PART NO.	QTY	REMARK
01	INVERTER BOARD FOR SHARP V6.0 LP200	77-P2202-026	1	
02	INVERTER MYLAR_PC LP200	40-P2202-002	1	
03	INVERTER SHIELDING PLATE LP200ST	33-P2T02-002	1	

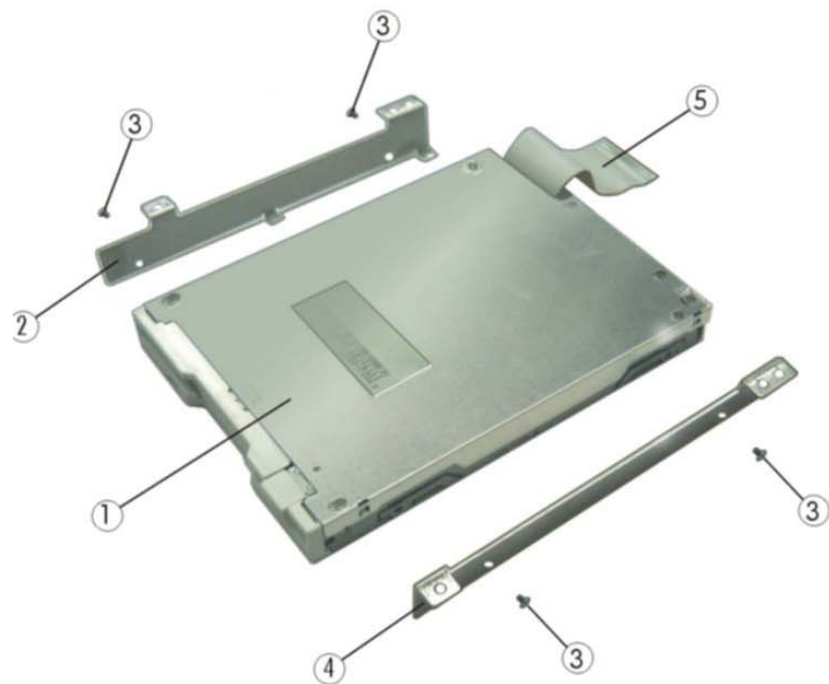


ITEM	PART NAME	PART NO.	Q'TY	REMARK
01	FDD 3.5" 1.44 MB 12.7mm YD-702J-6637J	85-11700-Y05	1	
02	FDD BRACKET (R),SUS LP2000	33-P2204-001	1	
03	SCREW M2.5*3L.PBZ ICT NY	35-06125-3R0	4	
04	FDD BRACKET (L),SUS LP2000	33-P2205-000	1	
05	FFC CABLE FOR FDD V1 0 P22	43-P2212-001	1	

LP200ST FDD  
MODULE  
**FIG. A-20**



**A**

LP200ST CD DEVICE  
MODULE  
FIG. A-21

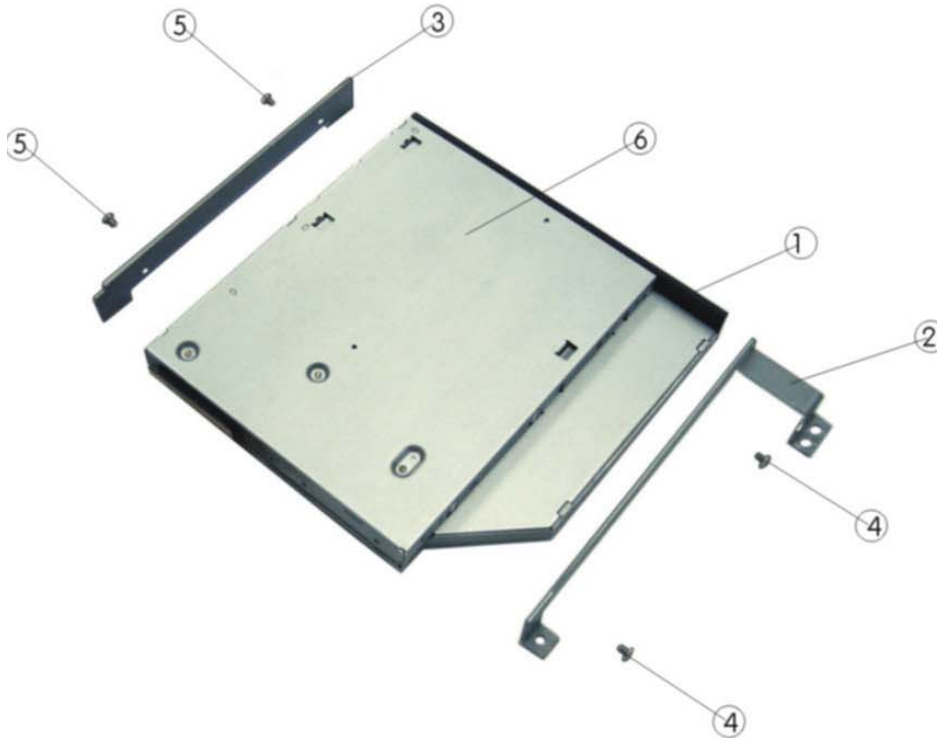

**CD-ROM**

ITEM	PART NAME	PART NO.	QTY	REMARK
01	CD-ROM BEZEL MODULE	79-P2202-010	1	
02	CD-ROM BRACKET (R), SECC LP200ST	33-P2T0Z-010	1	
03	CD-ROM BRACKET (L), SECC LP200ST	33-P2T01-001	1	
04	SCREW M2.0*3L F NI ICT NY	35-21120-3RA	2	
05	SCREW M2*3.5L F BNI ICT NY (Dd = φ 3.2)	35-21120-35B	2	
06	CD-ROM+W/O BEZEL 5 1/4" 24X CR-176-D	85-6070X-P01	1	

**CD-R/W**

ITEM	PART NAME	PART NO.	QTY	REMARK
01	CD-ROM BEZEL MODULE KME 8X	42-P207W-020	1	
02	CD-ROM BRACKET (R), SECC LP200ST	33-P2T0Z-010	1	
03	CD-ROM BRACKET (L), SECC LP200ST	33-P2T01-001	1	
04	SCREW M2.0*3L F NI ICT NY	35-21120-3RA	2	
05	SCREW M2*3.5L F BNI ICT NY (Dd = φ 3.2)	35-21120-35B	2	
06	CD-R/W 5 1/4" 8X UJDA330CL-Z 12.7mm	85-8078X-K00	1	

**DVD**

ITEM	PART NAME	PART NO.	QTY	REMARK
01	DVD BEZEL	39-P227V-023	1	
02	CD-ROM BRACKET (R), SECC LP200ST	33-P2T0Z-010	1	
03	CD-ROM BRACKET (L), SECC LP200ST	33-P2T01-001	1	
04	SCREW M2.0*3L F NI ICT NY	35-21120-3RA	2	
05	SCREW M2*3.5L F BNI ICT NY (Dd = φ 3.2)	35-21120-35B	2	
06	DVD 5 1/4" 8X 12.7mm CD-S200 HITACHI	85-7078X-T02	1	



ITEM	PART NAME	PART NO.	Q'TY	REMARK
01	STAND MODULE LP200	79-P220E-013	1	
02	M3x6L KI NI ICT NY	35-B1130-6RA	4	
03	BASE BRACKET,SECC LP200T	33-P2202-002	1	
04	M3x6L F NI ICT NY	35-21130-6RA	6	


LP200ST BASE  
ASSEMBLY (PART I)  
**Fig. A-22**





**A**


LP200ST BASE ASSEMBLY (PART II)  
**FIG. A-23**

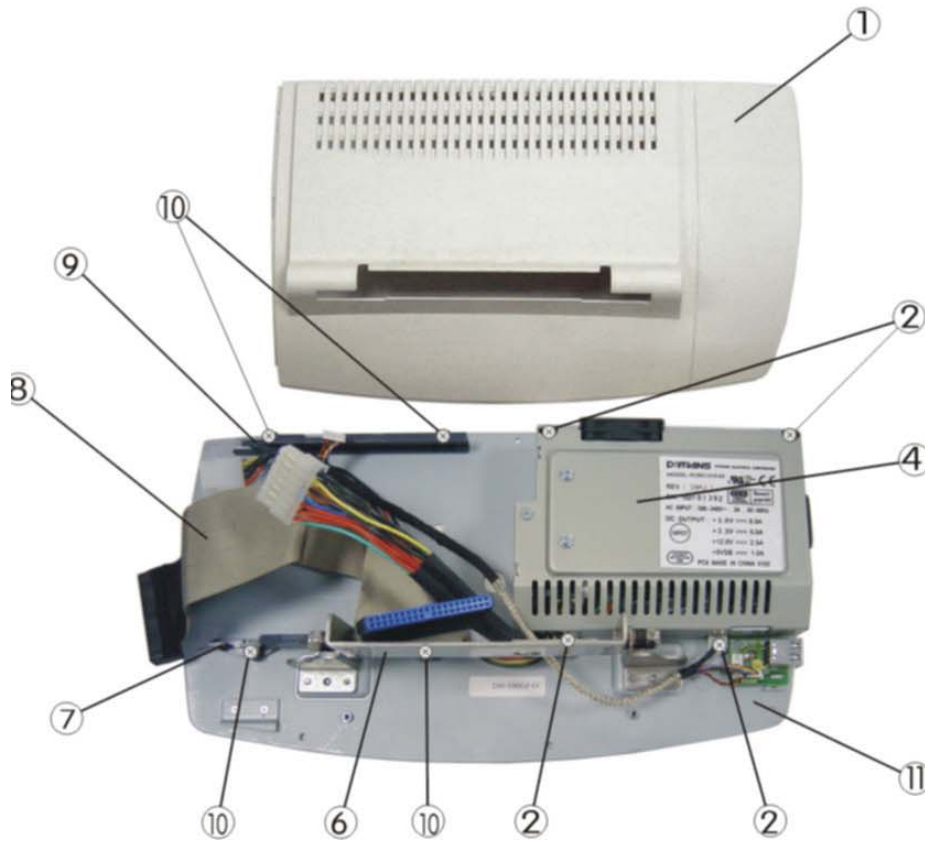

ITEM	PART NAME	PART NO.	QTY	REMARK
01	BASE COVER (ST)	39-P2203-001	1	
02	M3 x 6L B NI ICT	35-41130-6R0	4	
04	POWER SUPPLE 91.5W/LSE9915D05(200S)	51-P2T03-011	1	
06	HINGE ASS'Y,SUS LP200	79-P220Y-013	1	
07	HDD HOLDER (B),PC/ABS LP200	39-P2213-001	1	
08	FLAT CABLE FOR HDD 40P V2.0 LP200	43-P2211-003	1	
09	HDD HOLDER (A),PC/ABS LP200	39-P2212-001	1	
10	M3 x 6L KI NI ICT NY	35-B1130-6RA	4	
11	BASE BRACKET (ST)	33-P2202-002	1	

**A**

LP200ST HDD  
MODULE  
**Fig. A-24**

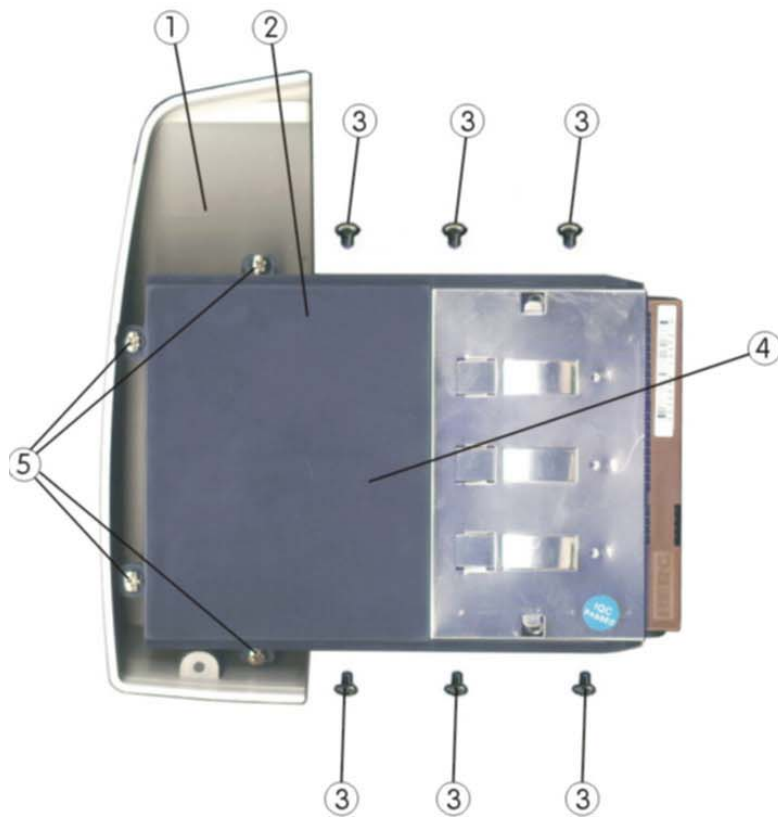

ITEM	PART NAME	PART NO.	Q'TY	REMARK
01	HDD COVER,PC/ABS LP200ST	39-P2204-001	1	
02	HDD HOLDER,PC/ABS LP200	39-P2211-001	1	
03	SCREW# 6-32x5L BNI ACT	35-41306-5R0	6	
04	HDD 3.5" 30GB QUANTUM (EPSON)	985-018U0-Q00-E	1	
	HDD 3.5" 30.6GB SAMSUNG (EPSON)	985-01830-S00-E	1	
05	M3x6Lx0.5P BIND HEAD NI-PL	35-41130-6R0	4	

**NOTES:**

A


# **B** SWITCHES AND JUMPERS

This appendix is about the system's switches and jumpers.



## LOCATIONS

The following figure shows the locations of the DIP Switches and Jumpers the system uses. You can access them after you remove the Back Cover (page 2-4). Be sure to **turn OFF the system** before you perform any part removal procedure.

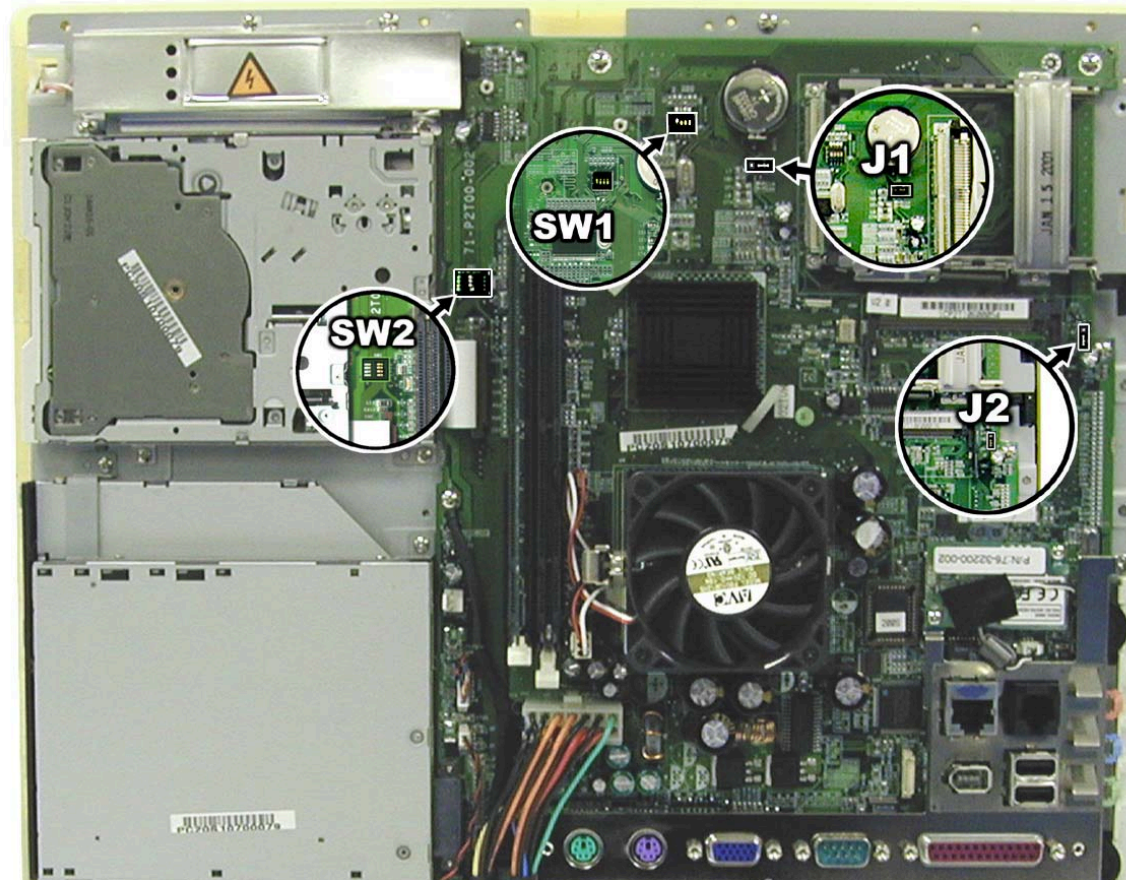

LOCATIONS OF THE SYSTEM'S  
SWITCHES AND JUMPERS

**FIG. B-1**

**B**

# SETTINGS

## CPU FREQUENCY SWITCH SETTINGS (SWITCH SW1)

CPU		SDRAM	SW1-1	SW1-2	SW1-3	SW1-4
Type	FSB Speed (MHz)	MHz				
Celeron 533A	66	100	OFF	OFF	OFF	OFF
Celeron 600	66	100	OFF	OFF	OFF	OFF
Celeron 633	66	100	OFF	OFF	OFF	OFF
Celeron 667	66	100	OFF	OFF	OFF	OFF
Celeron 700	66	100	OFF	OFF	OFF	OFF
Celeron 733	66	100	OFF	OFF	OFF	OFF
Celeron 766	66	100	OFF	OFF	OFF	OFF
Celeron 800	100	100	ON	OFF	OFF	OFF
Celeron 850	100	100	ON	OFF	OFF	OFF
Celeron 900	100	100	ON	OFF	OFF	OFF
Celeron 950	100	100	ON	OFF	OFF	OFF
PIII 600	100	100	ON	OFF	OFF	OFF
PIII 650	100	100	ON	OFF	OFF	OFF
PIII 700	100	100	ON	OFF	OFF	OFF
PIII 750	100	100	ON	OFF	OFF	OFF
PIII 800	100	100	ON	OFF	OFF	OFF
PIII 850	100	100	ON	OFF	OFF	OFF
PIII 1100	100	100	ON	OFF	OFF	OFF
PIII 600EB	133	133	ON	ON	ON	OFF
PIII 733	133	133	ON	ON	ON	OFF
PIII 800EB	133	133	ON	ON	ON	OFF
PIII 866	133	133	ON	ON	ON	OFF
PIII 933	133	133	ON	ON	ON	OFF
PIII 1000	133	133	ON	ON	ON	OFF



**PANEL TYPE SWITCH AND JUMPER SETTINGS (SWITCH SW2 & JUMPER J2)**

**Jumper J2 sets the LCD VCC.**  
 The LCD VCC is set to 5V when pins 1 & 2 of Jumper J2 are ON.  
 The LCD VCC is set to 3V when pins 2 & 3 of Jumper J2 are ON.

LCD Panel		SW2-1	SW2-2	SW2-3	SW2-4	J2
Model No.	Brand					
HT15TX11-200-TI	Hyundai	OFF	OFF	ON	OFF	5V (pins 1-2 ON)
LM151X4-ATH	LG	OFF	OFF	OFF	ON	3V (pins 2-3 ON)

**B**

**CMOS CLEAR JUMPER SETTINGS (JUMPER J1)**

Type	Pins 1 & 2 of J1	Pins 2 & 3 of J1
Normal (default)	ON	
CMOS Clear		ON

# CIRCUIT DIAGRAMS



This appendix has circuit diagrams of the system’s PCBs.


<b><u>Printed Circuit Board</u></b>	<b><u>Part No. of the Latest Version</u></b>
System Board	71-P2T00-005
Inverter Board	71-P2T0R-002
LED + Inverter Board	71-P2T14-002
Converter Board	71-P2T03-003 (for Hyundai panels) 71-P2T04-002 (for LG panels)
IEEE1394 Extension Card	71-P2205-001A (This is an optional feature)
External USB Board	71-P2206-001 (Only the LP200SC has this feature.)


We have included the latest versions at the press time. If any board you want to service is newer than listed, please consult the nearest service center.




# SYSTEM BOARD


**System Block Diagram**

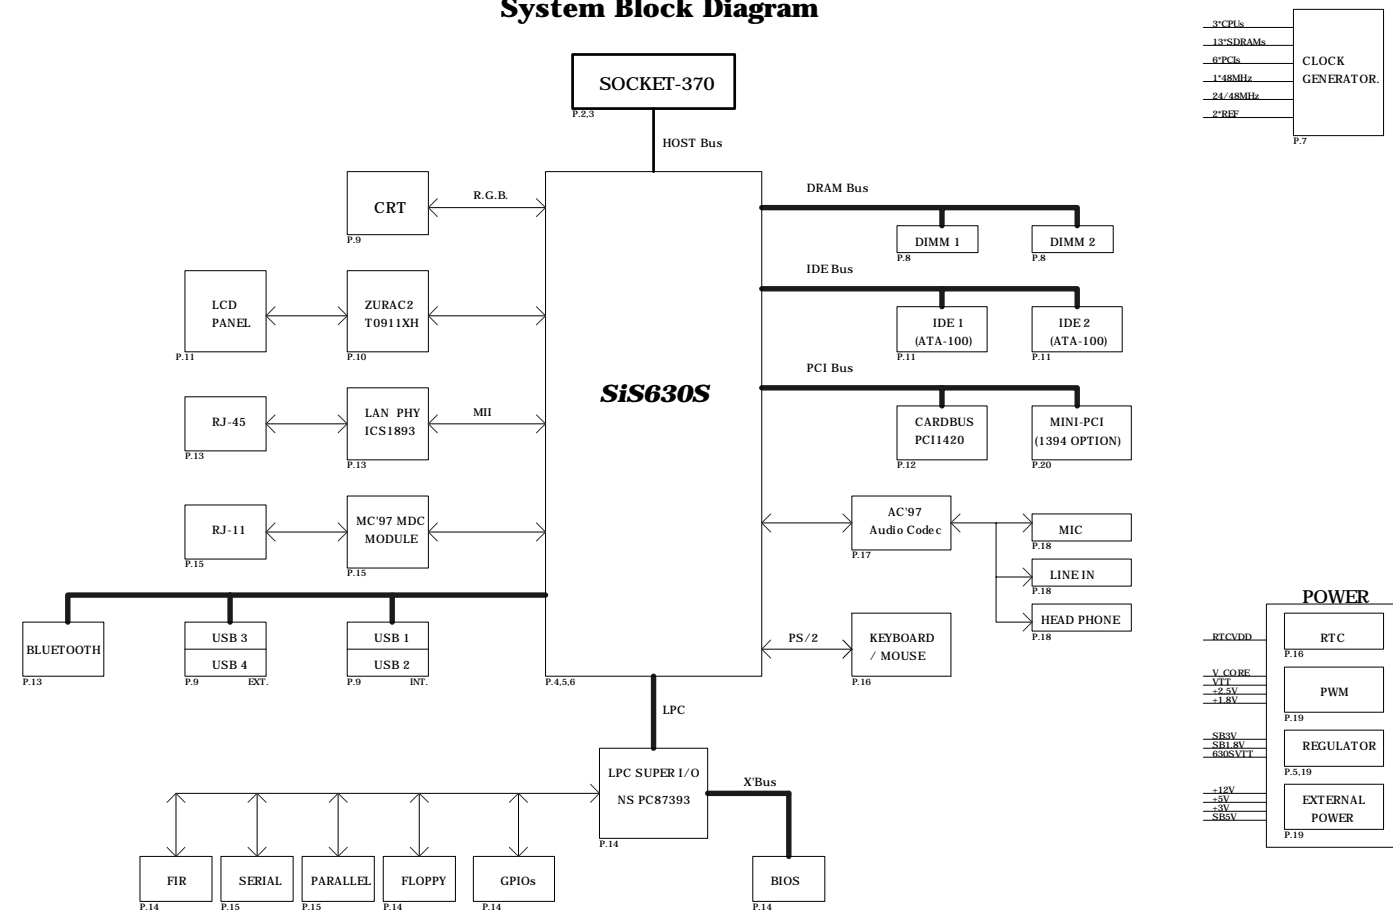



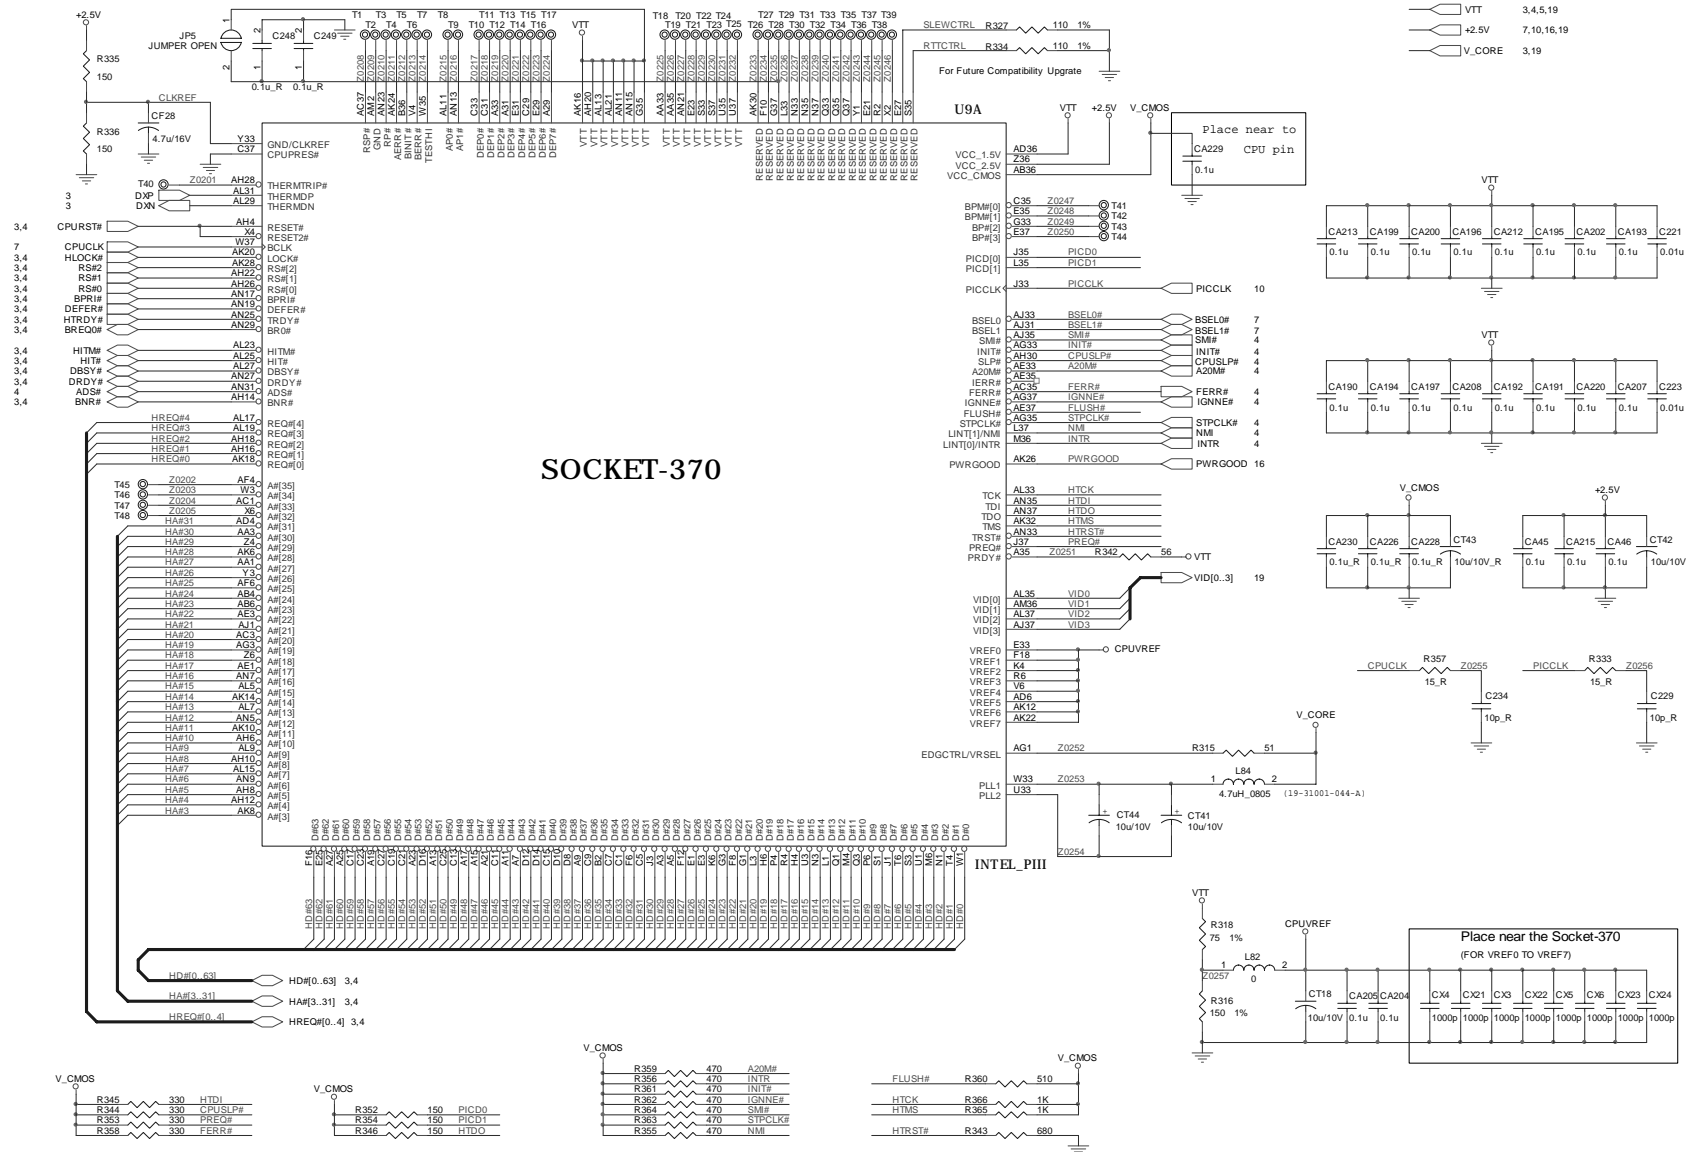


# SERVICE MANUAL

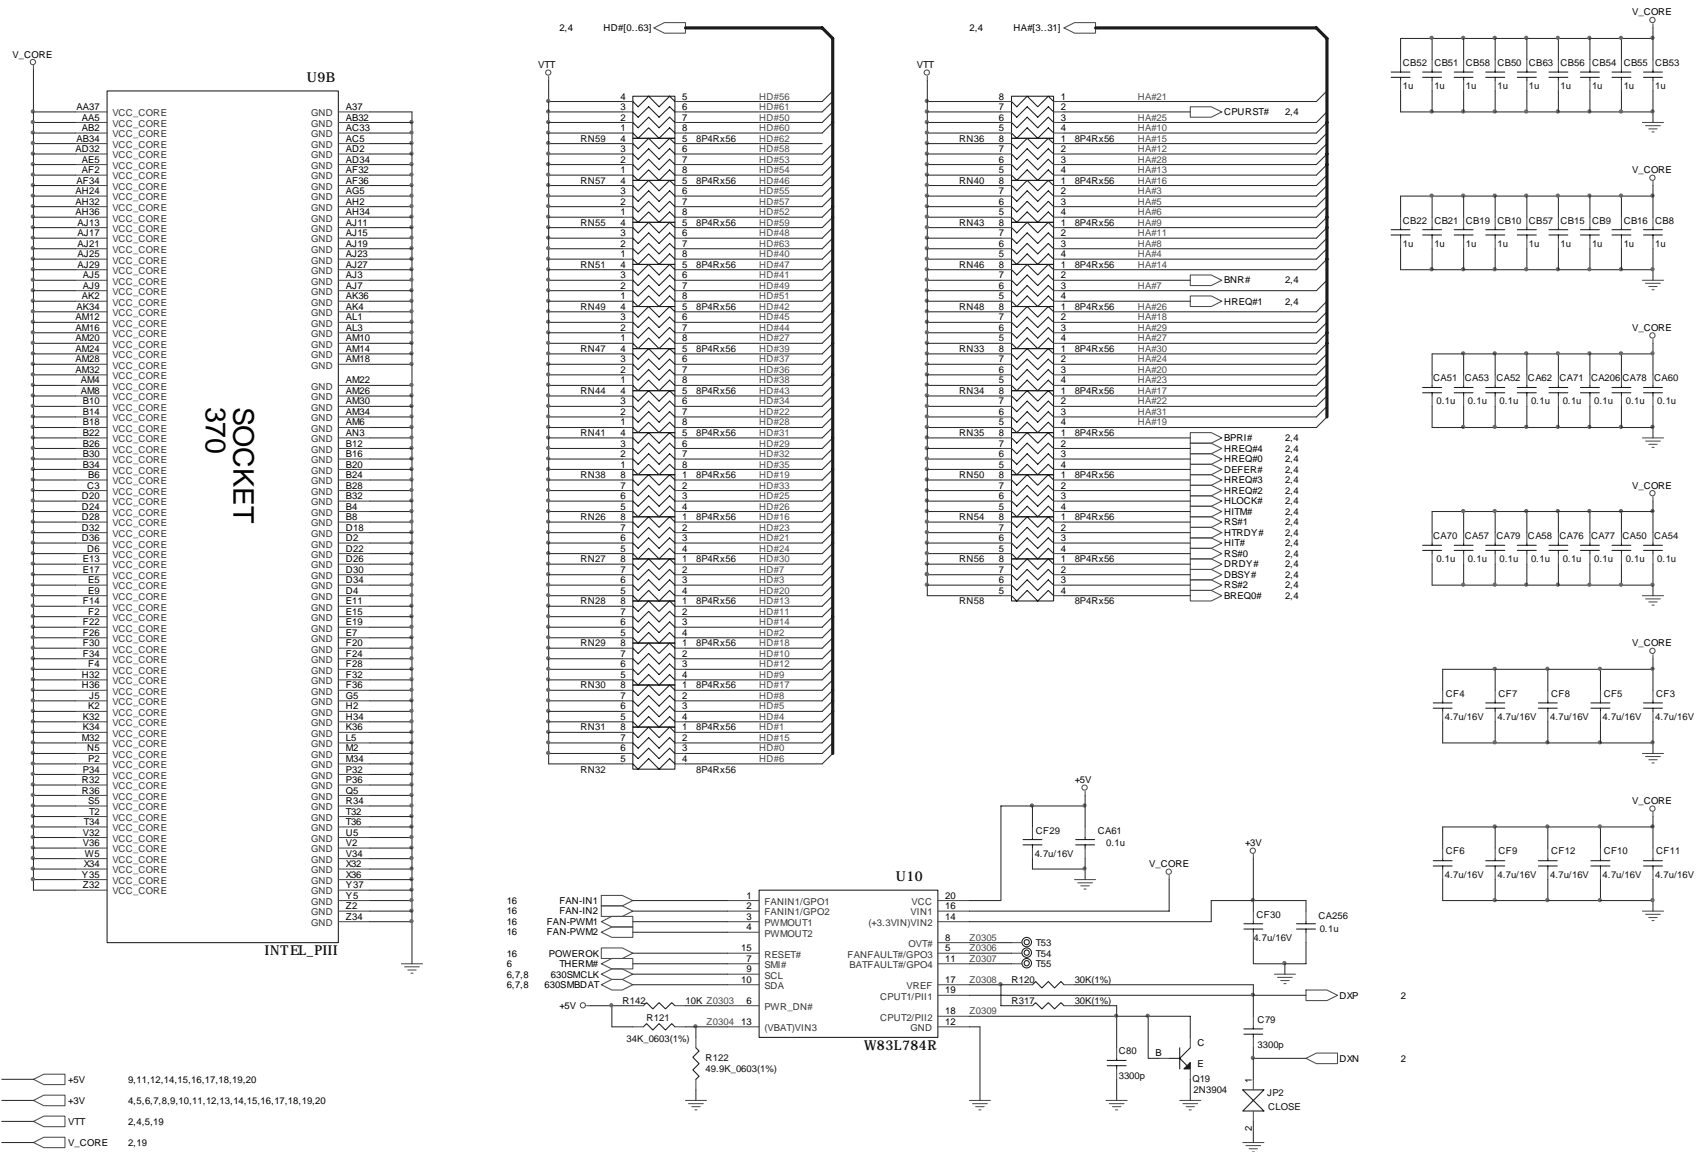

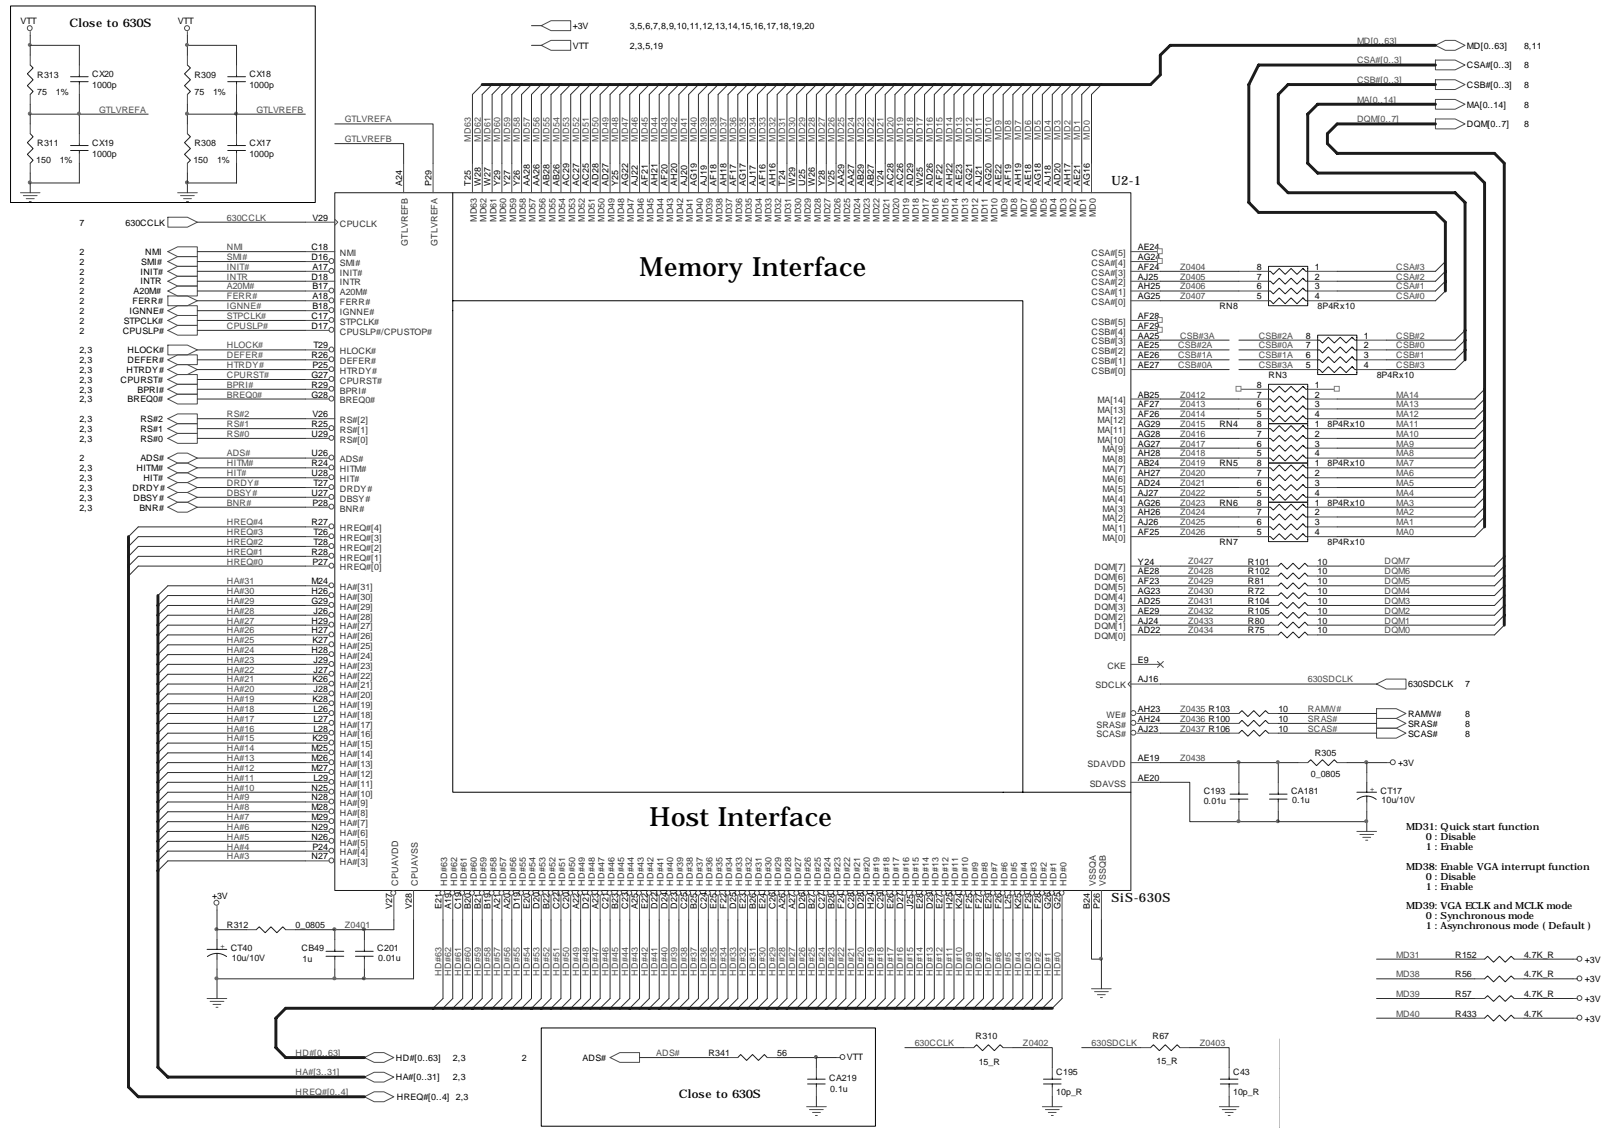

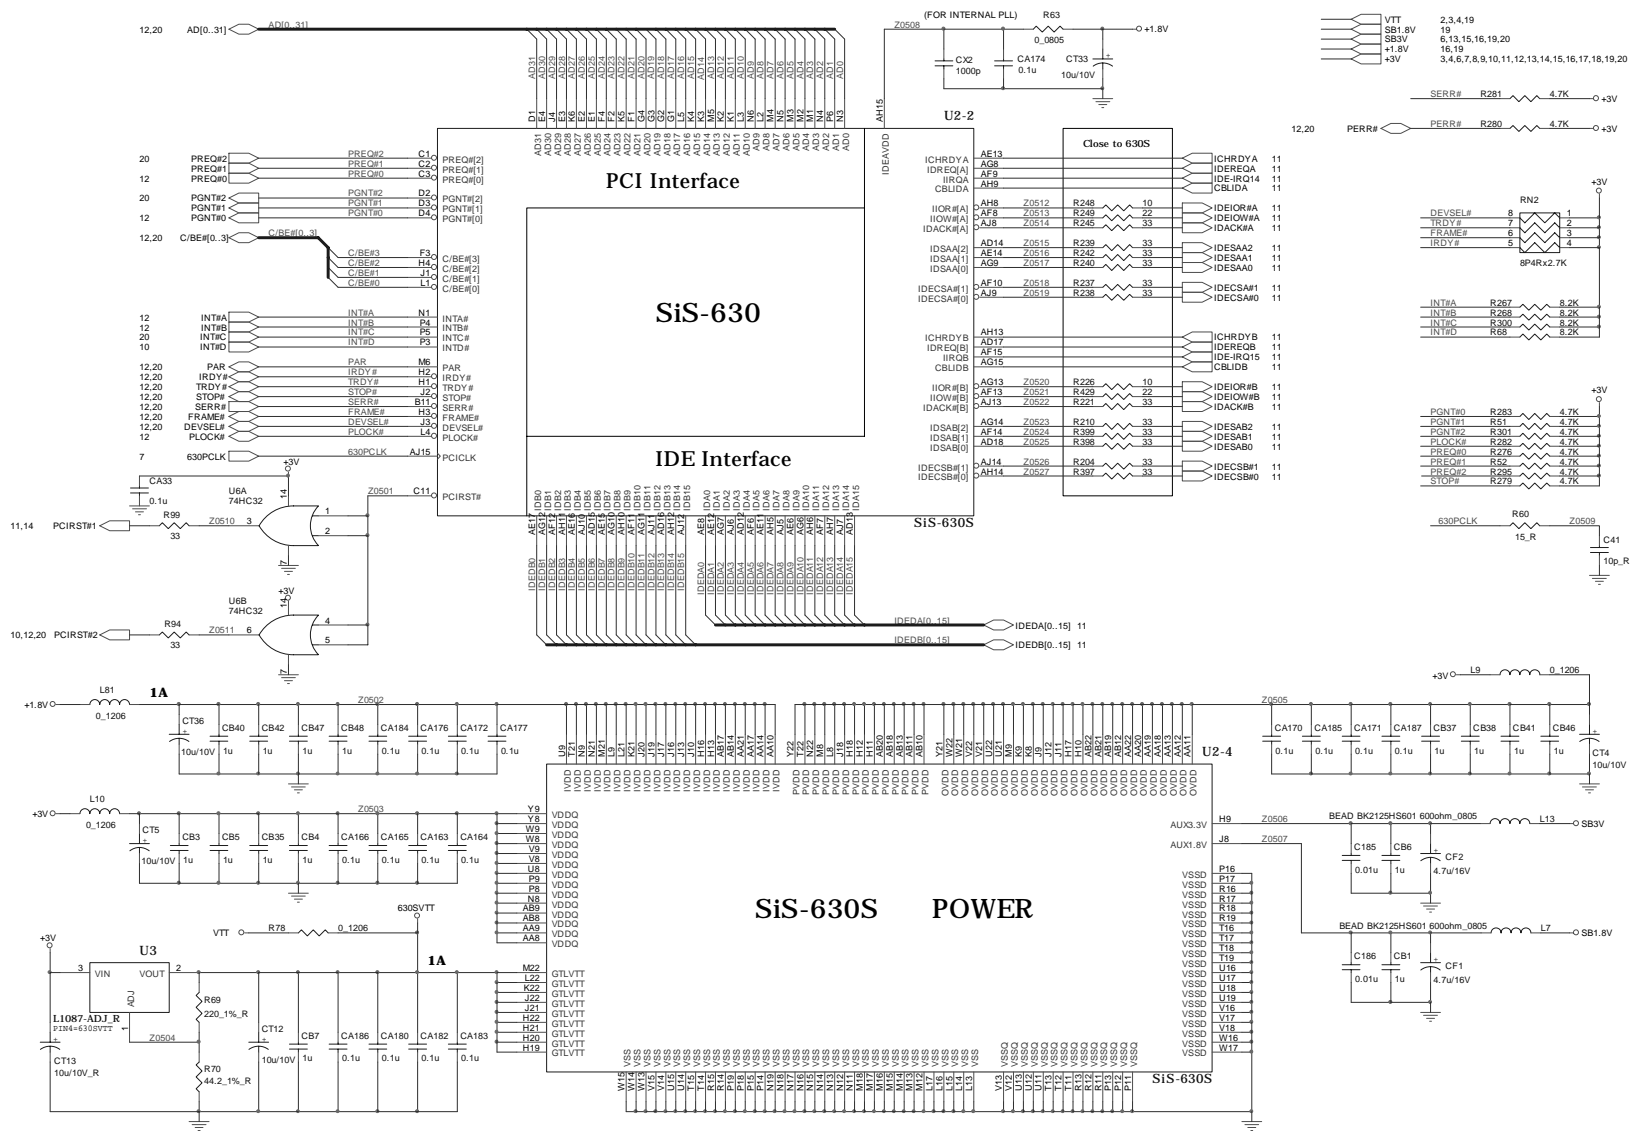






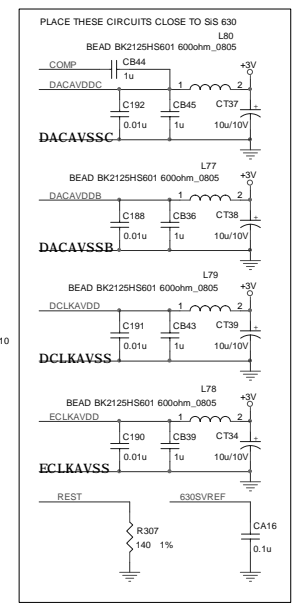
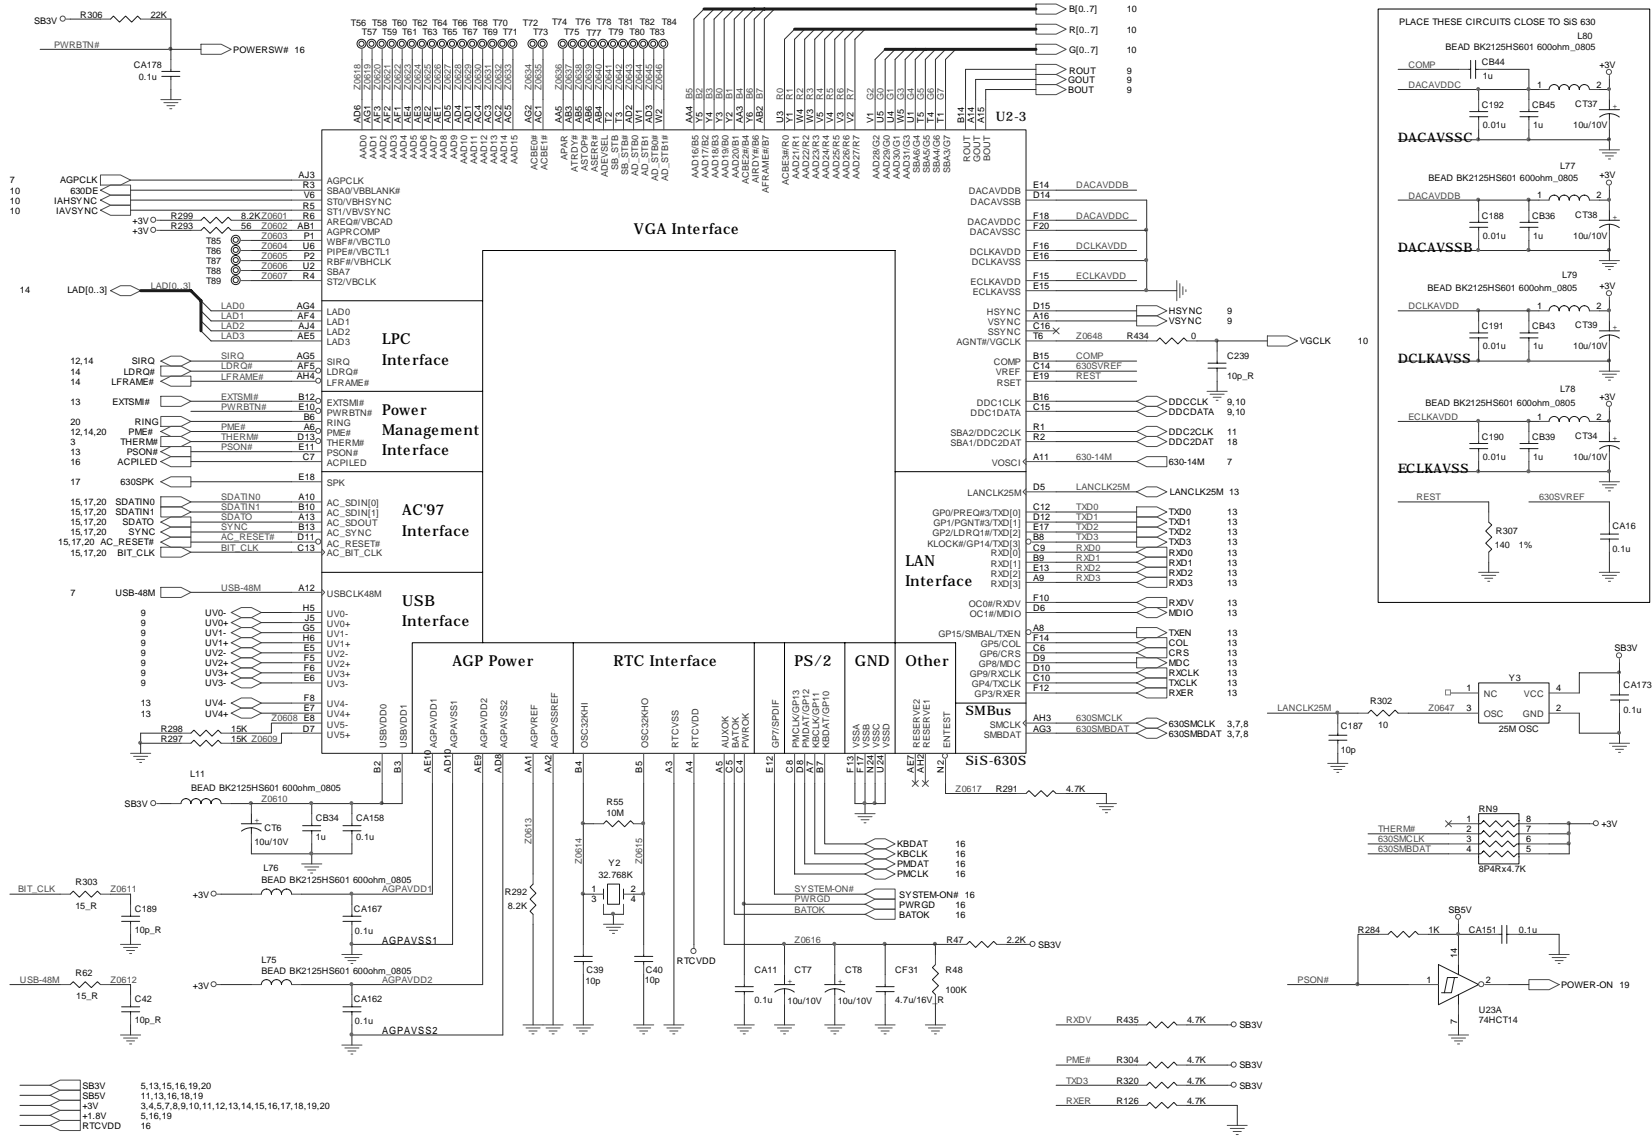


# SERVICE MANUAL


**SIS-630S CLOCK SETUP TABLE**

(FS3)	(FS2)	(FS1)	(FS0)	CPU (MHz)	SDRAM (MHz)	PC (MHz)	REF (MHz)
0	0	0	0	66.7	100	33.33	14.318
0	0	0	1	100	100	33.33	14.318
0	0	1	0	150	100	33.33	14.318
0	0	1	1	133	100	33.33	14.318
0	1	0	0	66	133	33.33	14.318
0	1	0	1	100	133	33.33	14.318
0	1	1	0	100	150	33.33	14.318
0	1	1	1	133	150	33.33	14.318
1	0	0	0	66.7	66.7	33.33	14.318
1	0	0	1	83.3	83.3	33.33	14.318
1	0	1	0	90	90	33.33	14.318
1	0	1	1	95	95	33.33	14.318
1	1	0	0	95	126	33.33	14.318
1	1	0	1	112	112	33.33	14.318
1	1	1	0	166	111	33.33	14.318
1	1	1	1	166	166	33.33	14.318

NOTE: PCICLK<37,5MHz

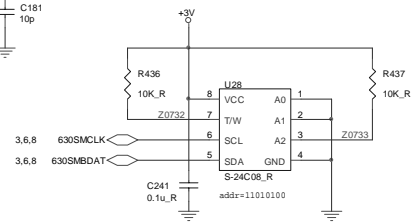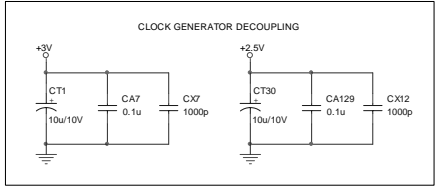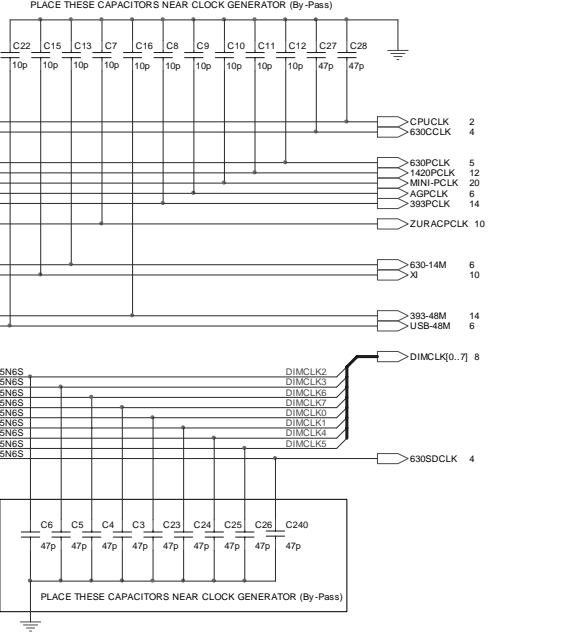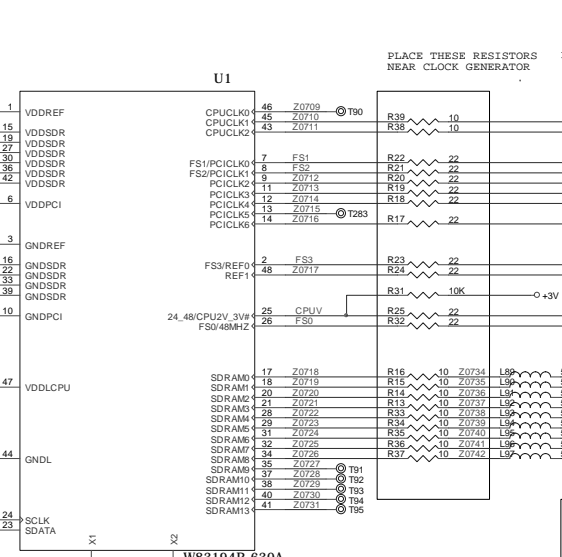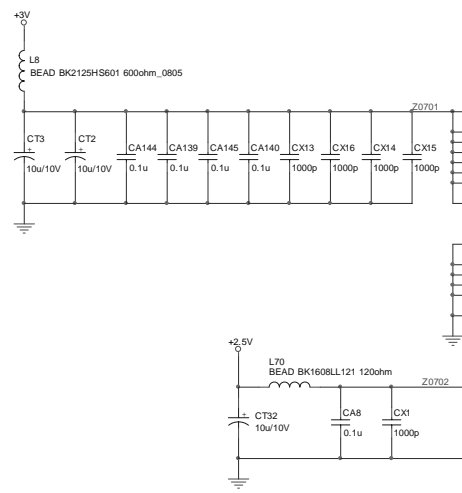
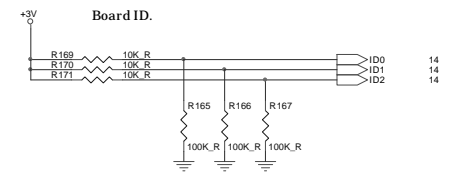
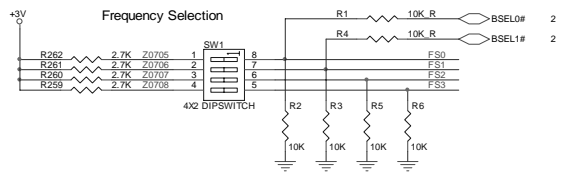



+2.5V 2,10,16,19  
+3V 3,4,5,6,8,9,10,11,12,13,14,15,16,17,18,19,20

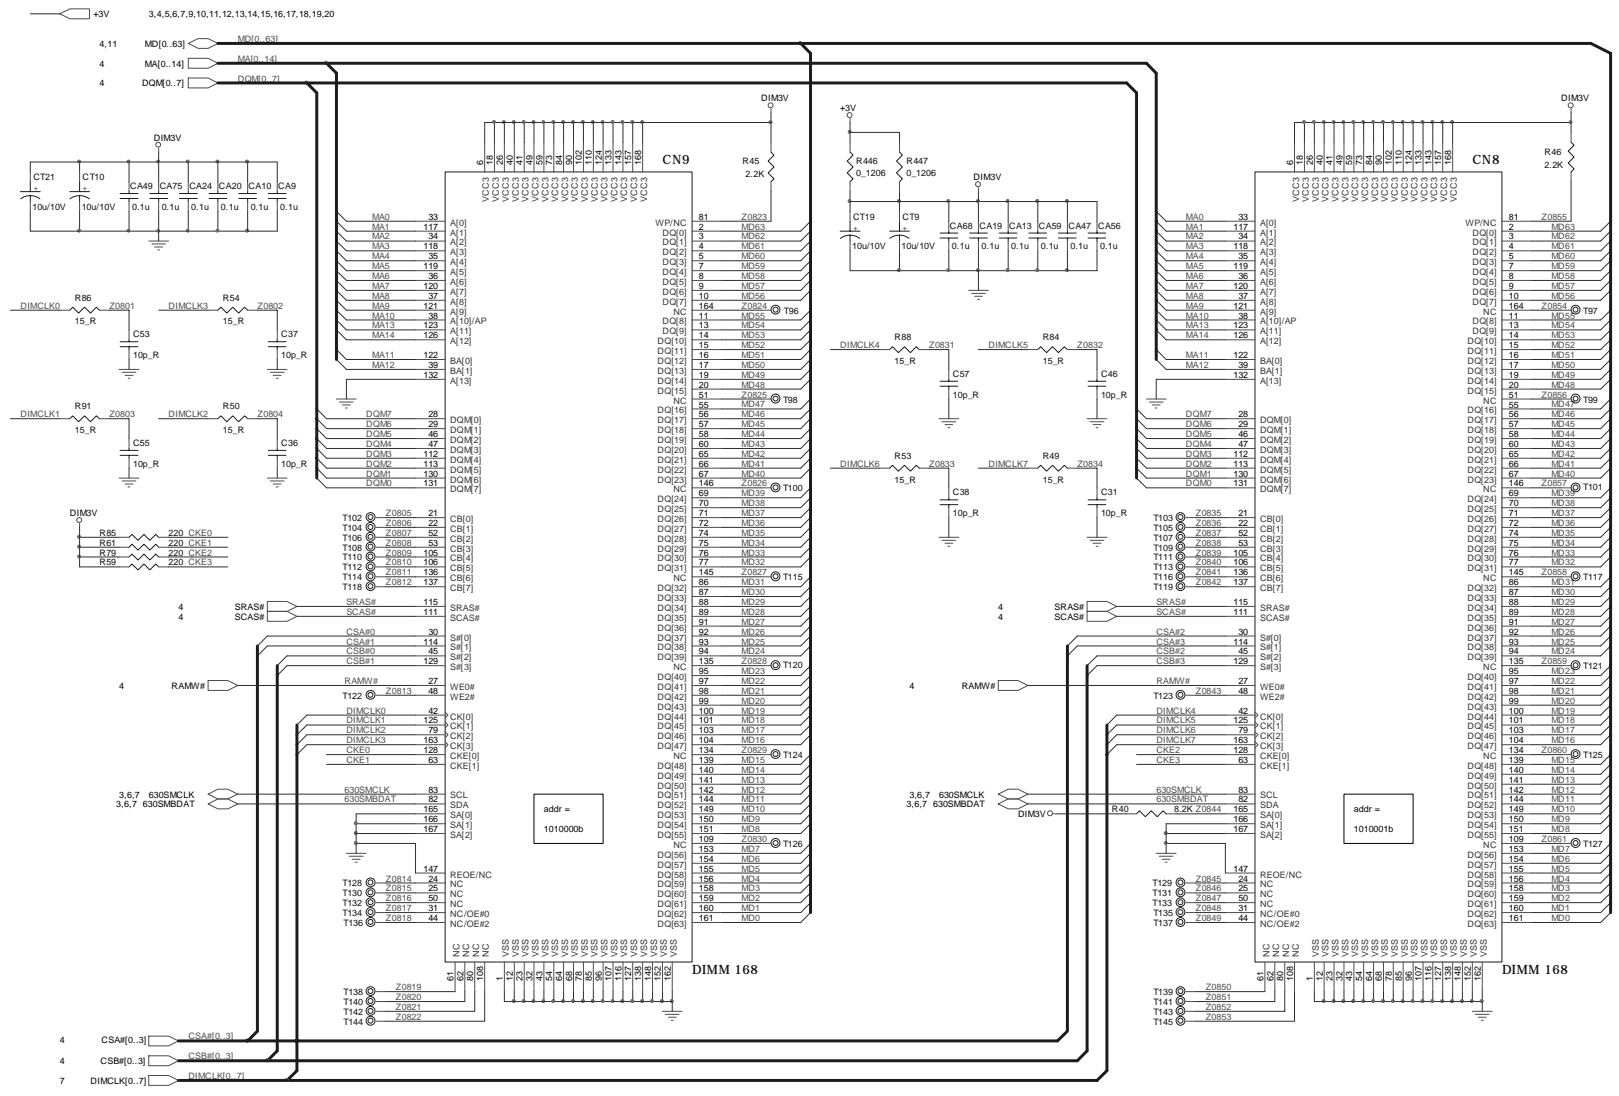





# SERVICE MANUAL

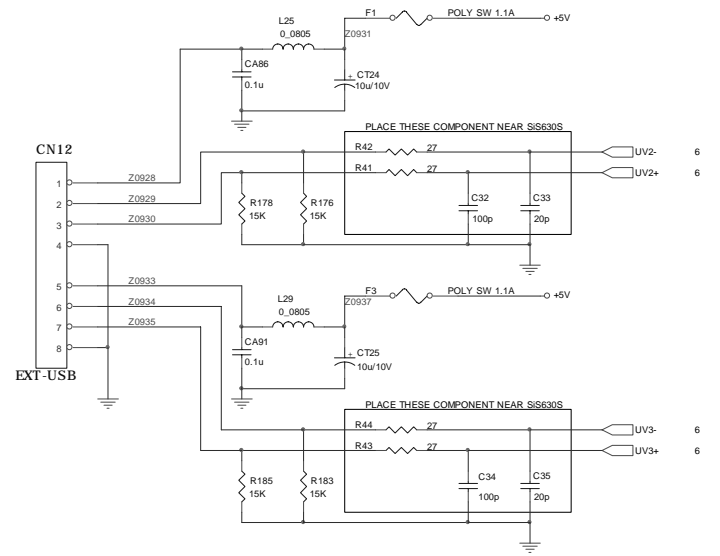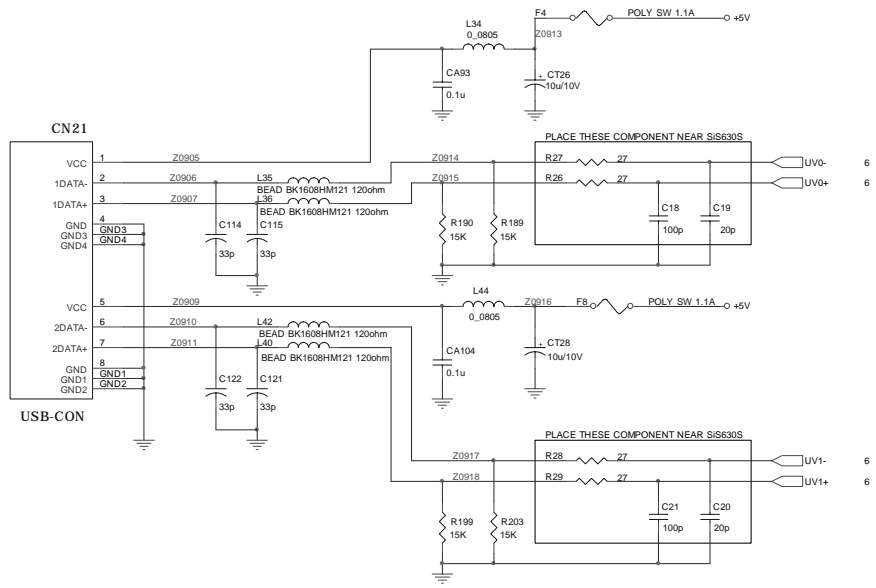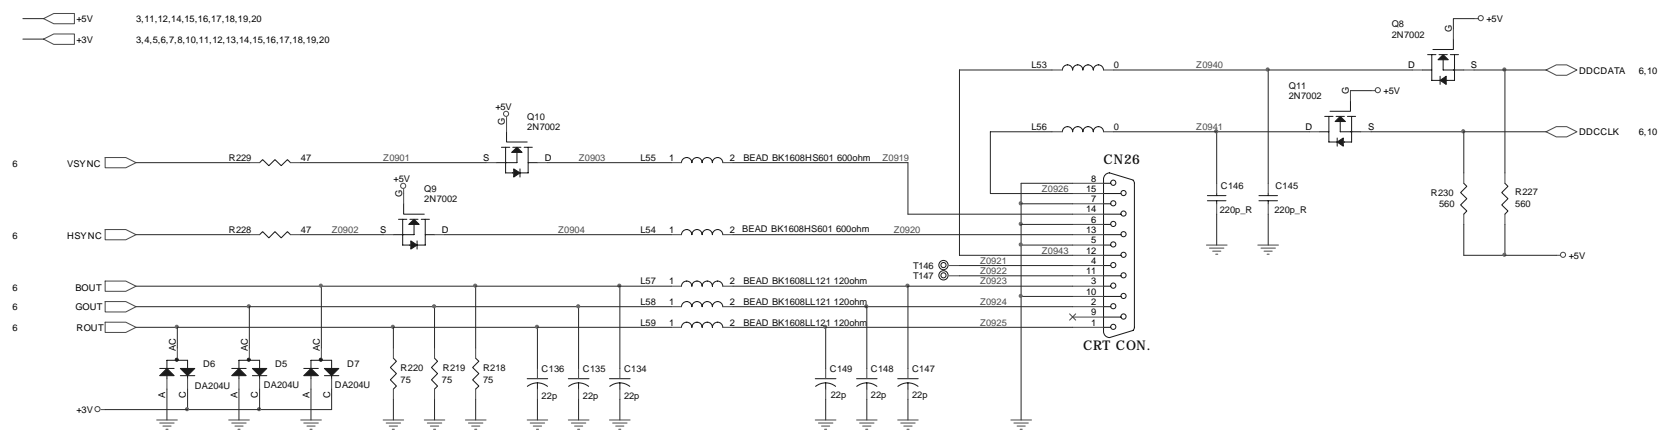

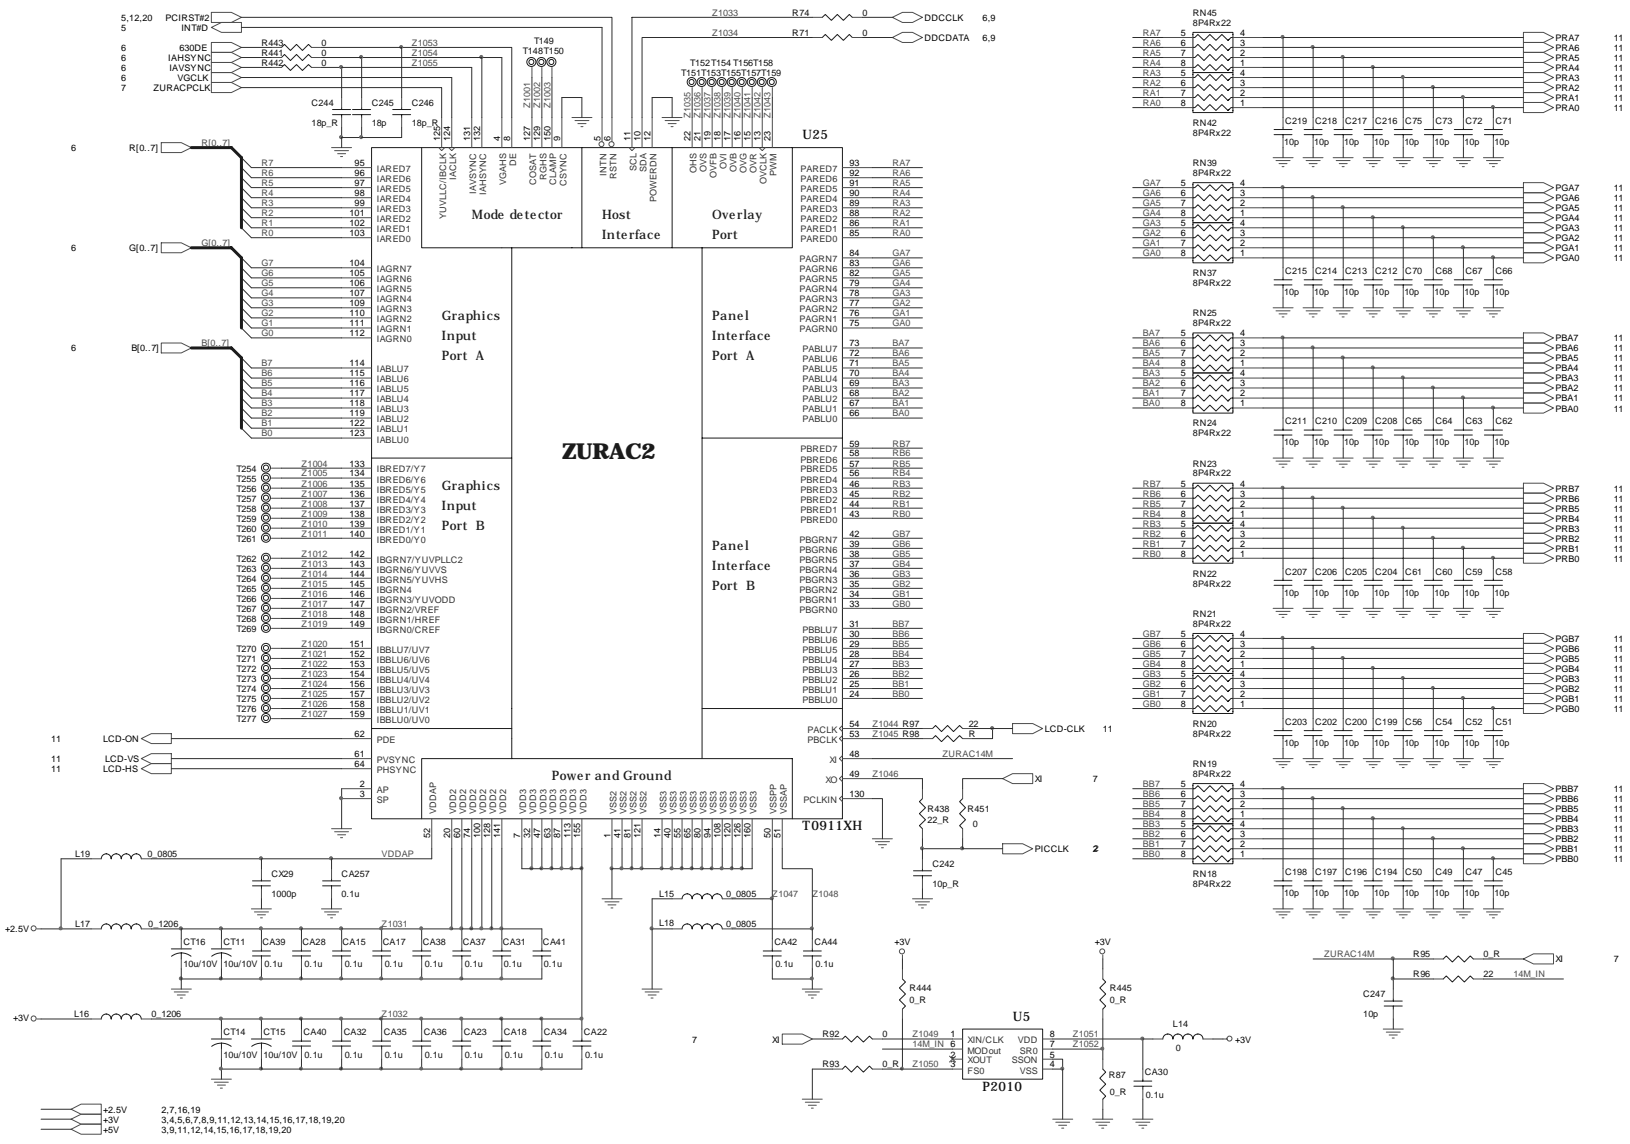



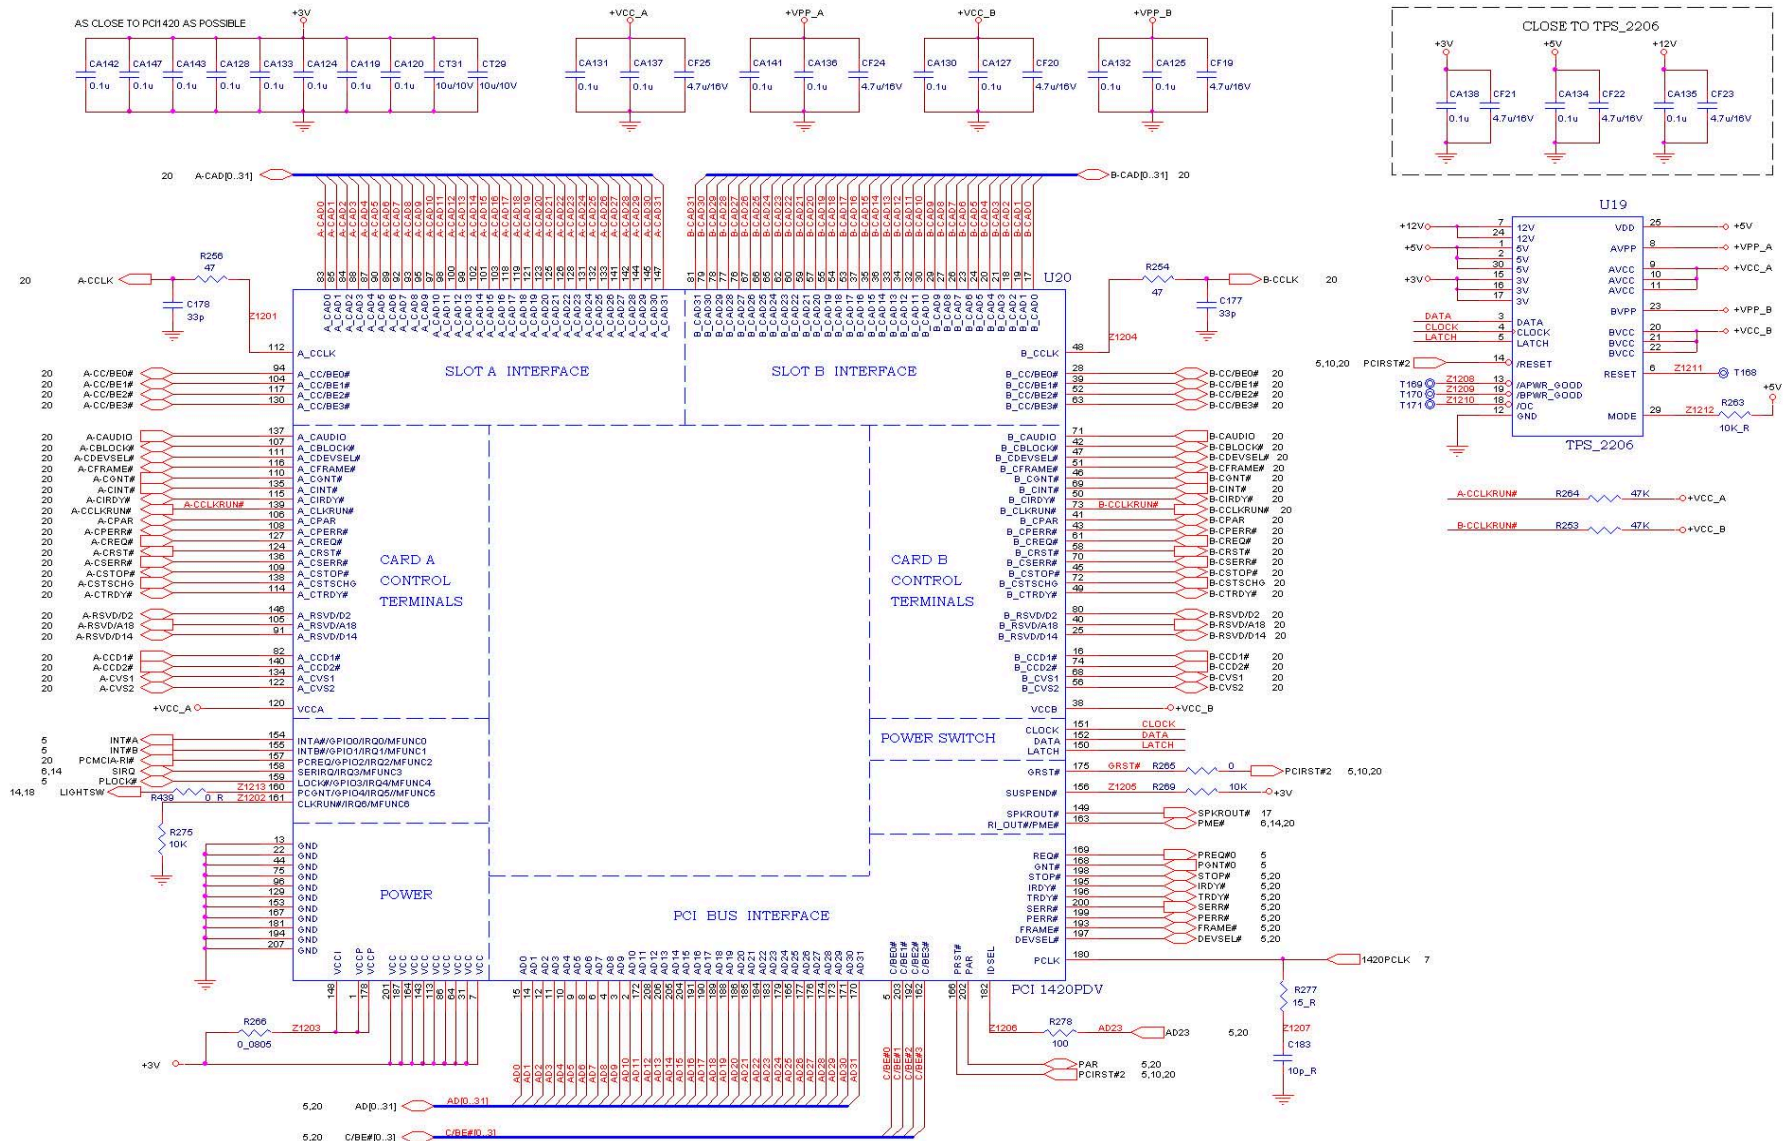

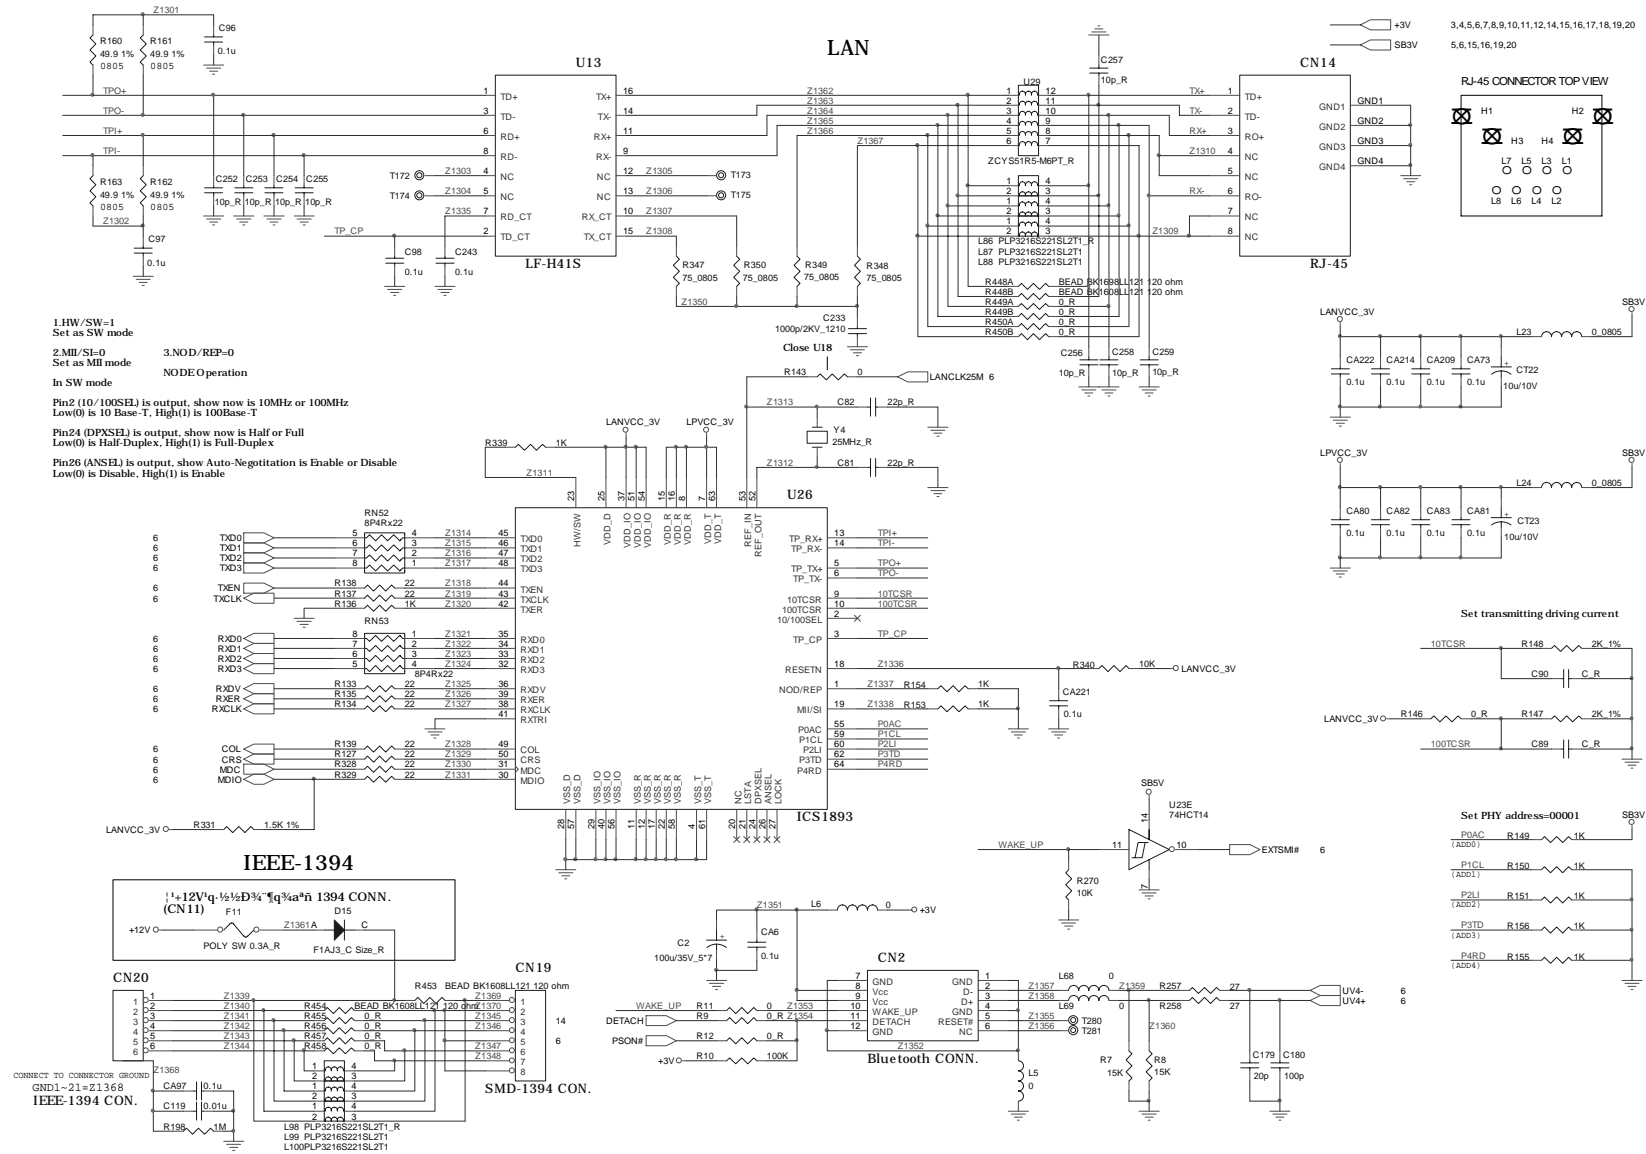


L.HW/SW=1  
 Set as SW mode  
 2.ML/SL=0  
 Set as ML mode  
 In SW mode


3.NOD/REP=0  
 NODE Operation  
 Pin2 (10/100SEL) is output, show now is 10MHz or 100MHz  
 Low(0) is 10 Base-T, High(1) is 100Base-T  
 Pin24 (DPXSEL) is output, show now is Half or Full  
 Low(0) is Half-Duplex, High(1) is Full-Duplex  
 Pin26 (ANSEL) is output, show Auto-Negotiation is Enable or Disable  
 Low(0) is Disable, High(1) is Enable

Set transmitting driving current

Set PHY address=00001




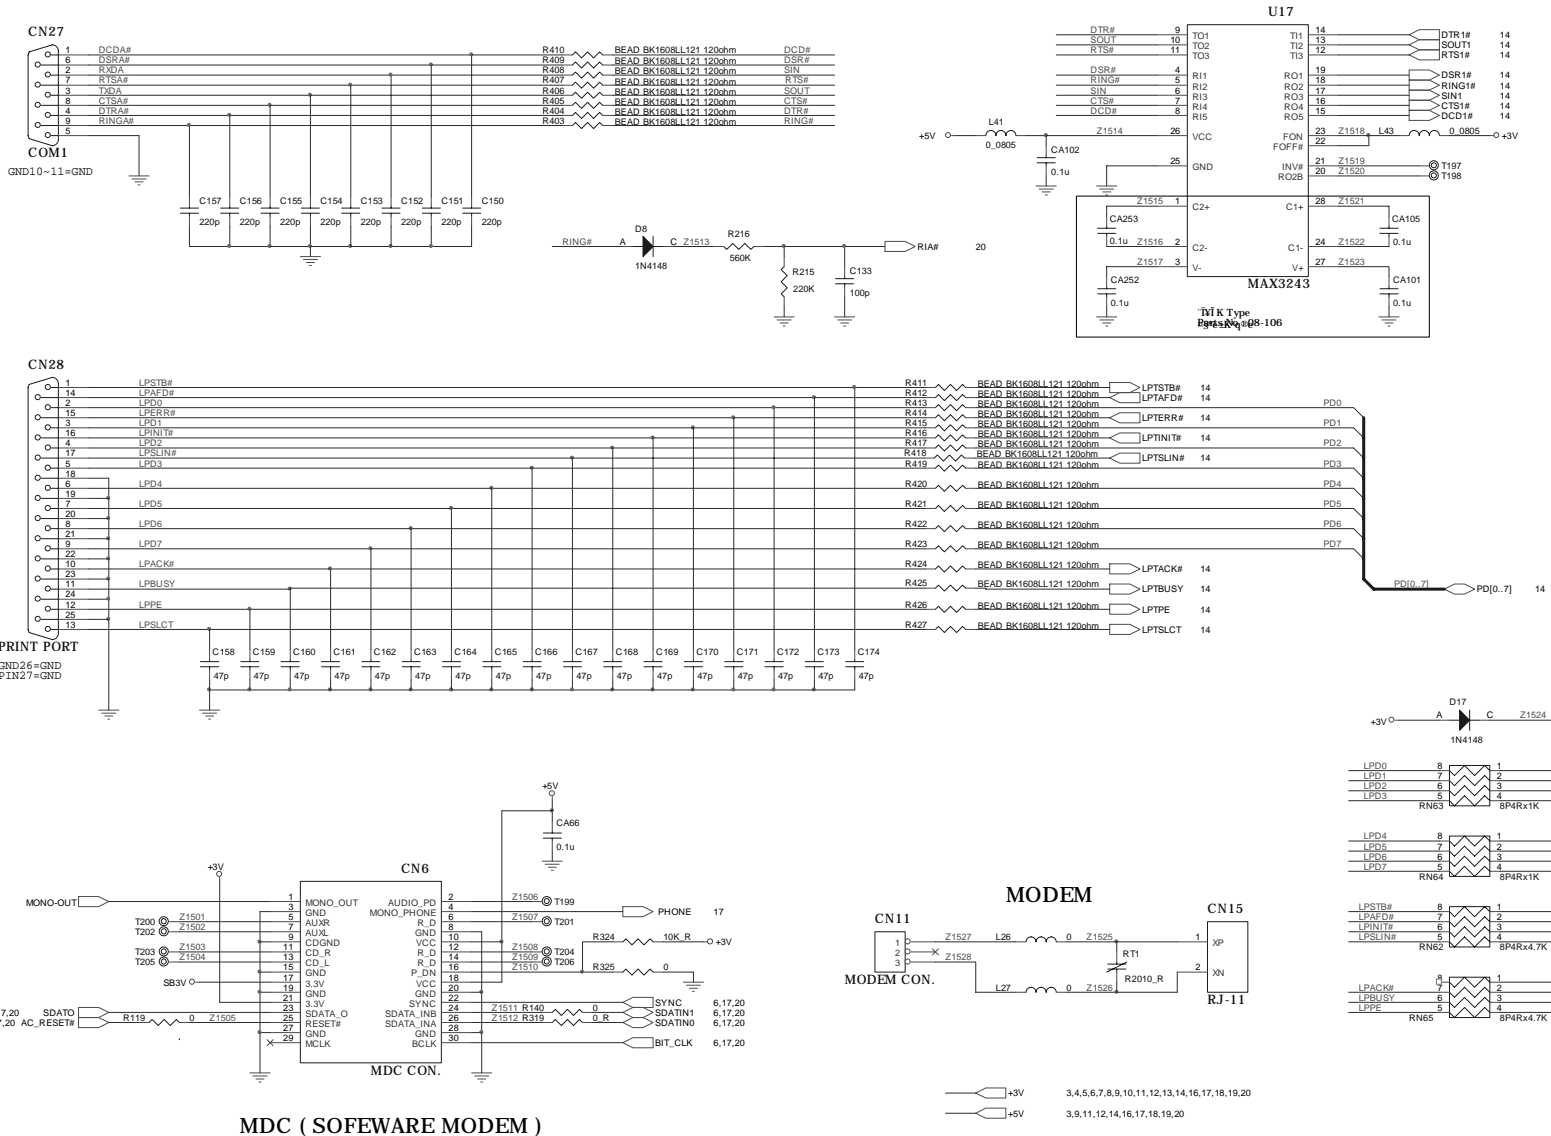


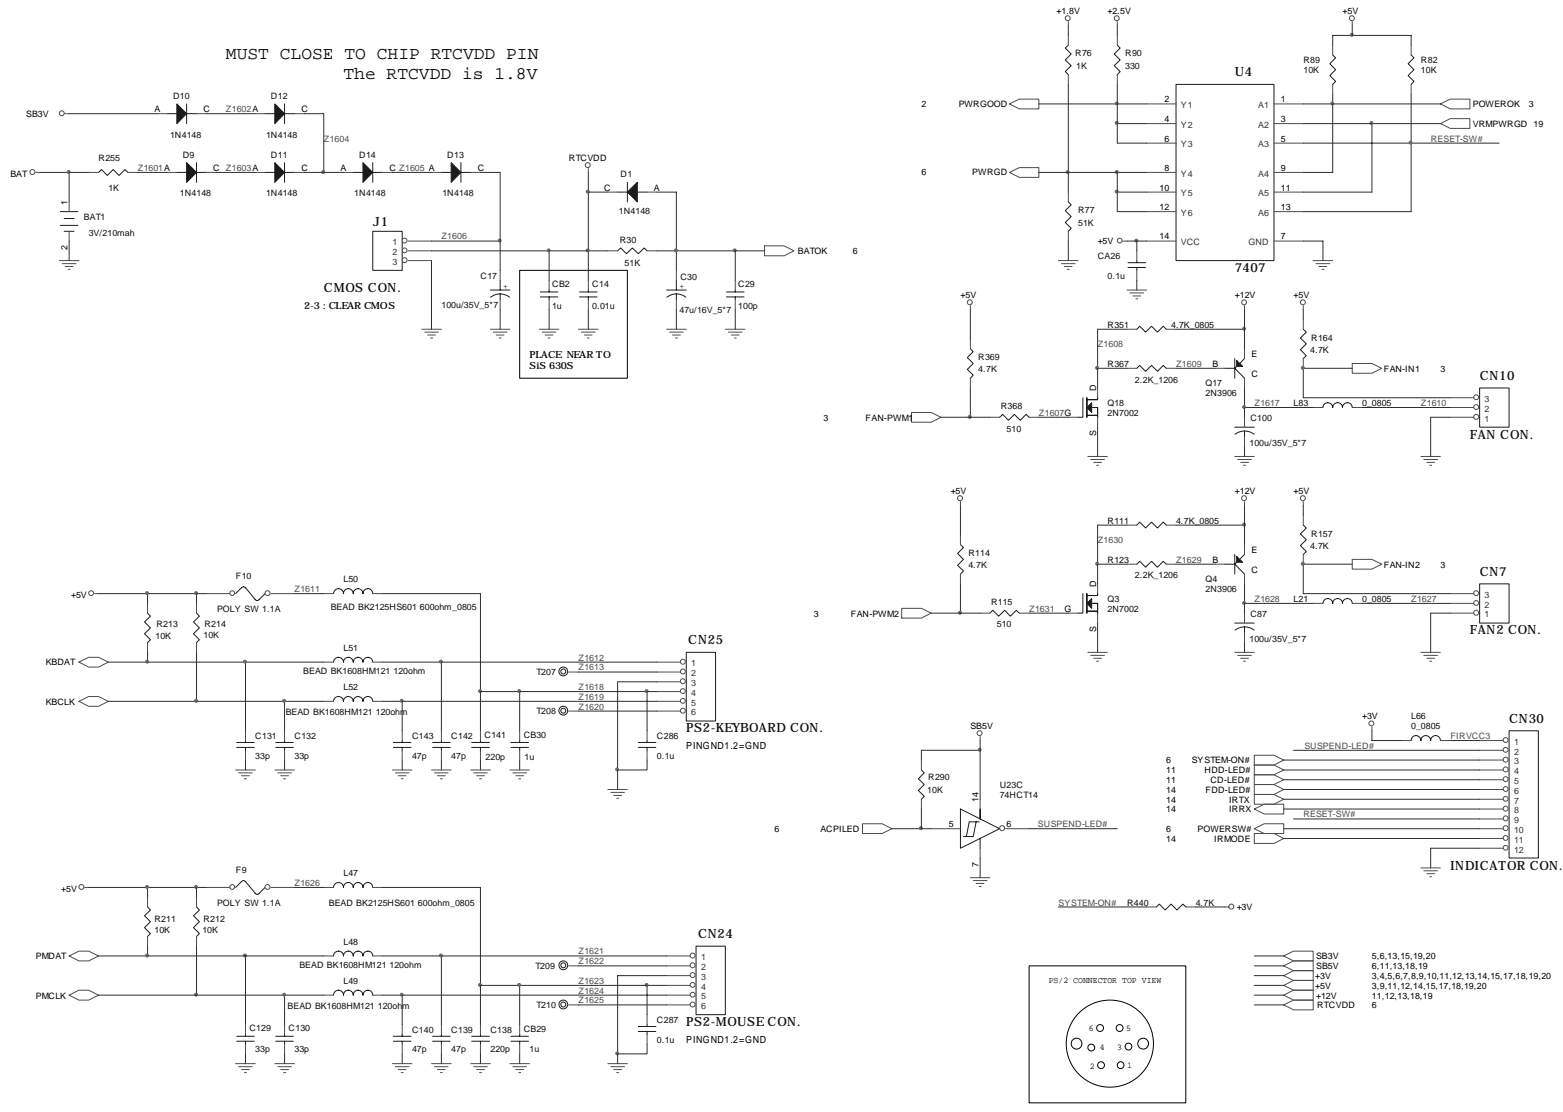





# SERVICE MANUAL

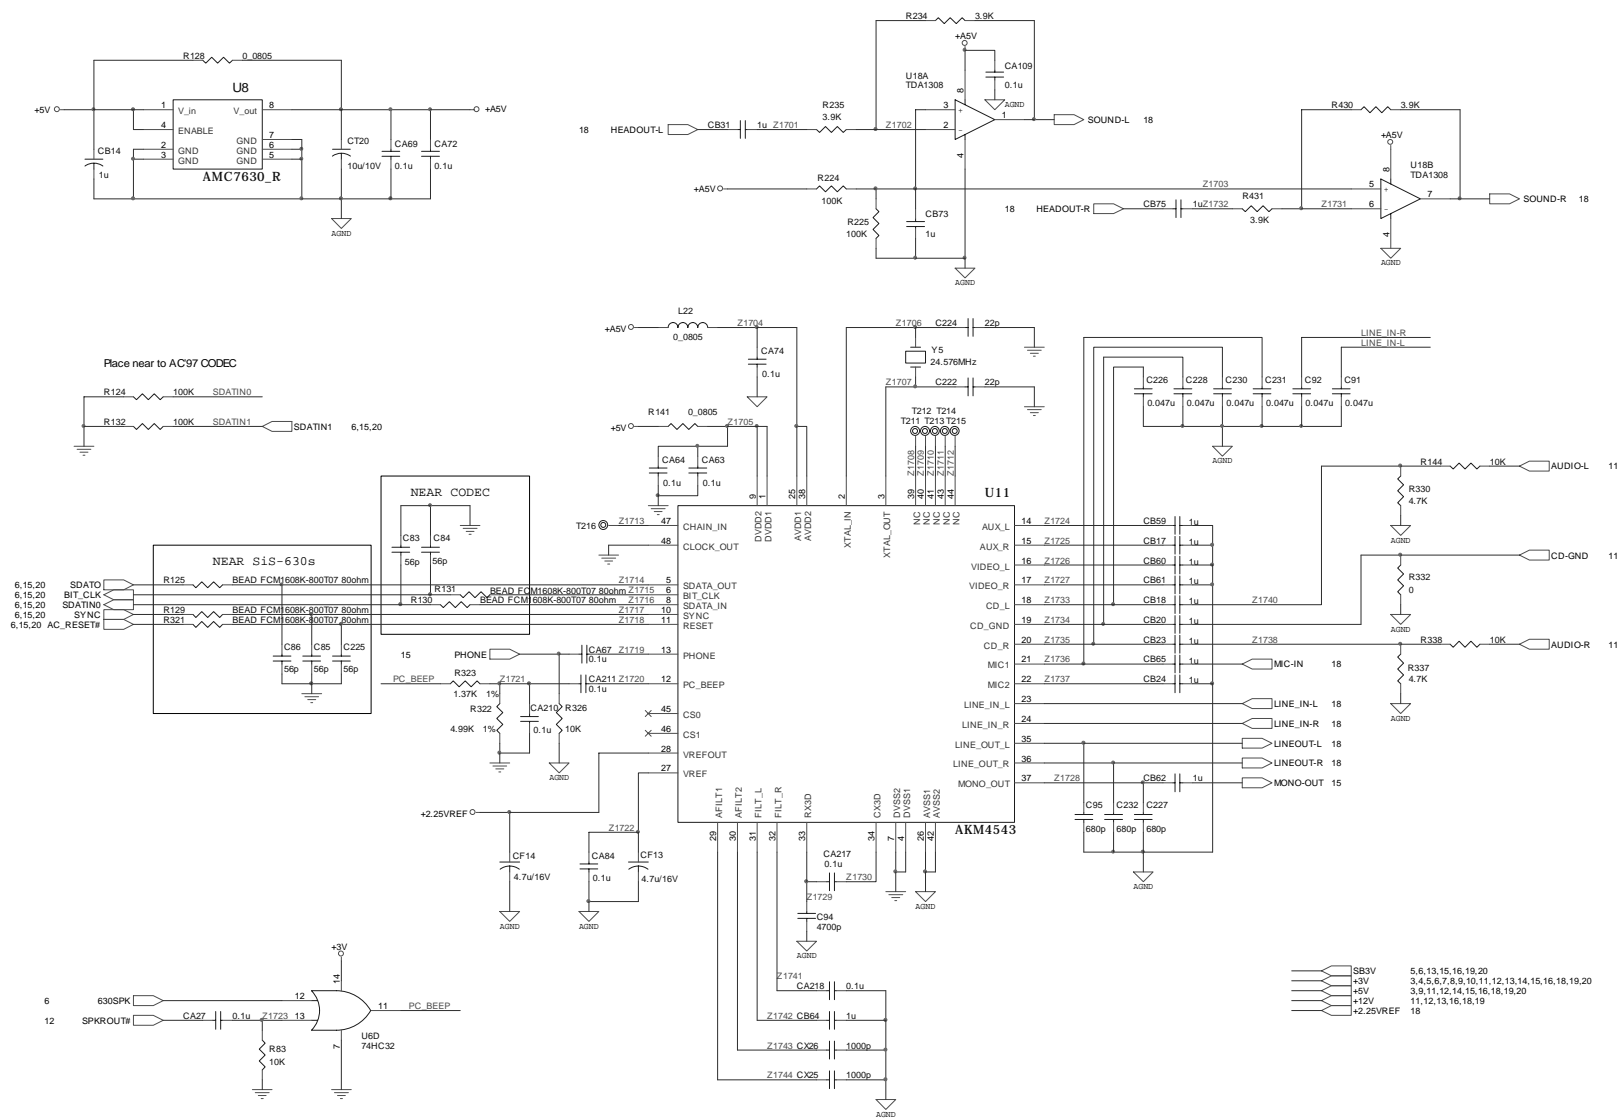


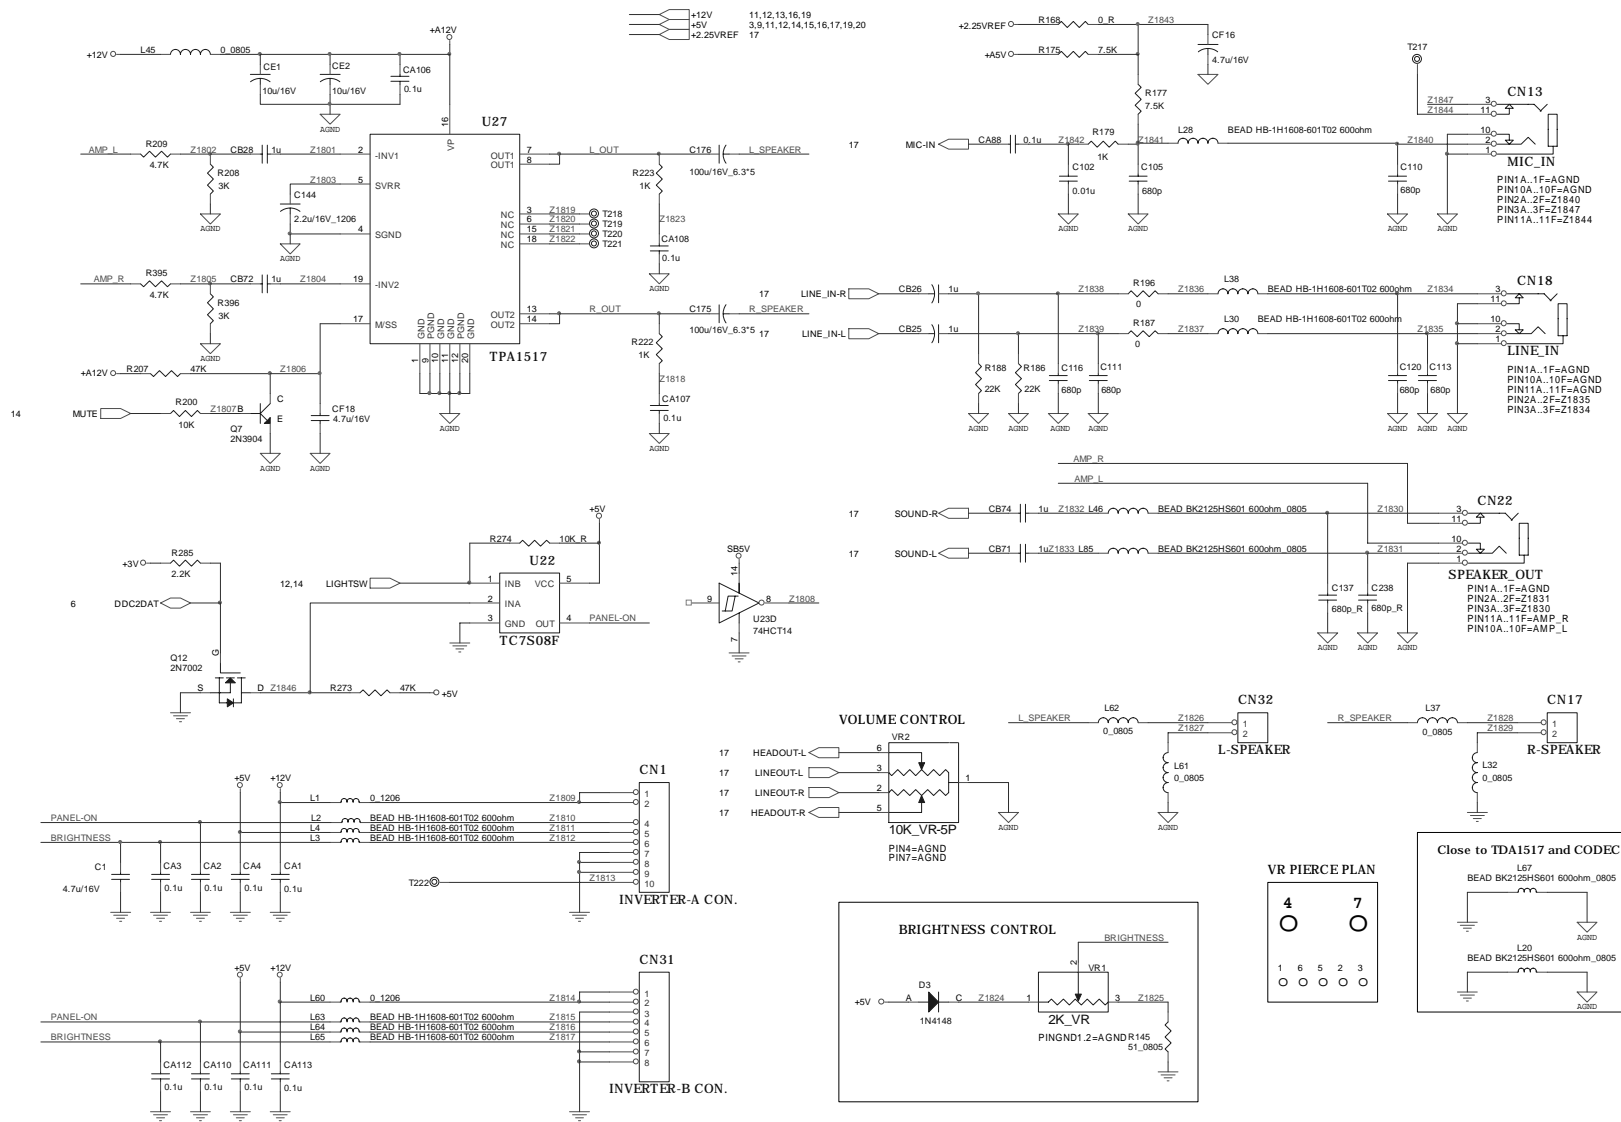

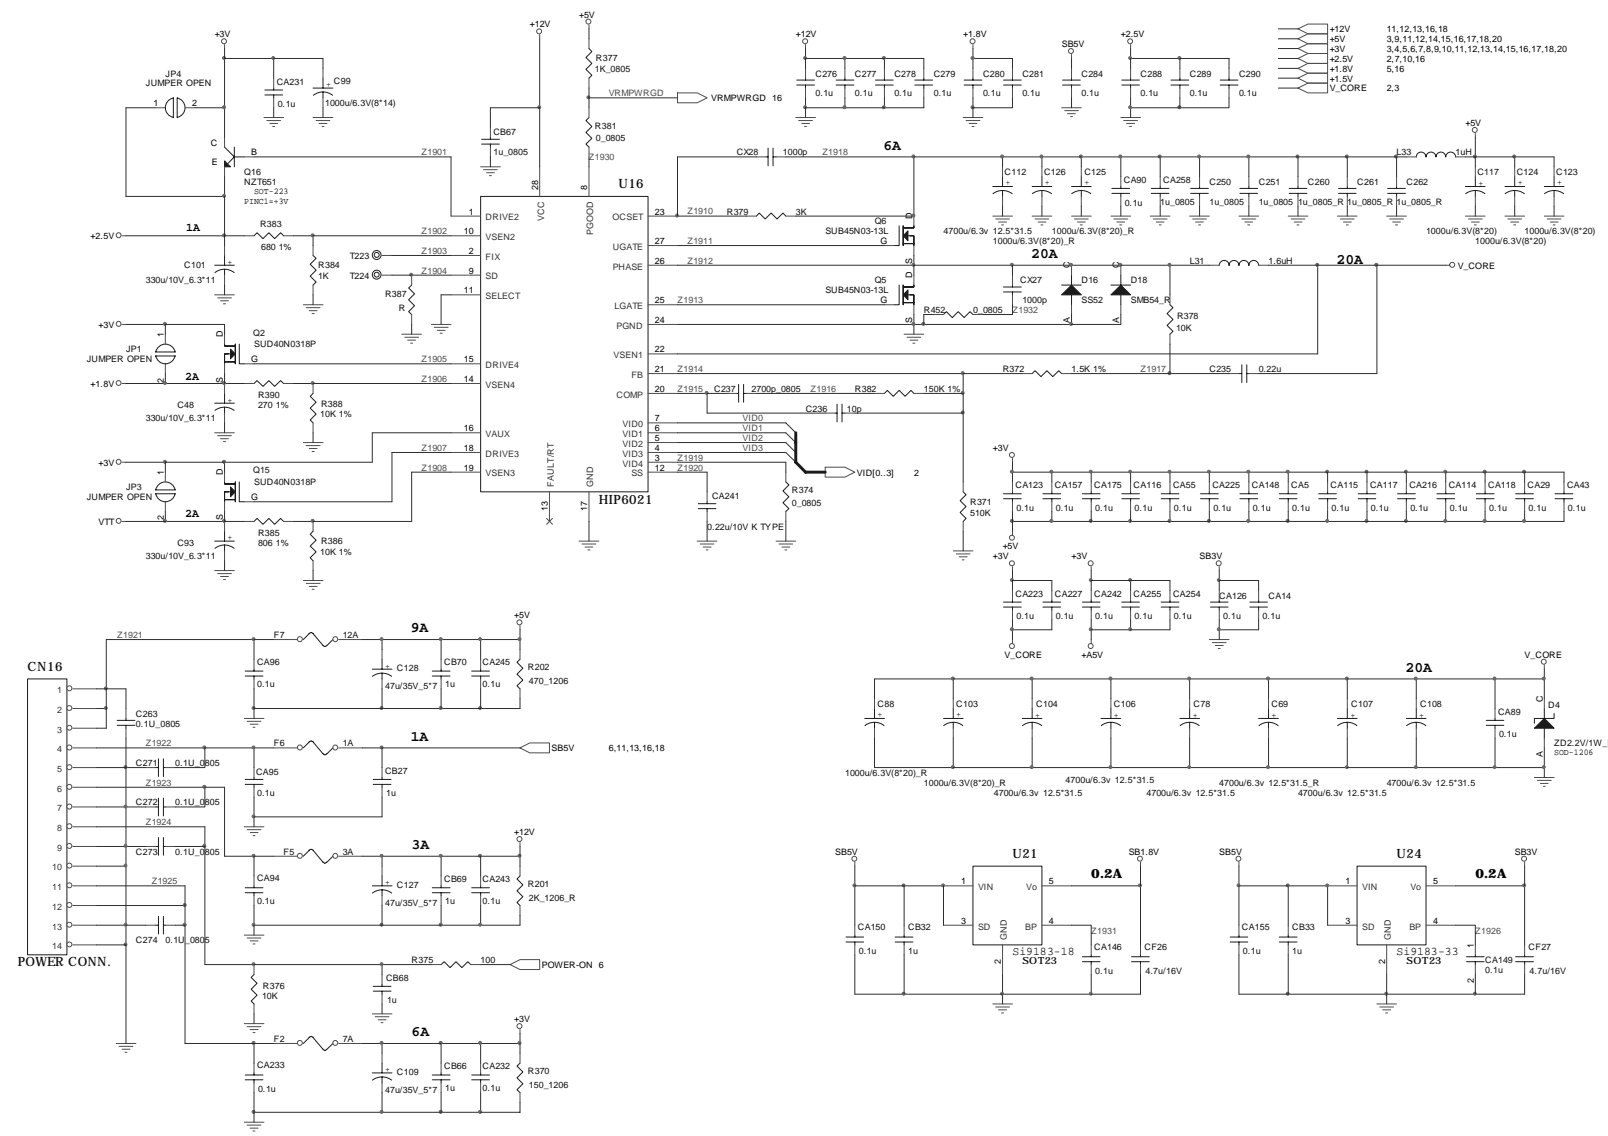


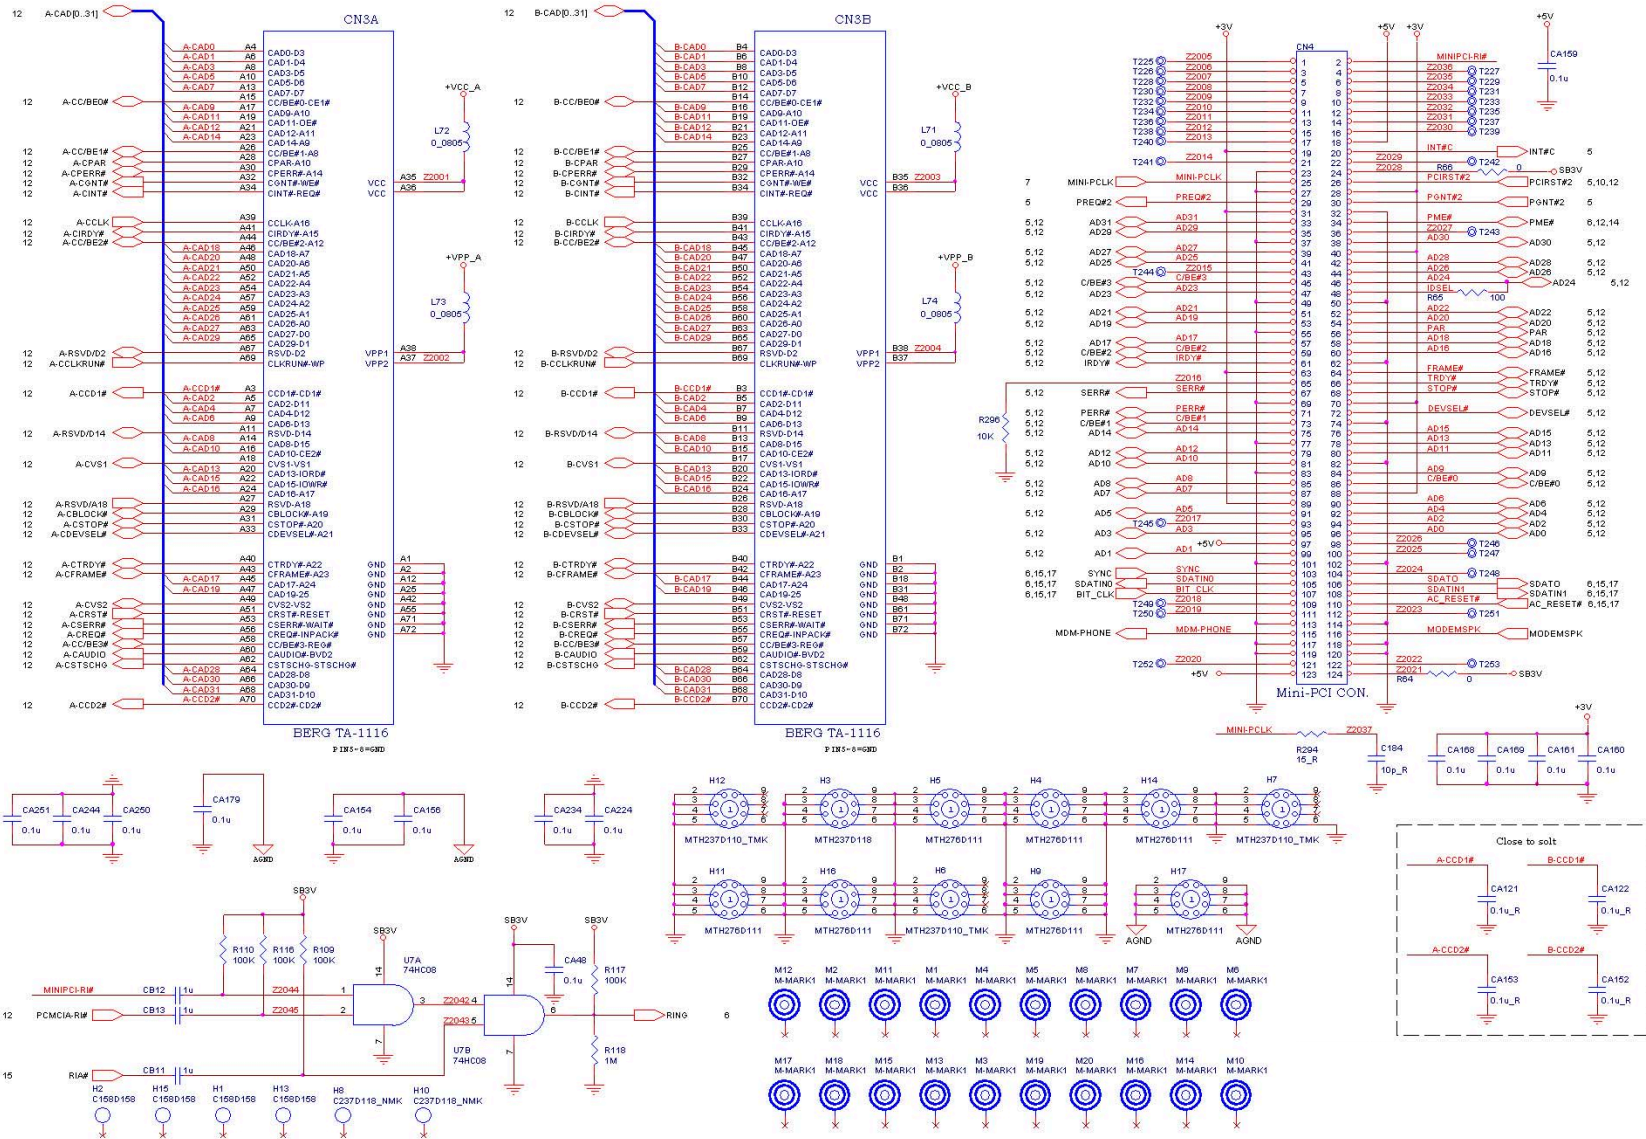


# INVERTER BOARD

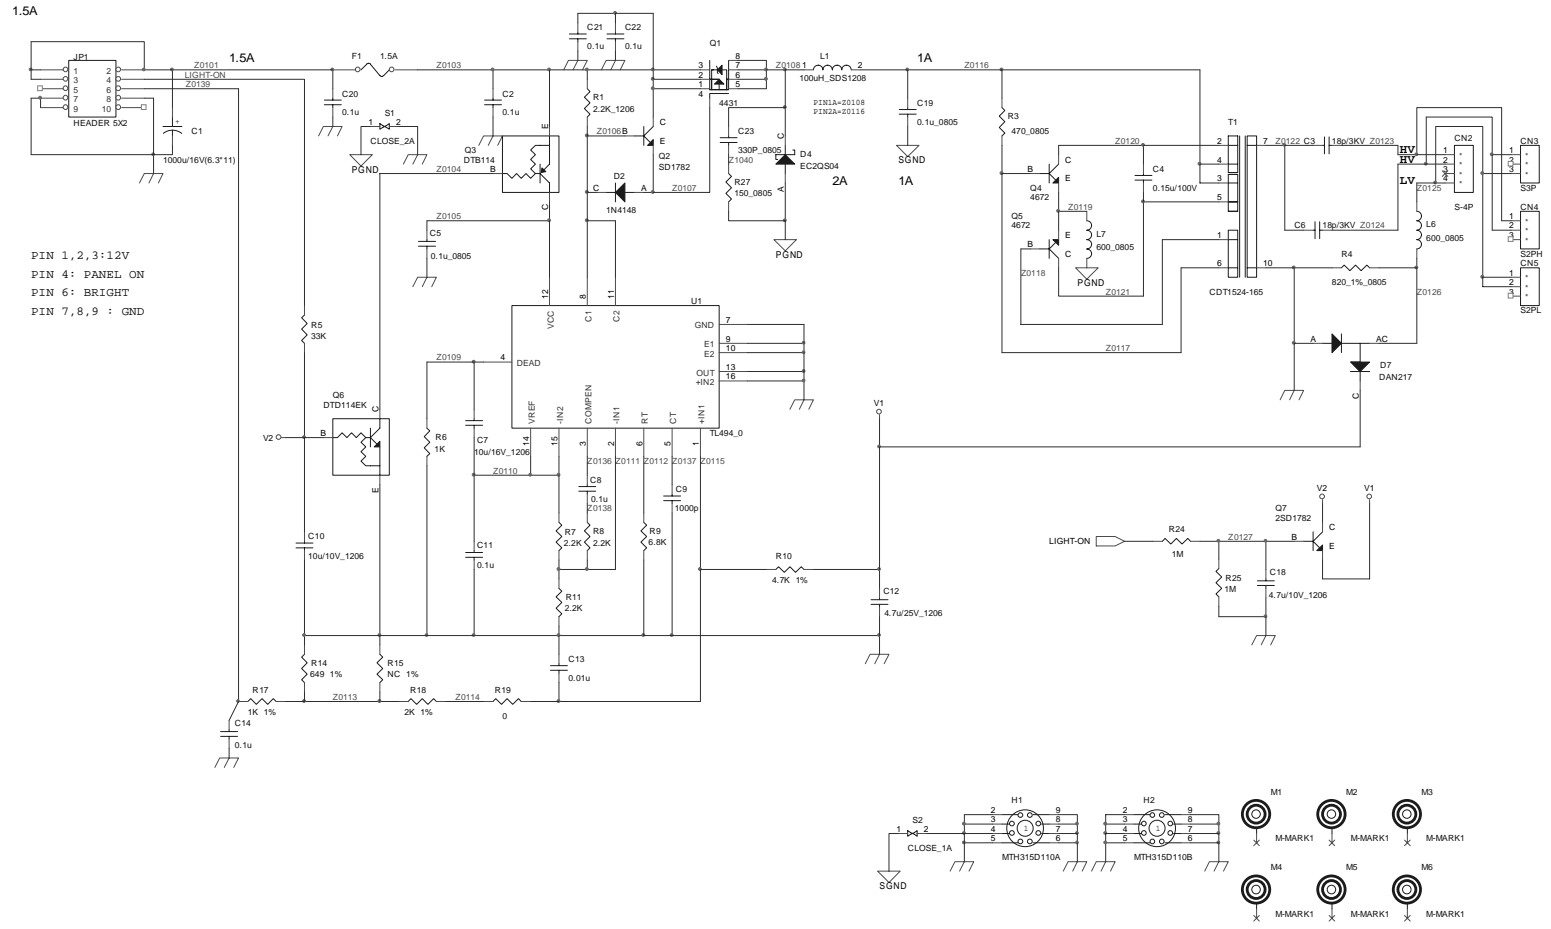






# LED + INVERTER BOARD

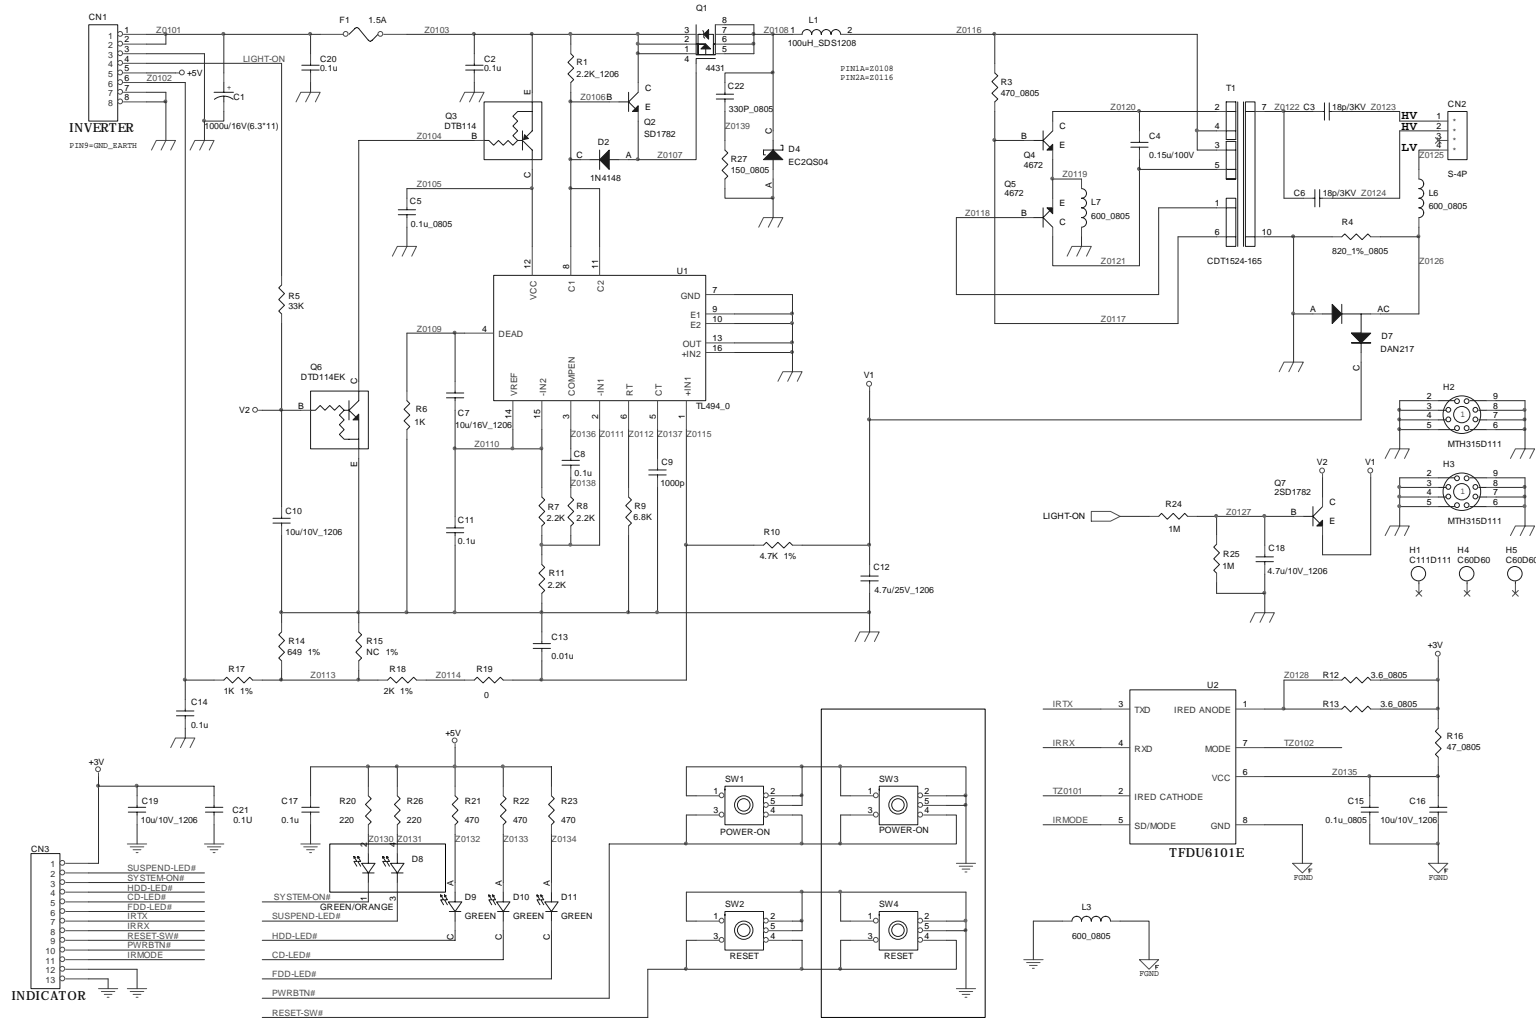

# CONVERTER BOARD (FOR HYUNDAI PANELS)

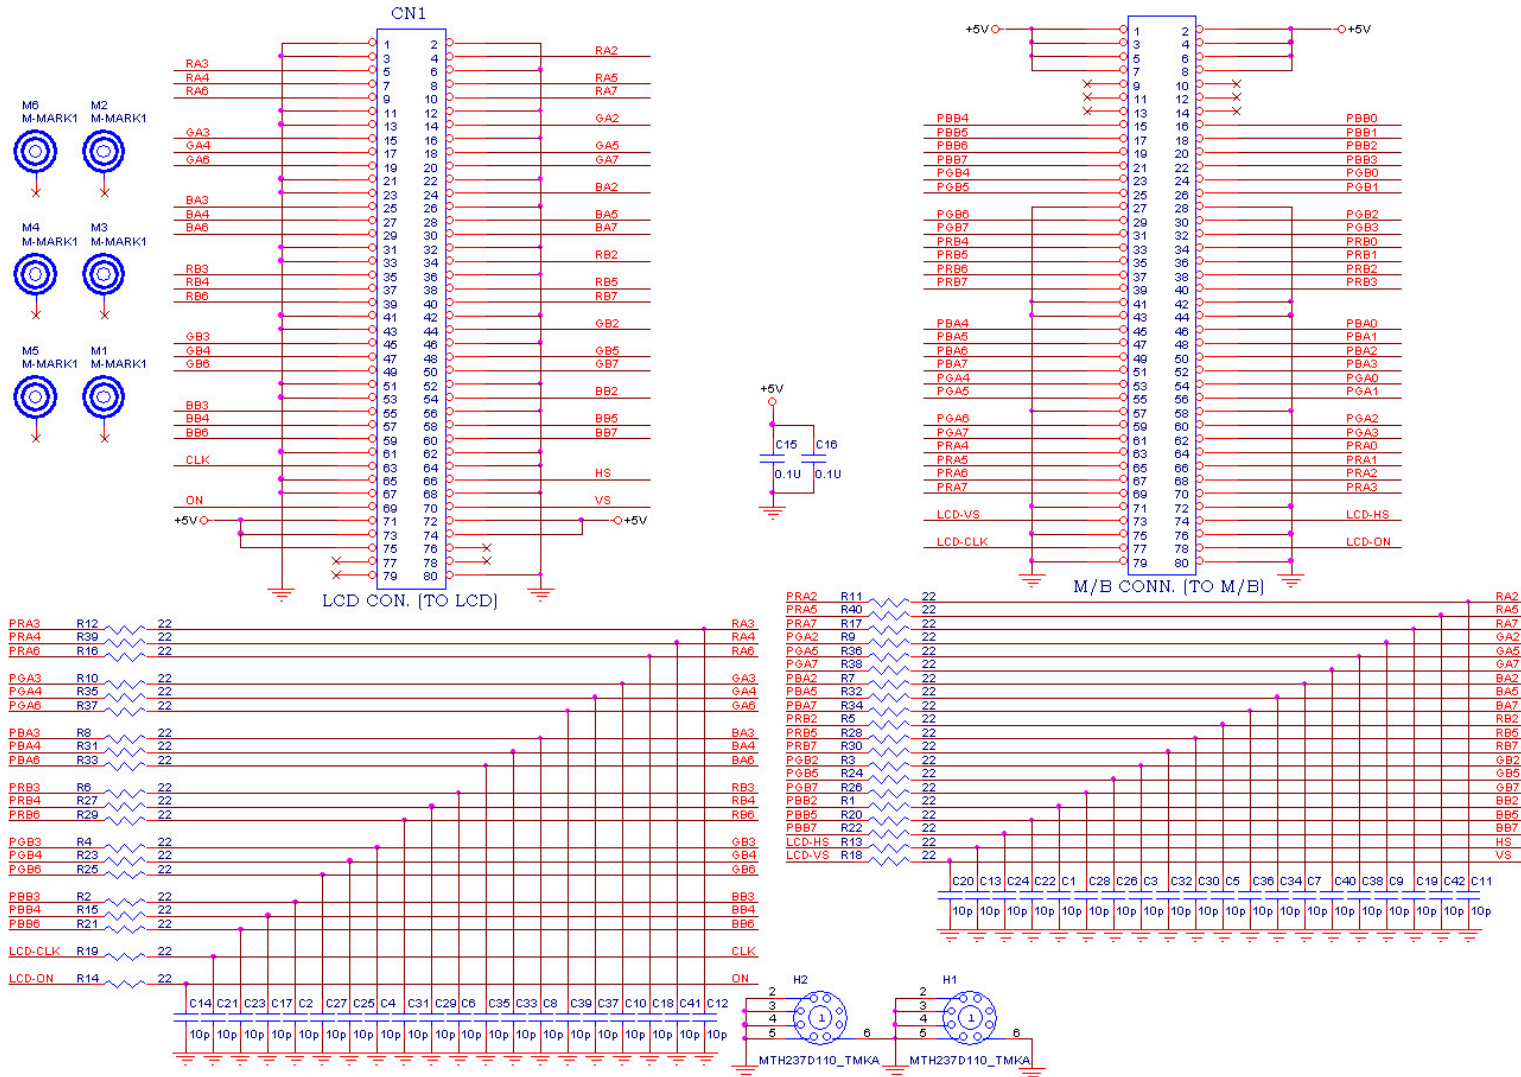


## CONVERTER BOARD (FOR LG PANELS)

 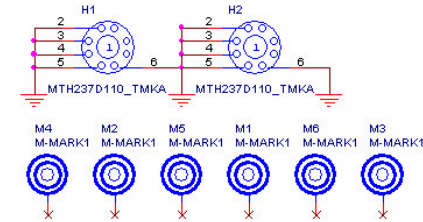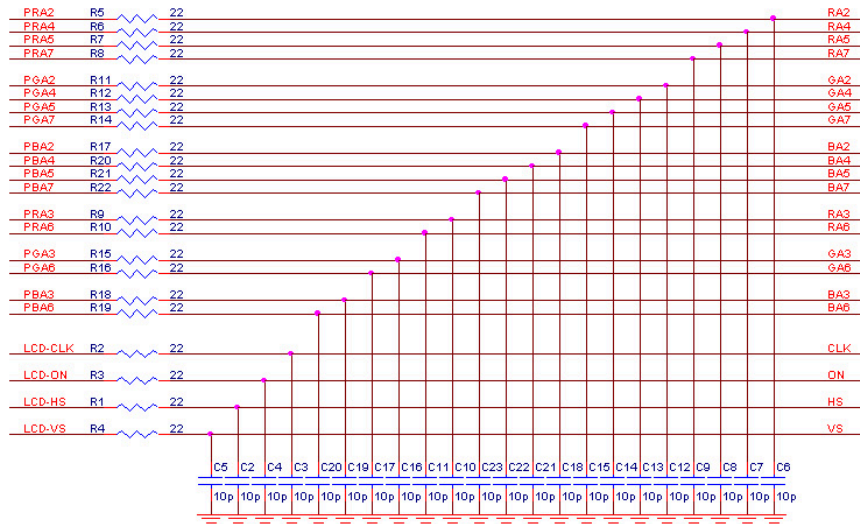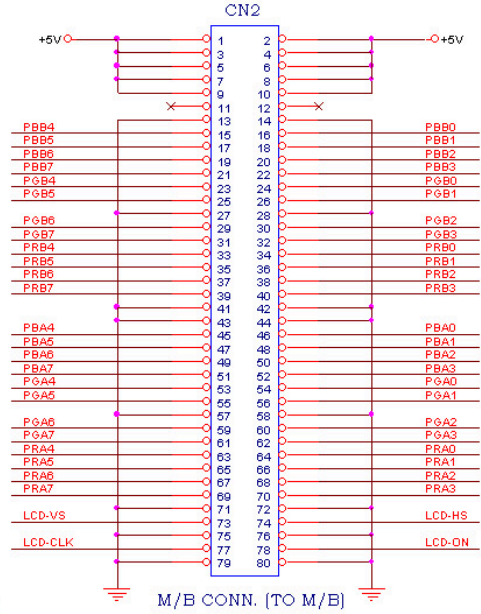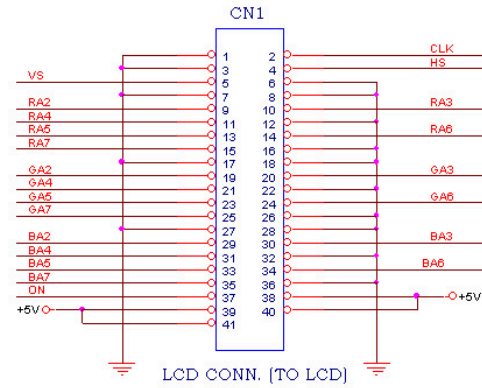




# IEEE1394 Extension Card (OPTIONAL)

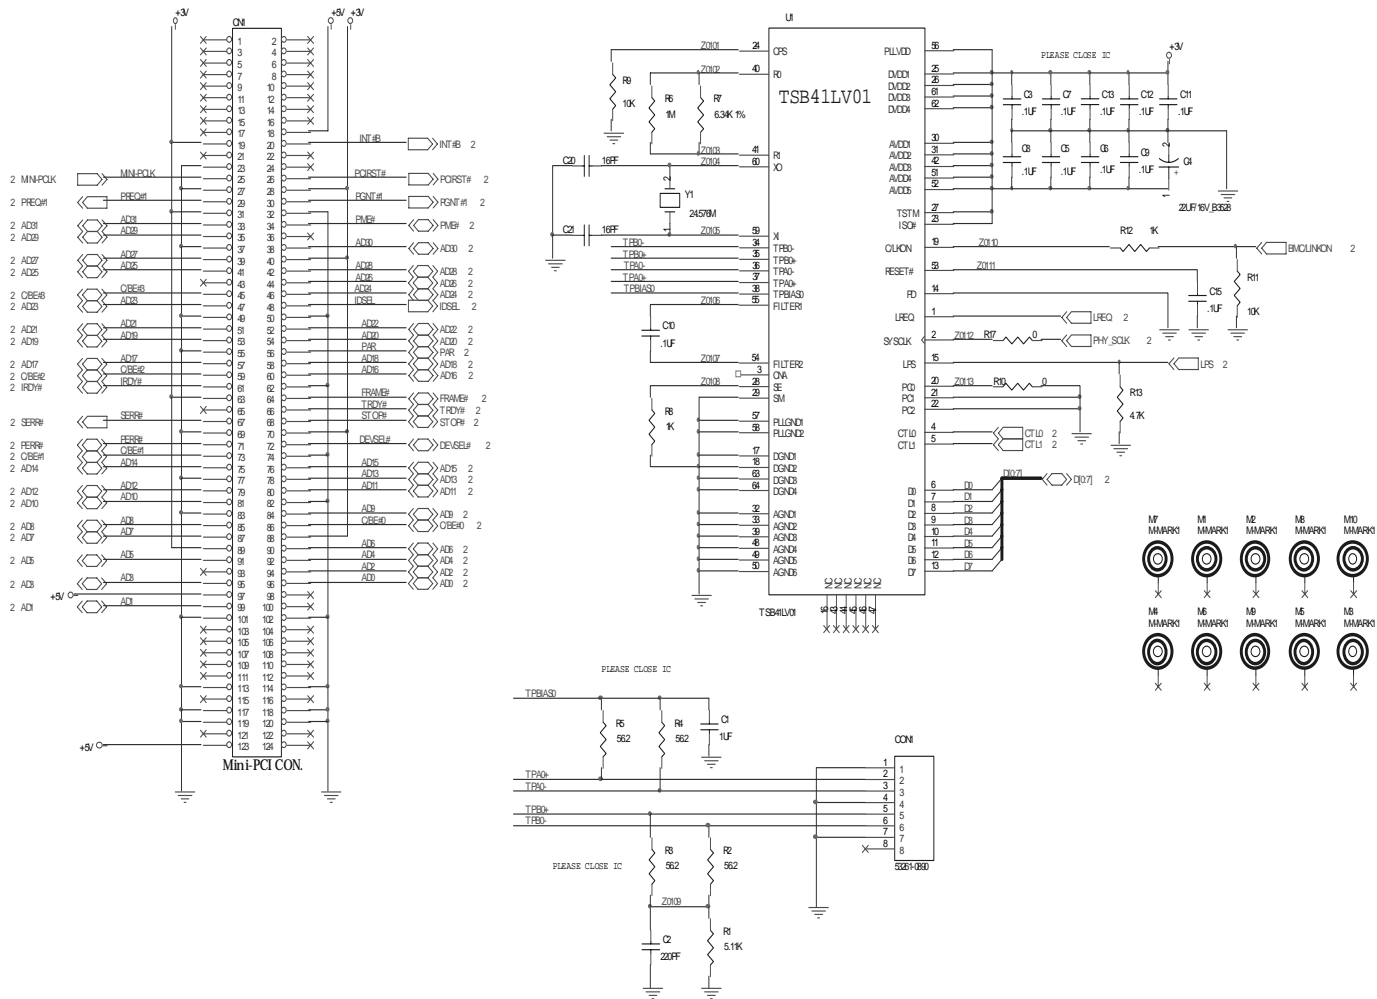

# EXTERNAL USB BOARD

(LP200SC only)

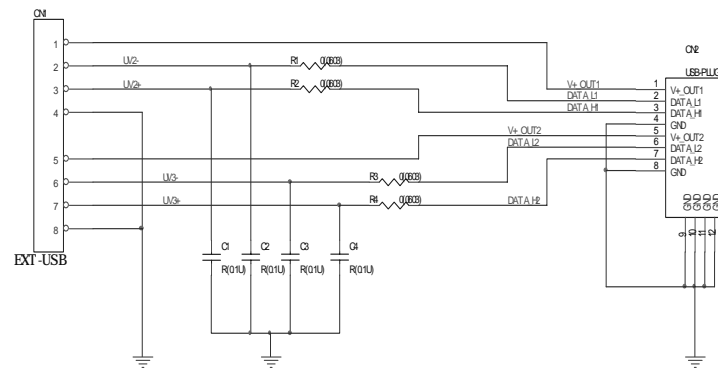

**NOTES:**

C