


## 2.1.2. CPU Voltage Selector : JP13, JP26.

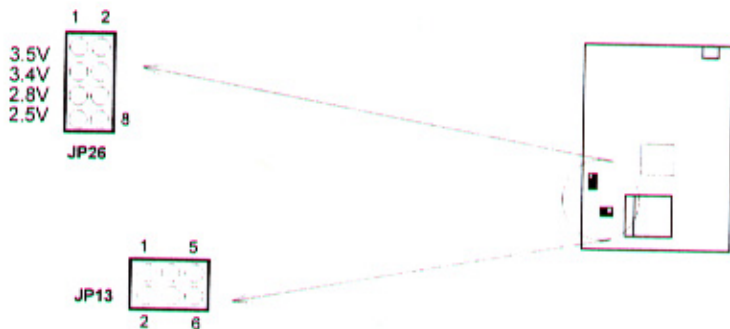

### 1. Single Power CPU : P54C, Cyrix 6x86, IBM 6x86, AMD K5.

Step 1. JP13 : 1-2 Close, 3-4 Close, 5-6 Close.

Step 2. JP26.

CPU Volt.	JP26
3.4 v	3-4 Close
3.5 v	1-2 Close

### 2. Dual Power CPU : P55C(MMX), Cyrix 6x86L/M2, IBM 6x86L/M2.

Step 1. JP13 : 1-2 Open, 3-4 Open, 5-6 Open.

Step 2. JP26.

CPU Core Volt.	JP26
2.5 v	7-8 Close
2.8 v	5-6 Close