

# ***SERVICE MANUAL***

**D400P / D410P**

*notebook*





**Notebook Computer**

**D400P/D410P**

**Service Manual**

### Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

Version 1.0  
February 2004

### Trademarks

**Intel**<sup>®</sup> and **Pentium**<sup>®</sup> are registered trademarks of Intel Corporation.

**Windows**<sup>®</sup> is a registered trademark of Microsoft Corporation.

Other brand and product names are trademarks and./or registered trademarks of their respective companies.

## About this Manual

This manual is intended for service personnel who have completed sufficient training to undertake the maintenance and inspection of personal computers.

It is organized to allow you to look up basic information for servicing and/or upgrading components of the *D400P/D410P* series notebook PC.

The following information is included:

Chapter 1, Introduction, provides general information about the location of system elements and their specifications.

Chapter 2, Disassembly, provides step-by-step instructions for disassembling parts and subsystems and how to upgrade elements of the system.

Appendix A, Part Lists

Appendix B, Schematic Diagrams

### Related Documents

You may also need to consult the following manual for additional information:

#### User's Manual on CD

This describes the notebook PC's features and the procedures for operating the computer and its ROM-based setup program. It also describes the installation and operation of the utility programs provided with the notebook PC.

## Contents

<b>Introduction .....</b>	<b>1-1</b>	Mainboard Overview - Top (Key Parts) .....	1-10
Overview .....	1-1	Mainboard Overview - Bottom (Key Parts) .....	1-11
System Specifications .....	1-2	Mainboard Overview - Top (Connectors) .....	1-12
Processor .....	1-2	Mainboard Overview - Bottom (Connectors) .....	1-13
Core Logic .....	1-2	<b>Disassembly .....</b>	<b>2-1</b>
Structure .....	1-2	Overview .....	2-1
Security .....	1-2	Maintenance Tools .....	2-2
Memory .....	1-2	Connections .....	2-2
BIOS .....	1-2	Maintenance Precautions .....	2-3
LCD Options .....	1-2	Cleaning .....	2-3
Display .....	1-2	Disassembly Steps .....	2-4
Storage Devices .....	1-3	Removing the Battery .....	2-8
Audio .....	1-3	Removing the Hard Disk Drive .....	2-9
Keyboard .....	1-3	Hard Disk Upgrade Process .....	2-9
Pointing Device .....	1-3	Removing the System Memory (RAM) .....	2-10
Interface .....	1-3	Memory Upgrade Process .....	2-10
PC Card .....	1-3	Removing the CD Device .....	2-12
Communication .....	1-3	Removing the Bluetooth Module .....	2-14
Power Management .....	1-4	Removing the Wireless LAN Module .....	2-15
Power .....	1-4	Removing the Processor .....	2-16
Indicators .....	1-4	Removing the Keyboard .....	2-18
Environmental Spec .....	1-4	Removing the Keyboard Shielding Plate .....	2-19
Physical Dimensions .....	1-4	Removing the LCD and Top Case .....	2-20
Weight .....	1-4	Removing the TouchPad and Click Board .....	2-22
Optional .....	1-4	Removing the Switch Board .....	2-23
Design Differences .....	1-5	Removing the Modem .....	2-24
External Locator - Top View .....	1-6	Removing the Speakers .....	2-25
External Locator - Front & Left Side Views .....	1-7	Removing the Mainboard .....	2-26
External Locator - Right Side & Rear Views .....	1-8	Removing the Fan Unit .....	2-27
External Locator - Bottom View .....	1-9	Removing the Floppy Disk Drive Assembly .....	2-28

## Preface

Removing the PC Card Assembly .....	2-29	Clock Generator .....	B-5
Removing the LCD Front Panel Module .....	2-30	M650 (Host/AGP) 1 of 4 .....	B-6
Removing the Inverter .....	2-31	M650 (Memory for DDR) 2 of 4 .....	B-7
Removing the PC Video Camera Module .....	2-32	M650 (& CRT Out) 3 of 4 .....	B-8
Removing the LCD Module .....	2-33	M650 (Power) 4 of 4 .....	B-9
<b>Part Lists .....</b>	<b>A-1</b>	DDR Memory DIMM .....	B-10
Part List Illustration Location .....	A-2	DDR SSTL-2 Termination .....	B-11
Top (400P) .....	A-3	LVDS Interface (SiS302LV) .....	B-12
Bottom (400P) .....	A-4	Panel Con & LED Indicator .....	B-13
LCD 14" (400P) .....	A-5	962 (PCI/IDE/HyperZip) 1 of 4 .....	B-14
LCD 15" (400P) .....	A-6	962 (Misc Signals) 2 of 4 .....	B-15
CD-ROM Drive (400P) .....	A-7	962 (USB I/F) 3 of 4 .....	B-16
CD-RW Drive (400P) .....	A-8	962 (Power & RTC) 4 of 4 .....	B-17
Combo Drive (400P) .....	A-9	HDD/Combo Connector .....	B-18
DVD-ROM Drive (400P) .....	A-10	USB Port .....	B-19
Floppy Disk Drive (400P) .....	A-11	PCMCIA ENE CB1410 .....	B-20
Hard Disk Drive (400P) .....	A-12	PCMCIA Power .....	B-21
Top (410P) .....	A-13	1394 PHY TSB41LV01 .....	B-22
Bottom (410P) .....	A-14	LPC Super I/O .....	B-23
LCD 14" (410P) .....	A-15	LPT/COM Port .....	B-24
LCD 15" (410P) .....	A-16	LPC H8 .....	B-25
CD-ROM Drive (410P) .....	A-17	LAN RTL8100BL .....	B-26
CD-RW Drive (410P) .....	A-18	Audio Codec ALC201A .....	B-27
Combo Drive (410P) .....	A-19	Audio Out & Off Board Connectors .....	B-28
DVD-ROM Drive (410P) .....	A-20	System Power Control .....	B-29
Floppy Disk Drive (410P) .....	A-21	Fan Control and SpeedStep .....	B-30
Hard Disk Drive (410P) .....	A-22	VCORE .....	B-31
<b>Schematic Diagrams.....</b>	<b>B-1</b>	DDR Power .....	B-32
System Block Diagram .....	B-2	System .....	B-33
Socket 478 1 of 2 .....	B-3	Charger .....	B-34
Socket 478 & ITP 2 of 2 .....	B-4	SW Board and HotKey .....	B-35
		TouchPad and Switch Board .....	B-36




# 1: Introduction

## Overview

This manual covers the information you need to service or upgrade the **D400P/D410P** series notebook computer. Information about operating the computer (e.g. getting started, and the *Setup* utility) is in the *User's Manual*. Information about drivers (e.g. VGA & audio) is also found in *User's Manual*. That manual is shipped with the computer.

Operating systems (e.g. *DOS*, *Windows 9x*, *Windows NT 4.0*, *Windows 2000*, *Windows XP*, *OS/2 Warp*, *UNIX*, etc.) have their own manuals as do application software (e.g. word processing and database programs). If you have questions about those programs, you should consult those manuals.

The **D400P/D410P** series notebook is designed to be upgradeable. See ***“Disassembly” on page 2 - 1*** for a detailed description of the upgrade procedures for each specific component. Please note the warning and safety information indicated by the “” symbol.

The balance of this chapter reviews the computer's technical specifications and features.

# System Specifications

## Processor

- Intel Pentium 4 Processor - (478-pin) FC-PGA2 package  
( $\mu$ 0.13) 0.13 Micron Process Technology, 512KB L2  
Cache & 400MHz FSB - 2.0/ 2.2/ 2.4/ 2.5/ 2.6 GHz  
( $\mu$ 0.13) 0.13 Micron Process Technology, 512KB L2  
Cache & 533MHz FSB - 2.26/ 2.4/ 2.53/ 2.66/ 2.8/ **3.06\***  
GHz

\* Only Pentium 4 processors of **3.06GHz** support **Hyper-Threading Technology**

- Intel Celeron Processor - (478-pin) FC-PGA2 package  
( $\mu$ 0.18) 0.18 Micron Process Technology, 128KB L2  
Cache & 400MHz FSB - 1.7/ 1.8 GHz  
( $\mu$ 0.13) 0.13 Micron Process Technology, 128KB L2  
Cache & 400MHz FSB - 2.0/ 2.1/ 2.2 GHz
- Mobile Intel Pentium 4 Processor (Portability) - (478-pin)  
FC-PGA2 package  
( $\mu$ 0.13) 0.13 Micron Process Technology, 512KB L2  
Cache & 533MHz FSB - 2.26/ 2.4/ 2.66/ 2.8/ 3.06 GHz  
( $\mu$ 0.13) 0.13 Micron Process Technology, 512KB L2  
Cache & 533MHz FSB with **Hyper-Threading Technol-**  
**ogy** - 2.66/ 2.8/ 3.06 GHz

## Core Logic

- SIS M650 + 962

## Structure

- PC99 compliant

## Security

- Security (Kensington® Type) Lock
- BIOS Password

## Memory

- Two 200-pins DDR SODIMM sockets, supporting DDR  
SDRAM SODIMM (2.5V)  
- DDR 200/ DDR 266/ DDR 333 compliant
- Memory expandable up to 1024MB (128/256/512MB  
SODIMM Modules)

## BIOS

- One 512KB Flash ROM
- Phoenix BIOS

## LCD Options

- 14.1" XGA TFT (1024\*768)
- 15.0" XGA TFT (1024\*768)
- 15.0" SXGA+ TFT(1400\*1050)

## Display

- High Performance 256-bit 3D engine
- Advanced HW accelerator for DVD playback
- Fully Direct X 8.0 compliant graphics engine
- Dual-View display monitor



### Video Memory

The system allocates or "shares" a portion of system memory for video use. "Shared" memory is user-configurable via the SCU. The default setting is set to 32MB.

## Storage Devices

- 3.5" 3-mode **Floppy Disk Drive**
- Easy changeable 2.5" 9.5 mm (h) Hard Disk Drive
  - Supporting Master mode IDE
  - Supports PIO mode 4
  - ATA-33/66/100/133
  - Ultra DMA
- 12.7mm(h) **Device Bay** for **ONE** of the following drive configuration options:
  - CD-ROM
  - DVD-ROM
  - CD-RW
  - Combination CD-RW/DVD-ROM

## Audio

- AC'97 2.1 compliant interface
- 3D stereo enhanced sound system
- Compatible with Sound-Blaster PRO™
- S/PDIF Digital output (5.1 CH) for DVD content and stereo audio
- Microphone-in jack
- Headphone-out jack
- Built-in microphone
- 2 built-in speakers

## Keyboard

- “Win Key” keyboard

## Pointing Device

- Built-in TouchPad (scrolling key functionality integrated)

## Interface

- Three USB 2.0/ 1.1 ports
- One Mini-IEEE 1394 port
- One S-Video Out port for TV output
- One serial port
- One parallel port (LPT1), supporting ECP / EPP
- One external CRT monitor port
- One external keyboard/mouse (through Y cable) PS/2 port
- One speaker-out/headphone-out jack
- One microphone-in jack
- One RJ-11 jack for modem
- One RJ-45 jack for 100M/10M LAN
- One S/PDIF Out port
- One DC-in jack
- Wireless module On/Off switch
- Built-in 3 instant keys: WWW, email, and application

## PC Card

- One type II PCMCIA 3.3V/5V socket supporting CardBus

## Communication

- 10/100Mb Ethernet LAN built-in
- 56K MDC modem V.90 & V.92 compliant
- 802.11b wireless LAN module (available as a factory option)
- Bluetooth module (available as a factory option)
- PC Camera module (available as a factory option)

## Introduction

---

### Power Management

- Supports ACPI v1.0b
- Supports suspend to RAM (S3)
- Supports suspend to disk (S4)
- Supports Battery low suspend
- Supports resume from modem ring

### Power

- Full range AC adapter
- AC-Input 100~240V, 50~60Hz
- DC Output 20V, 6A
- Supports one removable Smart Li-Ion battery

### Indicators

- LED indicators (HDD, Power On/ AC-In/ Suspend, Battery Charging/Battery Full, Num Lock, Caps Lock, Scroll Lock, E-mail)

### Environmental Spec

- Temperature  
Operating: 5°C ~ 35°C (w/o packing)  
Non-Operating: -20°C ~ 60°C (packing)
- Relative Humidity  
Operating: 20% ~ 80%  
Non-Operating: 10% ~ 90%

### Physical Dimensions

- 329 (w) x 275 (d) x 36.5 (h) mm

### Weight

- Around 2.8 kg (depend on optional modules included) without battery

### Optional

- DVD-ROM Drive
- CD-RW Drive
- Combination Drive
- DVD-RW Drive
- Software DVD player
- Wireless LAN module
- Bluetooth module
- Video Camera

## Design Differences

This manual refers to the two notebook designs pictured below. The designs vary slightly in external design. Photographs used throughout this manual are of Design I.



Design I




Design II

*Figure 1*  
Design Differences


## External Locator - Top View

Figure 2  
Top View

1. Optional Built-in USB Camera
2. LCD
3. Built-In Microphone
4. LED Power & Communication Indicators
5. LED Status Indicators
6. Hot-Key buttons
7. Close Cover Switch
8. Power Button
9. Keyboard
10. TouchPad and Buttons

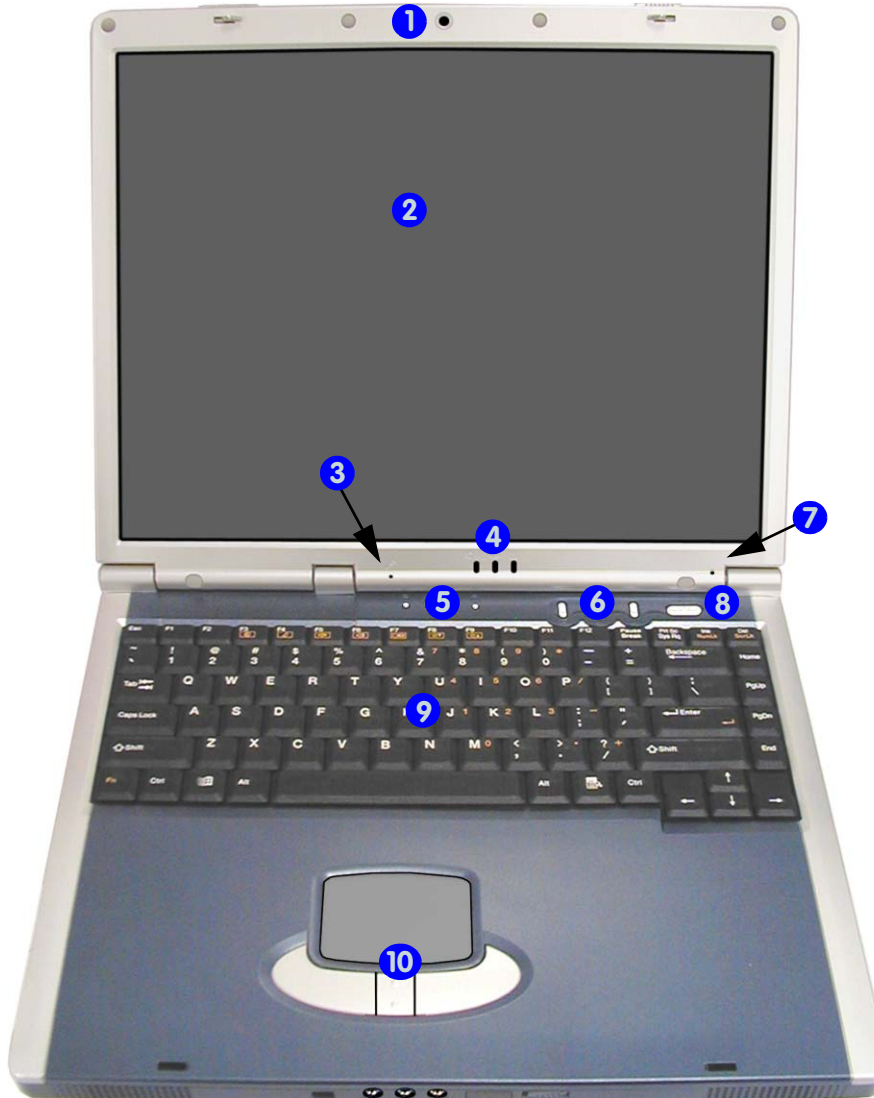

## External Locator - Front &amp; Left Side Views

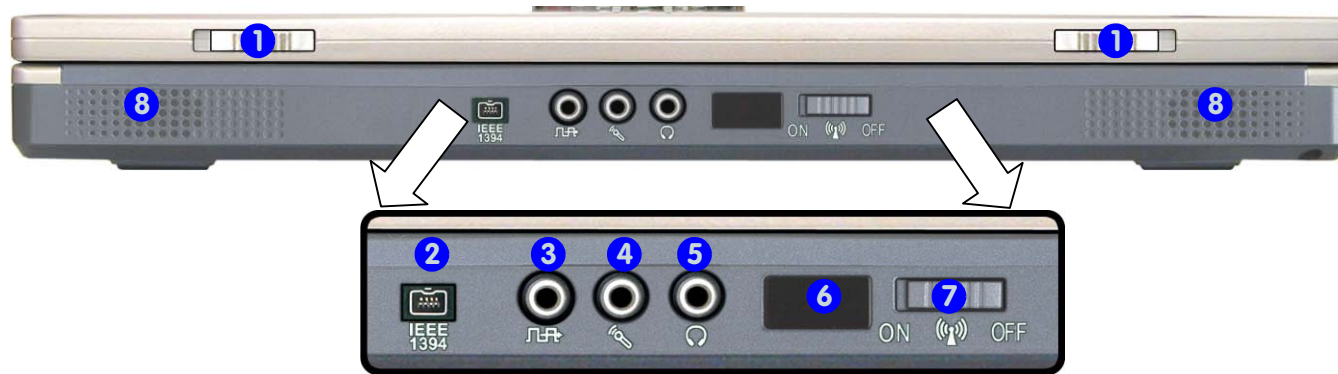

*Figure 3*  
**Front View**

1. LCD Latches
2. Mini IEEE 1394 Port
3. S/PDIF Out Port
4. Microphone Jack
5. Headphone Jack
6. Infrared Transceiver
7. Wireless Module ON/OFF Switch
8. Built-In Speakers



*Figure 4*  
**Left Side View**

1. CD-ROM Bezel or CD-ROM Device
2. USB 2.0/1.1 Port
3. Floppy Disk Drive
4. PC Card/PCMCIA Slot
5. PC Card/PCMCIA Slot Eject Buttons




## Introduction

# External Locator - Right Side & Rear Views

*Figure 5*  
**Right Side View**

1. Security Lock Slot

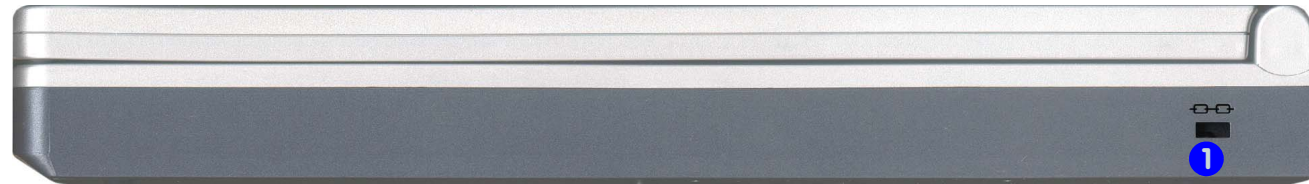


*Figure 6*  
**Rear View**

1. Vent
2. DC-In Jack
3. 2 \* USB Ports
4. External Monitor (CRT) Port
5. Parallel Port
6. Serial Port
7. S-Video-Out Port
8. PS/2 Type Port
9. RJ-11 Phone Jack
10. RJ-45 LAN Jack





## External Locator - Bottom View

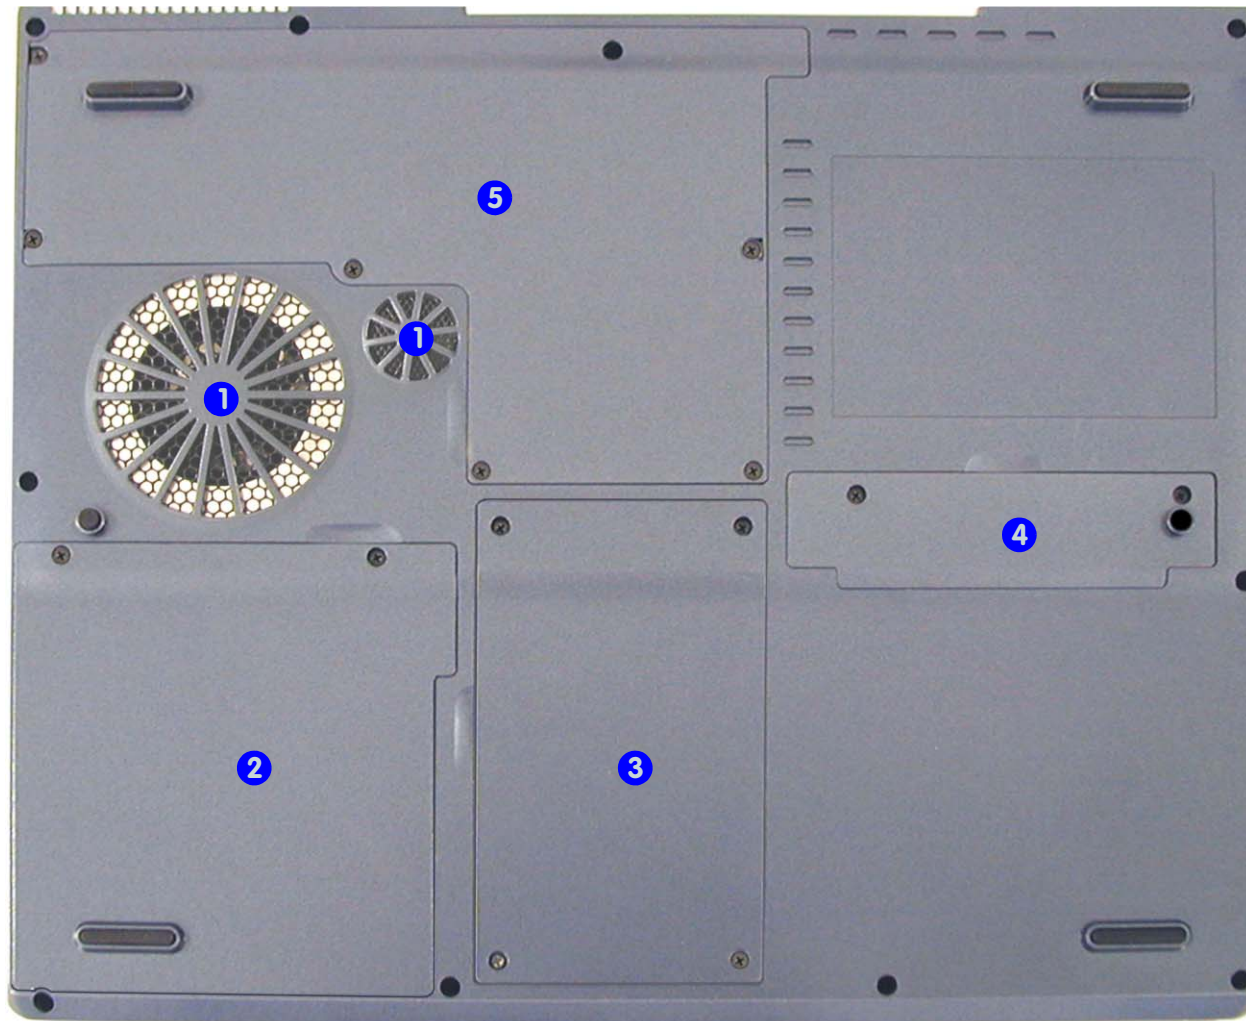

*Figure 7*  
**Bottom View**


1. Vent/Fan Intake
2. Battery Cover
3. Hard Disk Cover
4. Bluetooth Module Cover
5. CPU Heatsink Cover

**Note:** The RAM and optional Wireless LAN module are located under the CPU Heatsink Cover

## Mainboard Overview - Top (Key Parts)


*Figure 8*  
**Mainboard Top  
Key Parts**

1. PC Card Assembly
2. Northbridge - SiS M650
3. Southbridge - SiS 962
4. Flash ROM BIOS

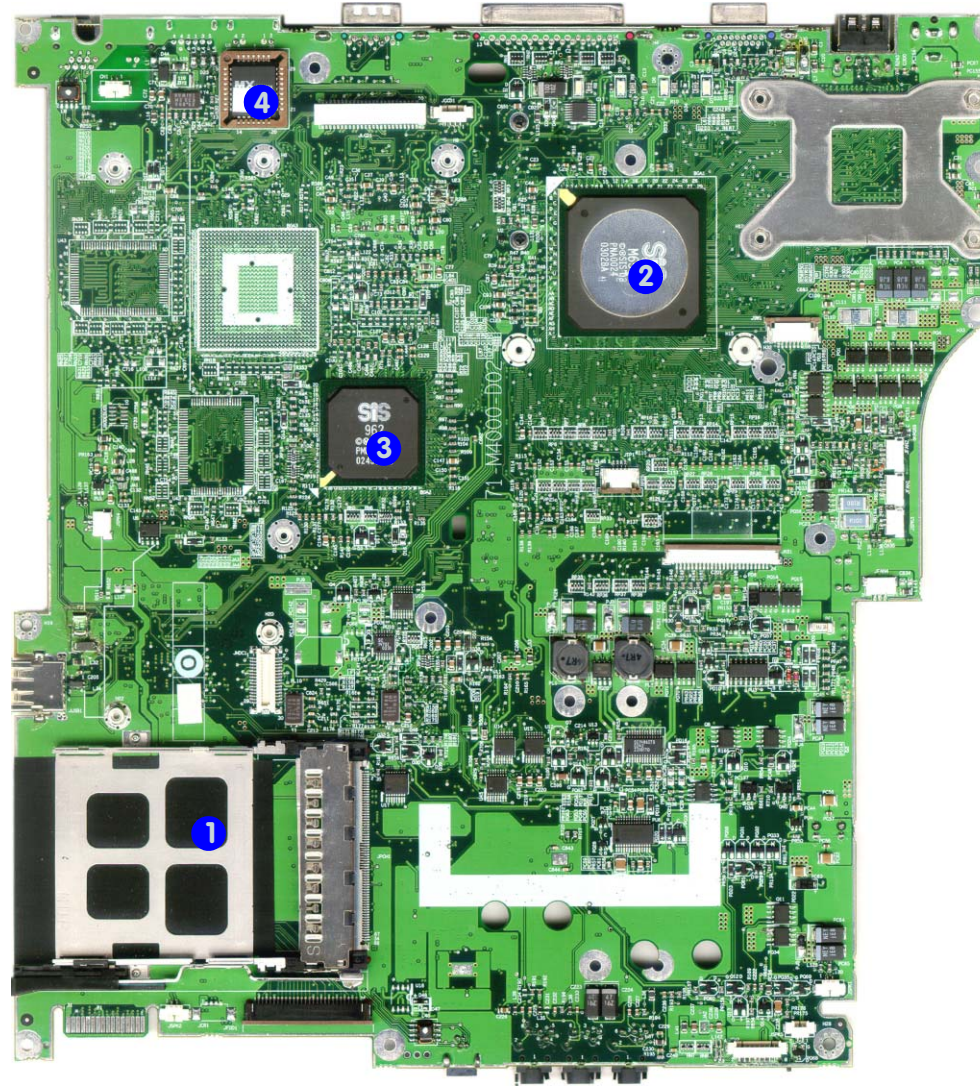



## Mainboard Overview - Bottom (Key Parts)

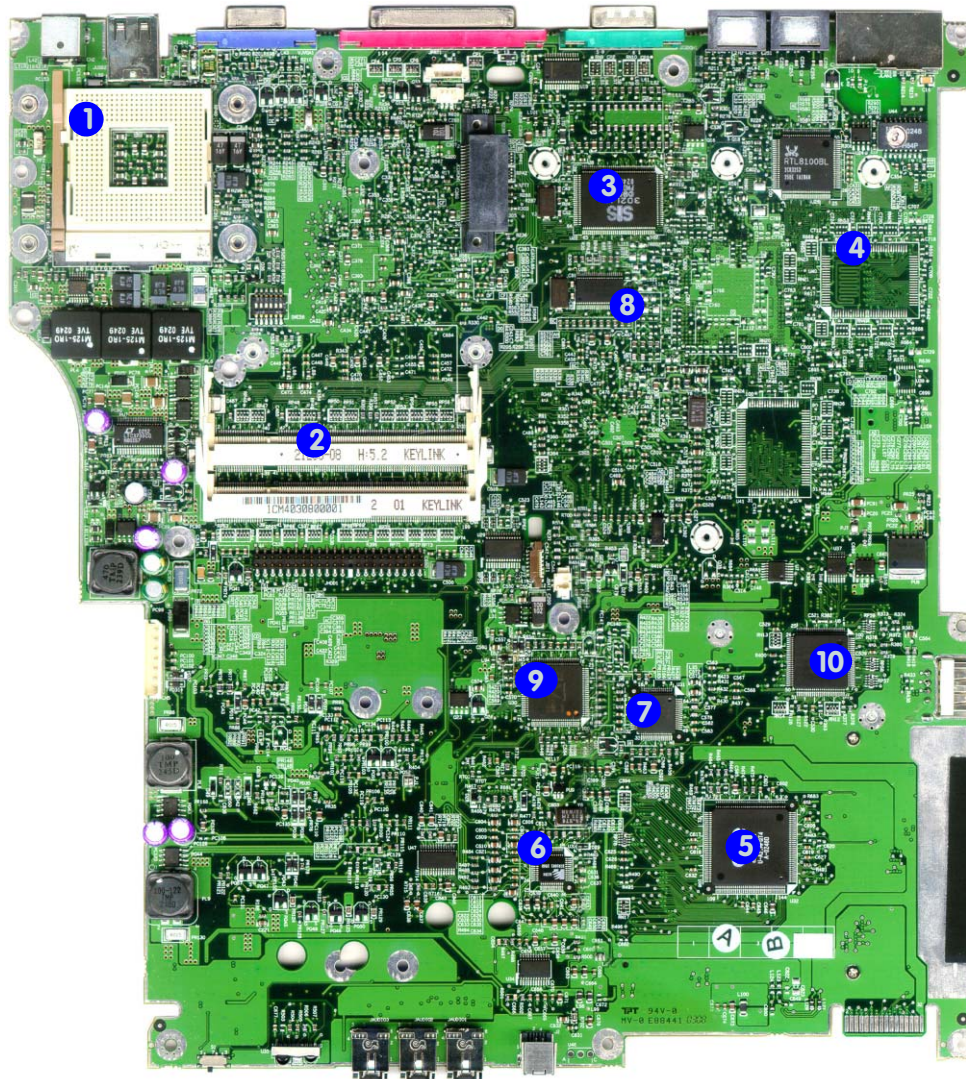

*Figure 9*  
**Mainboard Bottom  
Key Parts**

1. CPU Socket (no CPU installed)
2. Memory Sockets (no memory installed)
3. SiS 302LV TV-Out Controller
4. LAN Controller RTL8100BL
5. CardBus ENE CB1410
6. ALC202 - Audio Codec
7. 1394 PHY TSB41AB1
8. Clock Generator
9. Keyboard Controller - KBC H8 H8S-2149 HM
10. LPC Super I/O NS PC87393




## Introduction

*Figure 10*  
**Mainboard Top  
Connectors**


## Mainboard Overview - Top (Connectors)

1. Modem Cable Connector (CN1)
2. LCD and Inverter Cable Connector (JLCD1)
3. Video Camera Module Connector (JCCD1)
4. Switch Board Cable Connector (JSW1)
5. Fan Cable Connector (JFAN1)
6. TouchPad Cable Connector (JTP1)
7. Keyboard Cable Connector (JKB1)
8. Modem Module Connector (JMDC1)
9. Speaker Cable Connector (JSPK1)
10. Floppy Disk Cable Controller (JFDD1)
11. Speaker Cable Connector (JSPK2)

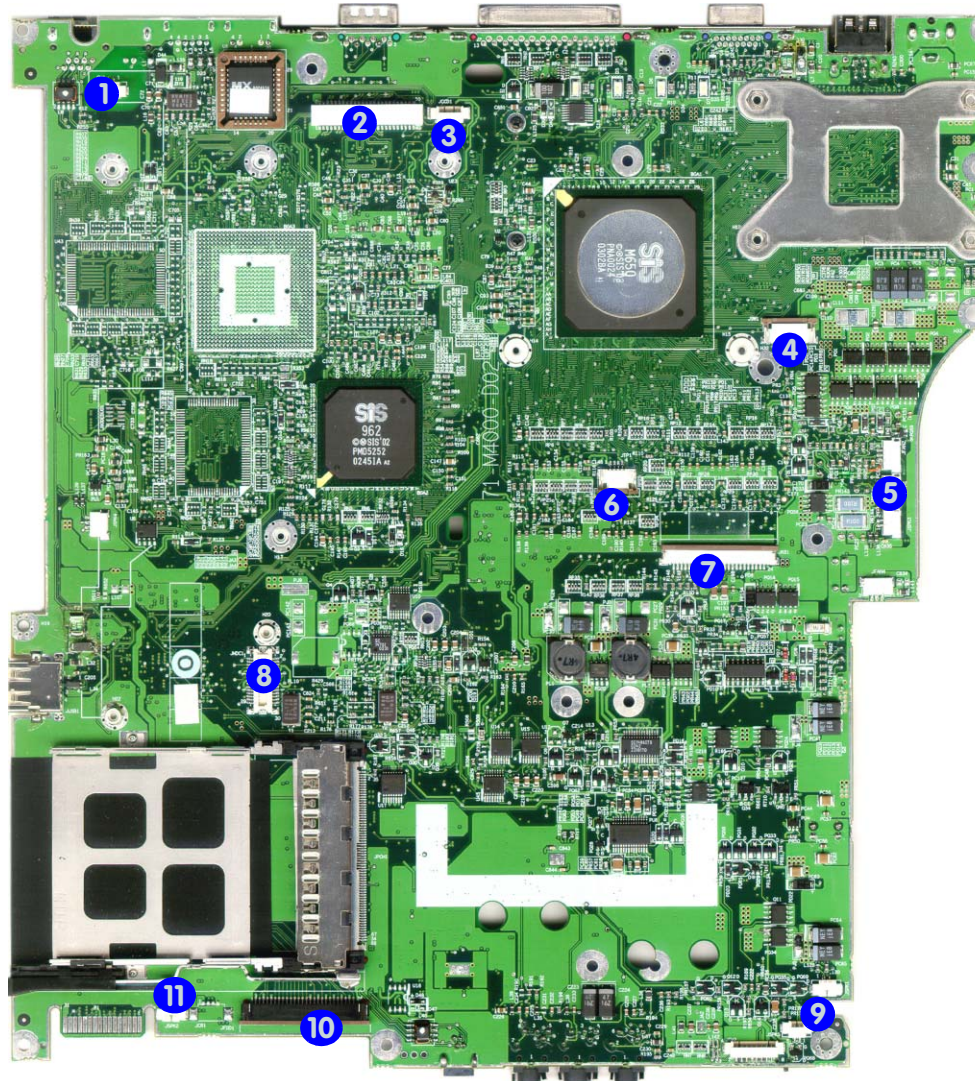



## Mainboard Overview - Bottom (Connectors)

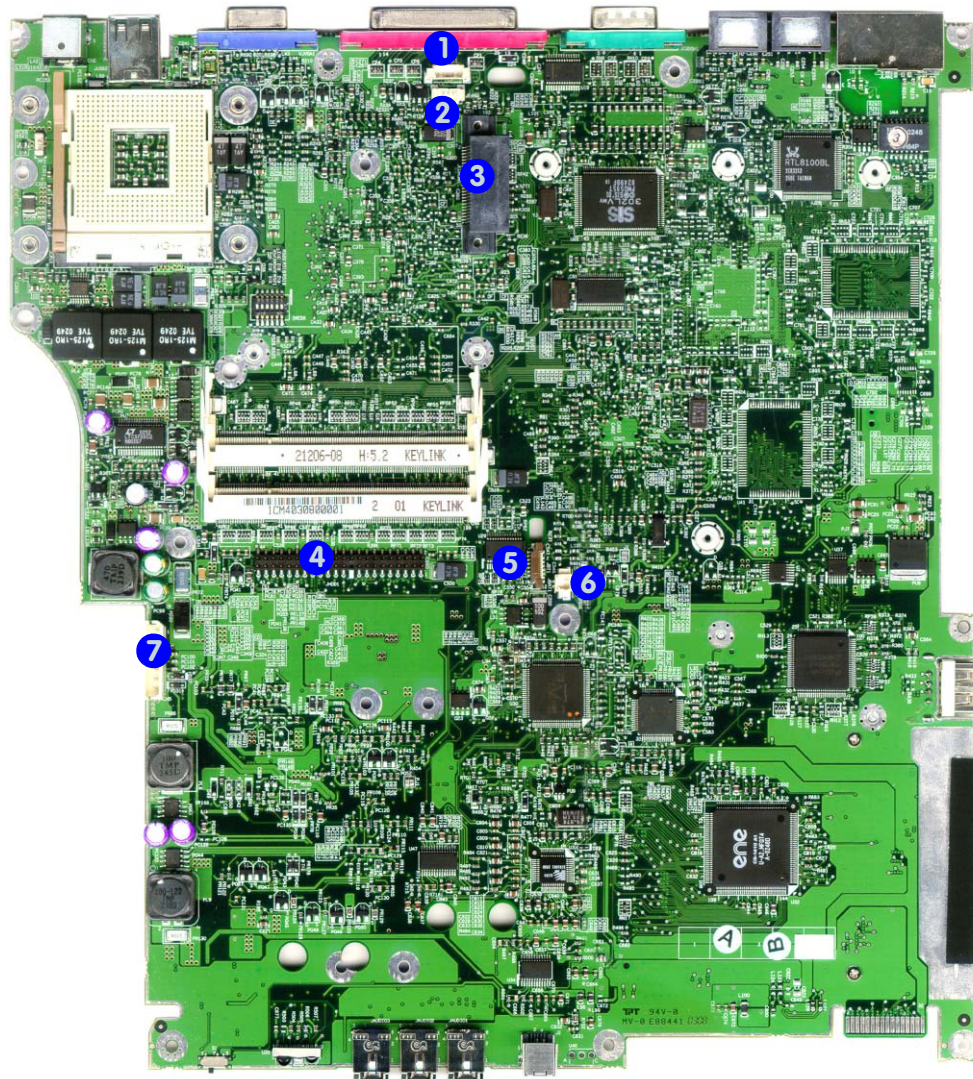

*Figure 11*  
**Mainboard Bottom  
Connectors**

1. Wireless LAN Cable Connector (JWL1)
2. Fan Cable Connector (JFAN2)
3. CD Device Connector (JCDROM1)
4. Hard Disk Cable Connector (JHDD1)
5. Bluetooth Module Connector (JBT1)
6. CMOS Battery Cable Connector (JBAT1)
7. Battery Cable Connector (CN5)




# 2: Disassembly



## Overview

This chapter provides step-by-step instructions for disassembling the **D400P/D410P** series notebook's parts and sub-systems. When it comes to reassembly, reverse the procedures (unless otherwise indicated).



We suggest you completely review any procedure before you take the computer apart.

Procedures such as upgrading/replacing the RAM, CD device and hard disk are included in the User's Manual but are repeated here for your convenience.

To make the disassembly process easier each section may have a box in the page margin. Information contained under the figure # will give a synopsis of the sequence of procedures involved in the disassembly procedure. A box with a  lists the relevant parts you will have after the disassembly process is complete. **Note:** The parts listed will be for the disassembly procedure listed ONLY, and not any previous disassembly step(s) required. Refer to the part list for the previous disassembly procedure. The amount of screws you should be left with will be listed here also.

A box with a  will provide any possible helpful information. A box with a  contains warnings.

An example of these types of boxes are shown in the sidebar.

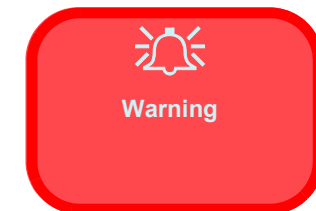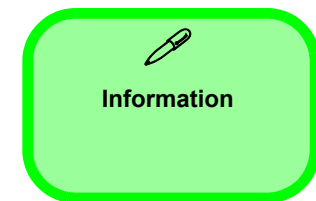

## Disassembly

---

**NOTE:** All disassembly procedures assume that the system is turned **OFF**, and disconnected from any power supply (the battery is removed too).

### Maintenance Tools

The following tools are recommended when working on the notebook PC:

- M3 Philips-head screwdriver
- M2.5 Philips-head screwdriver (magnetized)
- M2 Philips-head screwdriver
- Small flat-head screwdriver
- Pair of needle-nose pliers
- Anti-static wrist-strap

### Connections

Connections within the computer are one of four types:

Locking collar sockets for ribbon connectors	To release these connectors, use a small flat-head screwdriver to gently pry the locking collar away from its base. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Pressure sockets for multi-wire connectors	To release this connector type, grasp it at its head and gently rock it from side to side as you pull it out. Do not pull on the wires themselves. When replacing the connection, do not try to force it. The socket only fits one way.
Pressure sockets for ribbon connectors	To release these connectors, use a small pair of needle-nose pliers to gently lift the connector away from its socket. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.
Board-to-board or multi-pin sockets	To separate the boards, gently rock them from side to side as you pull them apart. If the connection is very tight, use a small flat-head screwdriver - use just enough force to start.



## Maintenance Precautions

The following precautions are a reminder. To avoid personal injury or damage to the computer while performing a removal and/or replacement job, take the following precautions:

1. **Don't drop it.** Perform your repairs and/or upgrades on a stable surface. If the computer falls, the case and other components could be damaged.
2. **Don't overheat it.** Note the proximity of any heating elements. Keep the computer out of direct sunlight.
3. **Avoid interference.** Note the proximity of any high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage components and/or data. You should also monitor the position of magnetized tools (i.e. screwdrivers).
4. **Keep it dry.** This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.
5. **Be careful with power.** Avoid accidental shocks, discharges or explosions.
  - Before removing or servicing any part from the computer, turn the computer off and detach any power supplies.
  - When you want to unplug the power cord or any cable/wire, be sure to disconnect it by the plug head. Do not pull on the wire.
6. **Peripherals** – Turn off and detach any peripherals.
7. **Beware of static discharge.** ICs, such as the CPU and main support chips, are vulnerable to static electricity. Before handling any part in the computer, discharge any static electricity inside the computer. When handling a printed circuit board, do not use gloves or other materials which allow static electricity buildup. We suggest that you use an anti-static wrist strap instead.
8. **Beware of corrosion.** As you perform your job, avoid touching any connector leads. Even the cleanest hands produce oils which can attract corrosive elements.
9. **Keep your work environment clean.** Tobacco smoke, dust or other air-borne particulate matter is often attracted to charged surfaces, reducing performance.
10. **Keep track of the components.** When removing or replacing any part, be careful not to leave small parts, such as screws, loose inside the computer.

## Cleaning

Do not apply cleaner directly to the computer, use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.



### Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

## Disassembly Steps

The following table lists the disassembly steps, and on which page to find the related information. **PLEASE PERFORM THE DISASSEMBLY STEPS IN THE ORDER INDICATED.**

### To remove the Battery:

1. Remove the battery [page 2 - 8](#)

### To remove the HDD:

1. Remove the battery [page 2 - 8](#)
2. Remove the HDD [page 2 - 9](#)

### To remove the System Memory:

1. Remove the battery [page 2 - 8](#)
2. Remove the system memory [page 2 - 10](#)

### To remove the CD Device:

1. Remove the battery [page 2 - 8](#)
2. Remove the CD Device [page 2 - 12](#)

### To remove the Bluetooth Module:

1. Remove the battery [page 2 - 8](#)
2. Remove the Bluetooth module [page 2 - 14](#)

### To remove the Wireless LAN Module:

1. Remove the battery [page 2 - 8](#)
2. Remove the Wireless LAN module [page 2 - 15](#)

### To remove the Processor:

1. Remove the battery [page 2 - 8](#)
2. Remove the processor [page 2 - 16](#)

### To remove the Keyboard:

1. Remove the battery [page 2 - 8](#)
2. Remove the keyboard [page 2 - 18](#)

### To remove the Keyboard Shielding Plate:

1. Remove the battery [page 2 - 8](#)
2. Remove the keyboard [page 2 - 18](#)
3. Remove the keyboard shielding plate [page 2 - 19](#)

### To remove the LCD and Top Case:

1. Remove the battery [page 2 - 8](#)
2. Remove the HDD [page 2 - 9](#)
3. Remove the system memory [page 2 - 10](#)
4. Remove the CD Device [page 2 - 12](#)
5. Remove the Bluetooth module [page 2 - 14](#)
6. Remove the Wireless LAN module [page 2 - 15](#)
7. Remove the processor [page 2 - 16](#)
8. Remove the keyboard [page 2 - 18](#)
9. Remove the keyboard shielding plate [page 2 - 19](#)
10. Remove the LCD & top case [page 2 - 20](#)

**To remove the TouchPad and Click Board:**

1. Remove the battery *page 2 - 8*
2. Remove the HDD *page 2 - 9*
3. Remove the system memory *page 2 - 10*
4. Remove the CD Device *page 2 - 12*
5. Remove the Bluetooth module *page 2 - 14*
6. Remove the Wireless LAN module *page 2 - 15*
7. Remove the processor *page 2 - 16*
8. Remove the keyboard *page 2 - 18*
9. Remove the keyboard shielding plate *page 2 - 19*
10. Remove the LCD & top case *page 2 - 20*
11. Remove the touchpad and click board *page 2 - 22*

**To remove the Switch Board:**

1. Remove the battery *page 2 - 8*
2. Remove the HDD *page 2 - 9*
3. Remove the system memory *page 2 - 10*
4. Remove the CD Device *page 2 - 12*
5. Remove the Bluetooth module *page 2 - 14*
6. Remove the Wireless LAN module *page 2 - 15*
7. Remove the processor *page 2 - 16*
8. Remove the keyboard *page 2 - 18*
9. Remove the keyboard shielding plate *page 2 - 19*
10. Remove the LCD & top case *page 2 - 20*
11. Remove the switch board *page 2 - 23*

**To remove the Modem:**

1. Remove the battery *page 2 - 8*
2. Remove the HDD *page 2 - 9*
3. Remove the system memory *page 2 - 10*
4. Remove the CD Device *page 2 - 12*
5. Remove the Bluetooth module *page 2 - 14*
6. Remove the Wireless LAN module *page 2 - 15*
7. Remove the processor *page 2 - 16*
8. Remove the keyboard *page 2 - 18*
9. Remove the keyboard shielding plate *page 2 - 19*
10. Remove the LCD & top case *page 2 - 20*
11. Remove the modem *page 2 - 24*

**To remove the Speakers:**

1. Remove the battery *page 2 - 8*
2. Remove the HDD *page 2 - 9*
3. Remove the system memory *page 2 - 10*
4. Remove the CD Device *page 2 - 12*
5. Remove the Bluetooth module *page 2 - 14*
6. Remove the Wireless LAN module *page 2 - 15*
7. Remove the processor *page 2 - 16*
8. Remove the keyboard *page 2 - 18*
9. Remove the keyboard shielding plate *page 2 - 19*
10. Remove the LCD & top case *page 2 - 20*
11. Remove the speakers *page 2 - 25*

## Disassembly

---

### To remove the Mainboard:

1. Remove the battery *page 2 - 8*
2. Remove the HDD *page 2 - 9*
3. Remove the system memory *page 2 - 10*
4. Remove the CD Device *page 2 - 12*
5. Remove the Bluetooth module *page 2 - 14*
6. Remove the Wireless LAN module *page 2 - 15*
7. Remove the processor *page 2 - 16*
8. Remove the keyboard *page 2 - 18*
9. Remove the keyboard shielding plate *page 2 - 19*
10. Remove the LCD & top case *page 2 - 20*
11. Remove the speakers *page 2 - 25*
12. Remove the mainboard *page 2 - 26*

### To remove the Fan Unit:

1. Remove the battery *page 2 - 8*
2. Remove the HDD *page 2 - 9*
3. Remove the system memory *page 2 - 10*
4. Remove the CD Device *page 2 - 12*
5. Remove the Bluetooth module *page 2 - 14*
6. Remove the Wireless LAN module *page 2 - 15*
7. Remove the processor *page 2 - 16*
8. Remove the keyboard *page 2 - 18*
9. Remove the keyboard shielding plate *page 2 - 19*
10. Remove the LCD & top case *page 2 - 20*
11. Remove the speakers *page 2 - 25*
12. Remove the mainboard *page 2 - 26*
13. Remove the fan unit *page 2 - 27*

### To remove the Floppy Disk Drive Assembly:

1. Remove the battery *page 2 - 8*
2. Remove the HDD *page 2 - 9*
3. Remove the system memory *page 2 - 10*
4. Remove the CD Device *page 2 - 12*
5. Remove the Bluetooth module *page 2 - 14*
6. Remove the Wireless LAN module *page 2 - 15*
7. Remove the processor *page 2 - 16*
8. Remove the keyboard *page 2 - 18*
9. Remove the keyboard shielding plate *page 2 - 19*
10. Remove the LCD & top case *page 2 - 20*
11. Remove the speakers *page 2 - 25*
12. Remove the mainboard *page 2 - 26*
13. Remove the floppy disk drive *page 2 - 28*

### To remove the PC Card Assembly:

1. Remove the battery *page 2 - 8*
2. Remove the HDD *page 2 - 9*
3. Remove the system memory *page 2 - 10*
4. Remove the CD Device *page 2 - 12*
5. Remove the Bluetooth module *page 2 - 14*
6. Remove the Wireless LAN module *page 2 - 15*
7. Remove the processor *page 2 - 16*
8. Remove the keyboard *page 2 - 18*
9. Remove the keyboard shielding plate *page 2 - 19*
10. Remove the LCD & top case *page 2 - 20*
11. Remove the speakers *page 2 - 25*
12. Remove the mainboard *page 2 - 26*
13. Remove the PC Card assembly *page 2 - 29*

**To remove the LCD Front Panel Module:**

1. Remove the battery *page 2 - 8*
2. Remove the HDD *page 2 - 9*
3. Remove the system memory *page 2 - 10*
4. Remove the CD Device *page 2 - 12*
5. Remove the Bluetooth module *page 2 - 14*
6. Remove the Wireless LAN module *page 2 - 15*
7. Remove the processor *page 2 - 16*
8. Remove the keyboard *page 2 - 18*
9. Remove the keyboard shielding plate *page 2 - 19*
10. Remove the LCD & top case *page 2 - 20*
11. Remove the front panel module *page 2 - 30*

**To remove the Inverter:**

1. Remove the battery *page 2 - 8*
2. Remove the HDD *page 2 - 9*
3. Remove the system memory *page 2 - 10*
4. Remove the CD Device *page 2 - 12*
5. Remove the Bluetooth module *page 2 - 14*
6. Remove the Wireless LAN module *page 2 - 15*
7. Remove the processor *page 2 - 16*
8. Remove the keyboard *page 2 - 18*
9. Remove the keyboard shielding plate *page 2 - 19*
10. Remove the LCD & top case *page 2 - 20*
11. Remove the front panel module *page 2 - 30*
12. Remove the inverter *page 2 - 31*

**To remove the PC Video Camera Module:**

1. Remove the battery *page 2 - 8*
2. Remove the HDD *page 2 - 9*
3. Remove the system memory *page 2 - 10*
4. Remove the CD Device *page 2 - 12*
5. Remove the Bluetooth module *page 2 - 14*
6. Remove the Wireless LAN module *page 2 - 15*
7. Remove the processor *page 2 - 16*
8. Remove the keyboard *page 2 - 18*
9. Remove the keyboard shielding plate *page 2 - 19*
10. Remove the LCD & top case *page 2 - 20*
11. Remove the front panel module *page 2 - 30*
12. Remove the PC Video Camera *page 2 - 32*

**To remove the LCD Module:**


1. Remove the battery *page 2 - 8*
2. Remove the HDD *page 2 - 9*
3. Remove the system memory *page 2 - 10*
4. Remove the CD Device *page 2 - 12*
5. Remove the Bluetooth module *page 2 - 14*
6. Remove the Wireless LAN module *page 2 - 15*
7. Remove the processor *page 2 - 16*
8. Remove the keyboard *page 2 - 18*
9. Remove the keyboard shielding plate *page 2 - 19*
10. Remove the LCD & top case *page 2 - 20*
11. Remove the front panel module *page 2 - 30*
12. Remove the inverter *page 2 - 31*
13. Remove the LCD module *page 2 - 33*

## Removing the Battery

1. Turn the computer **off**, and turn it over.
2. Remove screws **1** & **2** (**Figure 1a**) from the battery cover **3**, and remove the cover.
3. Carefully (use a small screwdriver) disconnect the battery cable at point **4** (**Figure 1b**).
4. Lift the battery **5** out of the computer.
5. When replacing the battery, connect the cable first.

*Figure 1*  
**Battery Removal**

- a. Remove the 2 screws and the battery cover.
- b. Carefully disconnect the battery cable and remove the battery.

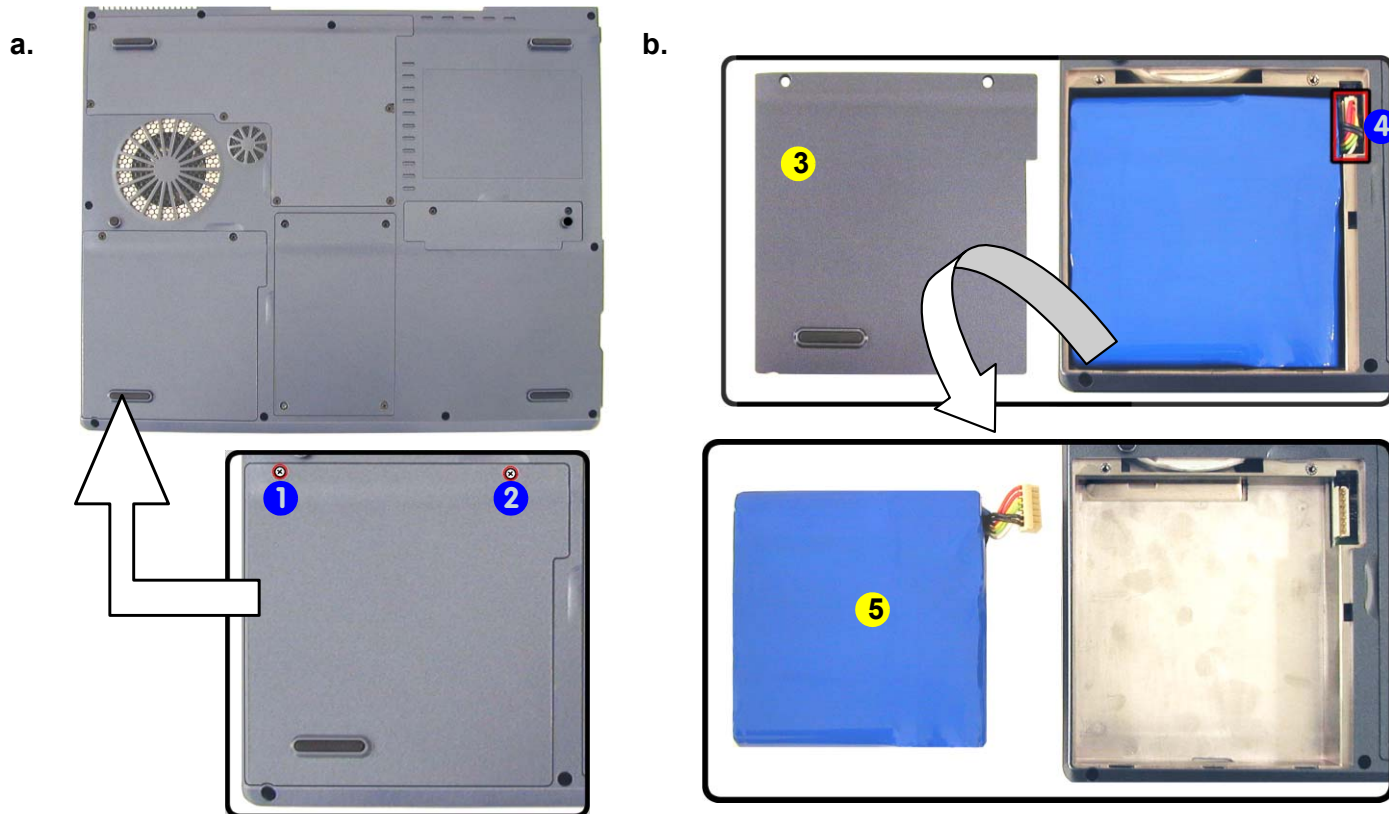

- 3. Battery Cover
- 5. Battery
- 2 Screws




## Removing the Hard Disk Drive

The hard disk drive is mounted in a removable case and can be taken out to accommodate other 2.5" IDE hard disk drives with a height of 9.5mm (h). Follow your operating system's installation instructions, and install all necessary drivers and utilities (as outlined in **Chapter 4 of the User's Manual**) when setting up a new hard disk.

### Hard Disk Upgrade Process


1. Turn **off** the computer, remove the battery ([page 2 - 8](#)) and turn it over.
2. Remove screws **1** & **4** (**Figure 2a**) from the hard disk cover **5**, and remove the cover.
3. Carefully (use a small screwdriver) disconnect the battery cable at point **6** (**Figure 2b**).
4. Lift the HDD assembly **7** out of the computer.
5. Reverse the process to install a new hard disk.



**HDD System Warning**


New HDD's are blank. Before you begin make sure:

- You have backed up any data you want to keep from your old HDD.
- You have all the CD-ROMs and FDDs required to install your operating system and programs.
- If you have access to the internet, download the latest application and hardware driver updates for the operating system you plan to install. Copy these to a removable medium.

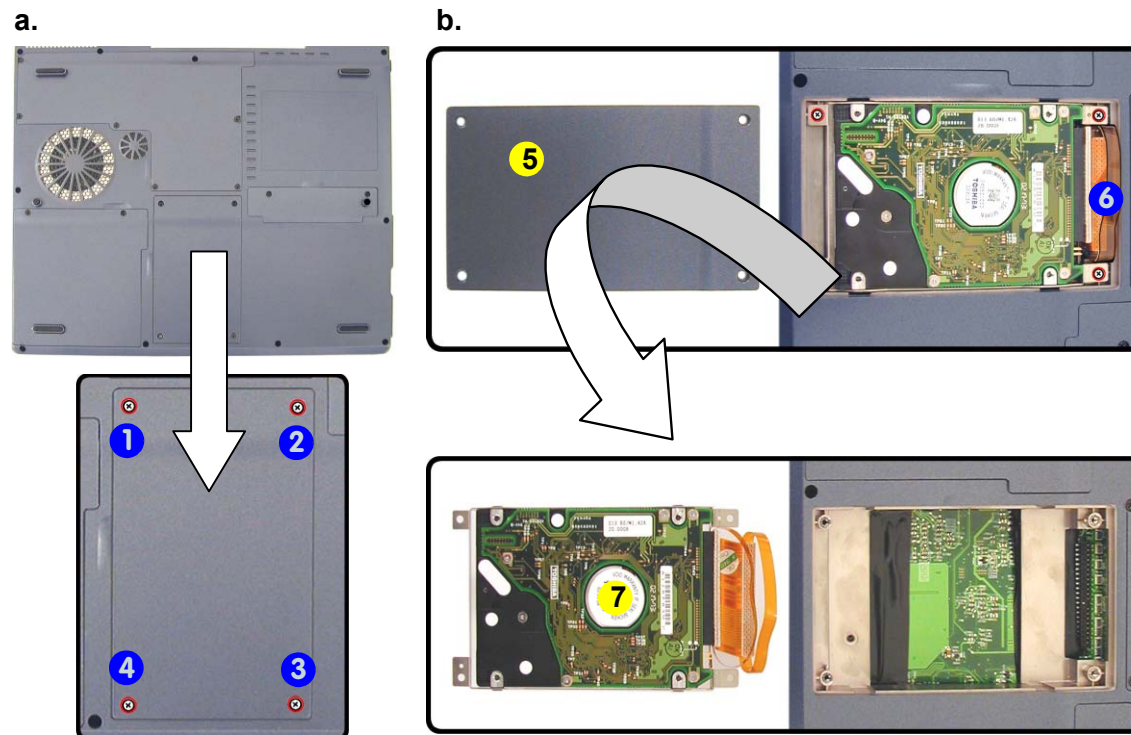

*Figure 2*  
**HDD Assembly  
Assembly Removal**

- a. Remove the 4 screws.
- b. Disconnect the HDD cable and lift the HDD assembly out of the bay.



- 5. Hard Disk Cover
- 7. Hard Disk
- 4 Screws

## Removing the System Memory (RAM)


The computer has two memory sockets for 200 pin Small Outline Dual In-line Memory Modules (SO-DIMM) supporting DDR 200/266 MHz. The main memory can be expanded up to 1024MB. The SO-DIMM modules supported are 128Mb, 256Mb, and 512Mb. The total memory size is automatically detected by the POST routine once you turn on your computer.

### Memory Upgrade Process

1. Turn **off** the computer, remove the battery ([page 2 - 8](#)) and turn it over.
2. Remove screws **1 - 6** (**Figure 3a**) from the memory socket cover.
3. Carefully lift up the memory socket cover **7** (**Figure 3b**) (a fan cable **8** is still attached to the mainboard and you can disconnect it).
4. If there is a module currently installed which needs to be upgraded/replaced then remove it.

Figure 3  
Memory Socket  
Cover Removal


- a. Remove the screws.
- b. Carefully lift the cover off the computer.

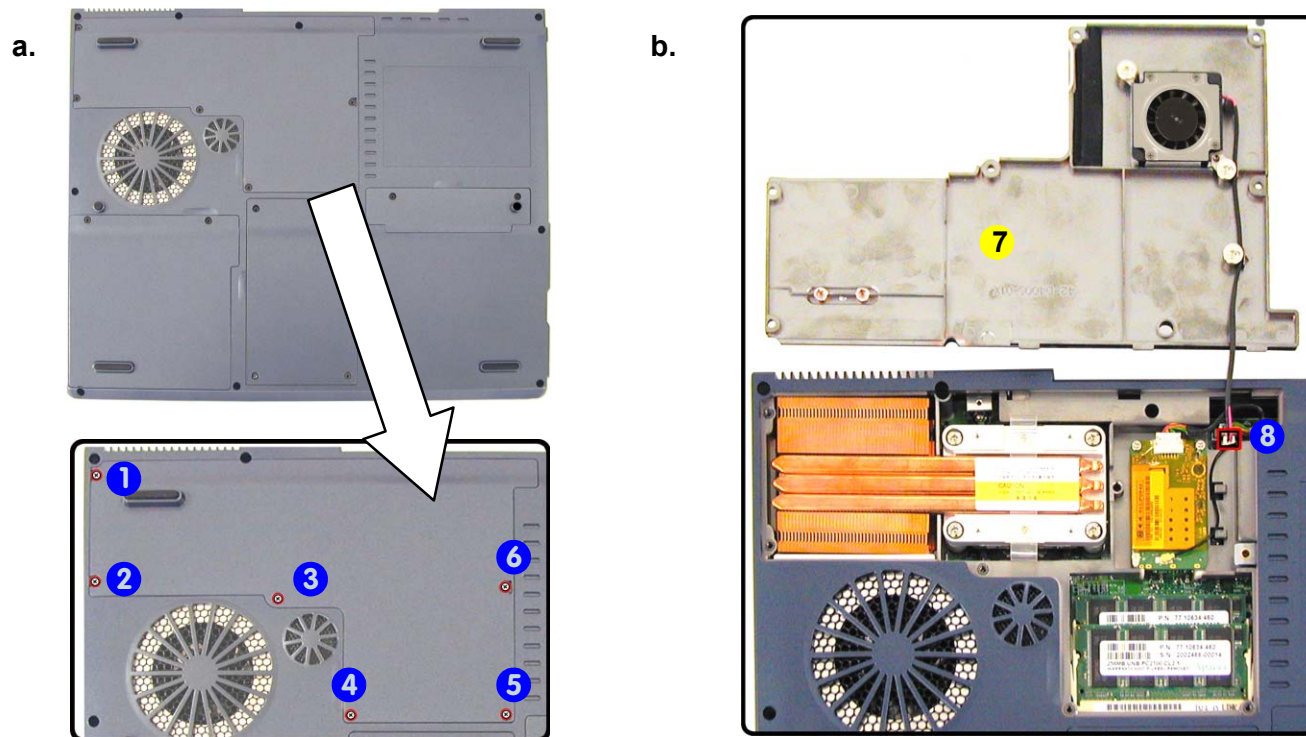


- 7. Socket Cover
- 6 Screws



- Gently pull the two release latches (1 & 2) on the sides of the memory socket toward the sides of the computer.

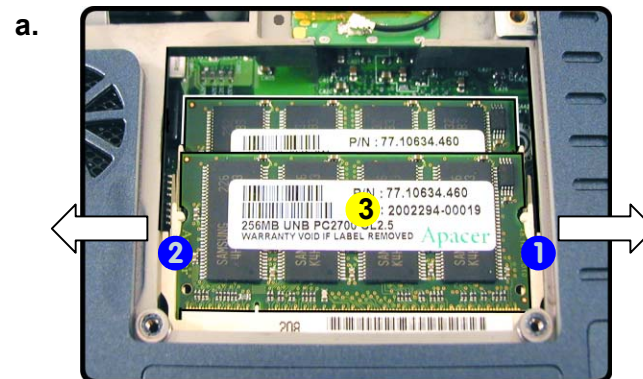

- The module 3 (Figure 4b) will pop-up, and you can remove it.
- Repeat the process for the second module if necessary.
- Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.
- The module will only fit one way as defined by its pin alignment. Make sure the module is seated as far into the slot as it will go. DO NOT FORCE IT; it should fit without much pressure.

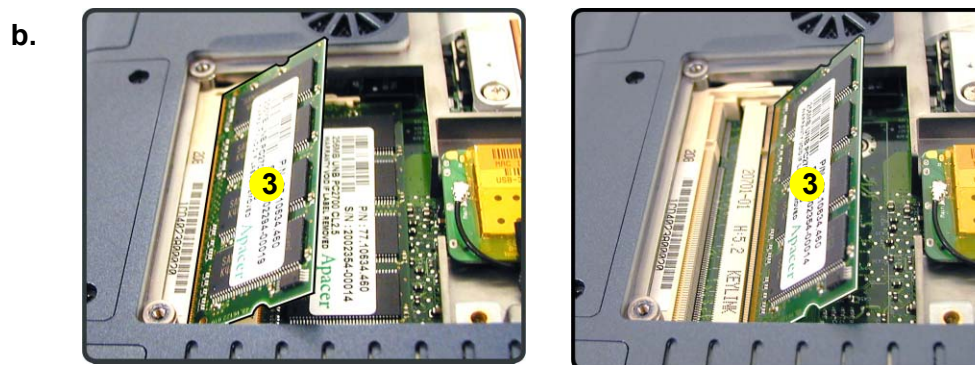

- Press the module down towards the mainboard until the slot levers click into place to secure the module.
- Replace the memory socket cover (be careful with the fan cable) and the 6 screws (see [page 2 - 10](#)).
- Restart the computer.
- The BIOS will register the new memory configuration as it starts up.

*Figure 4*  
**Removing/  
Installing a RAM  
Module**

- Pull the release latches.
- Remove the module.



### Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.




3. RAM Module

## Removing the CD Device

The easy changeable CD device may be upgraded or changed.

1. Turn **off** the computer, remove the battery ([page 2 - 8](#)) and turn it over.
2. Remove screws **1** - **6** (**Figure 5a**) from the memory socket cover.
3. Carefully lift up the memory socket cover **7** (a fan cable **8** is still attached to the mainboard and you can disconnect it).

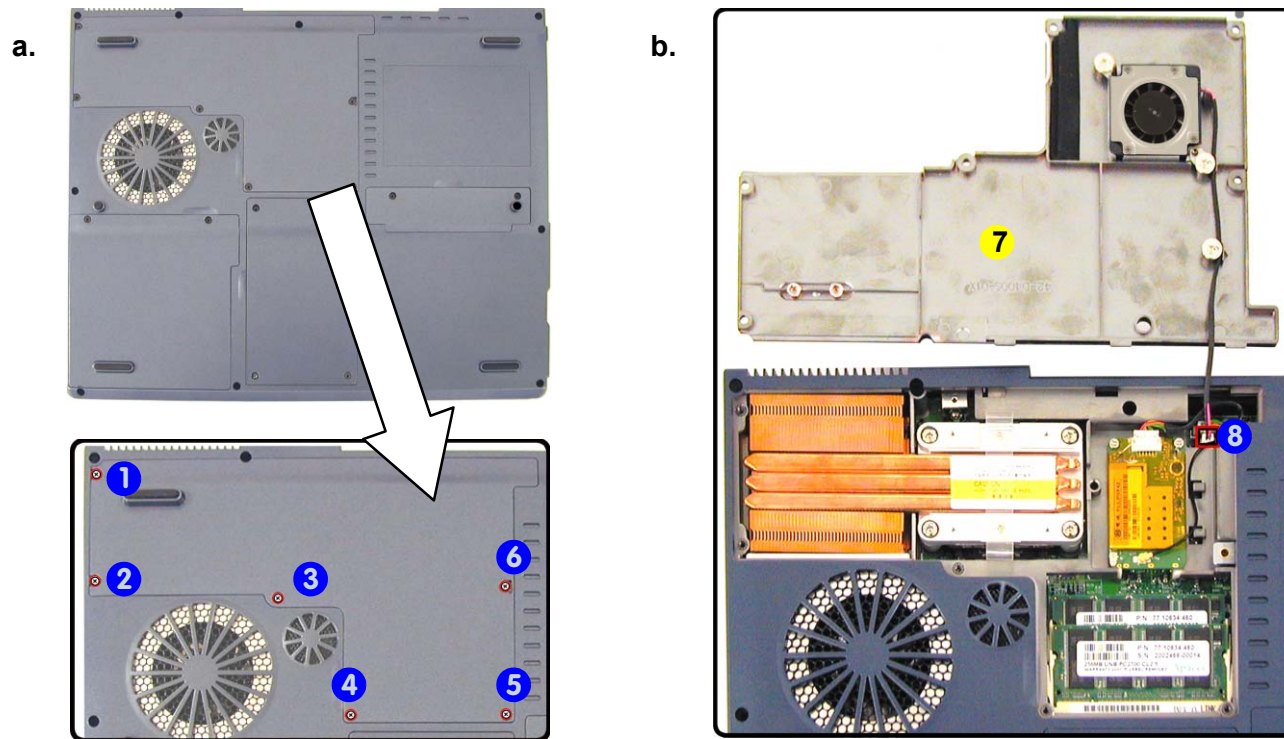


*Figure 5*  
**Memory Socket  
Cover Removal**

- a. Remove the screws.
- b. Carefully lift the cover off the computer.



- 7. Socket Cover
- 6 Screws

4. Use a screwdriver to carefully push the CD device assembly **1** out of the computer at point **2**.

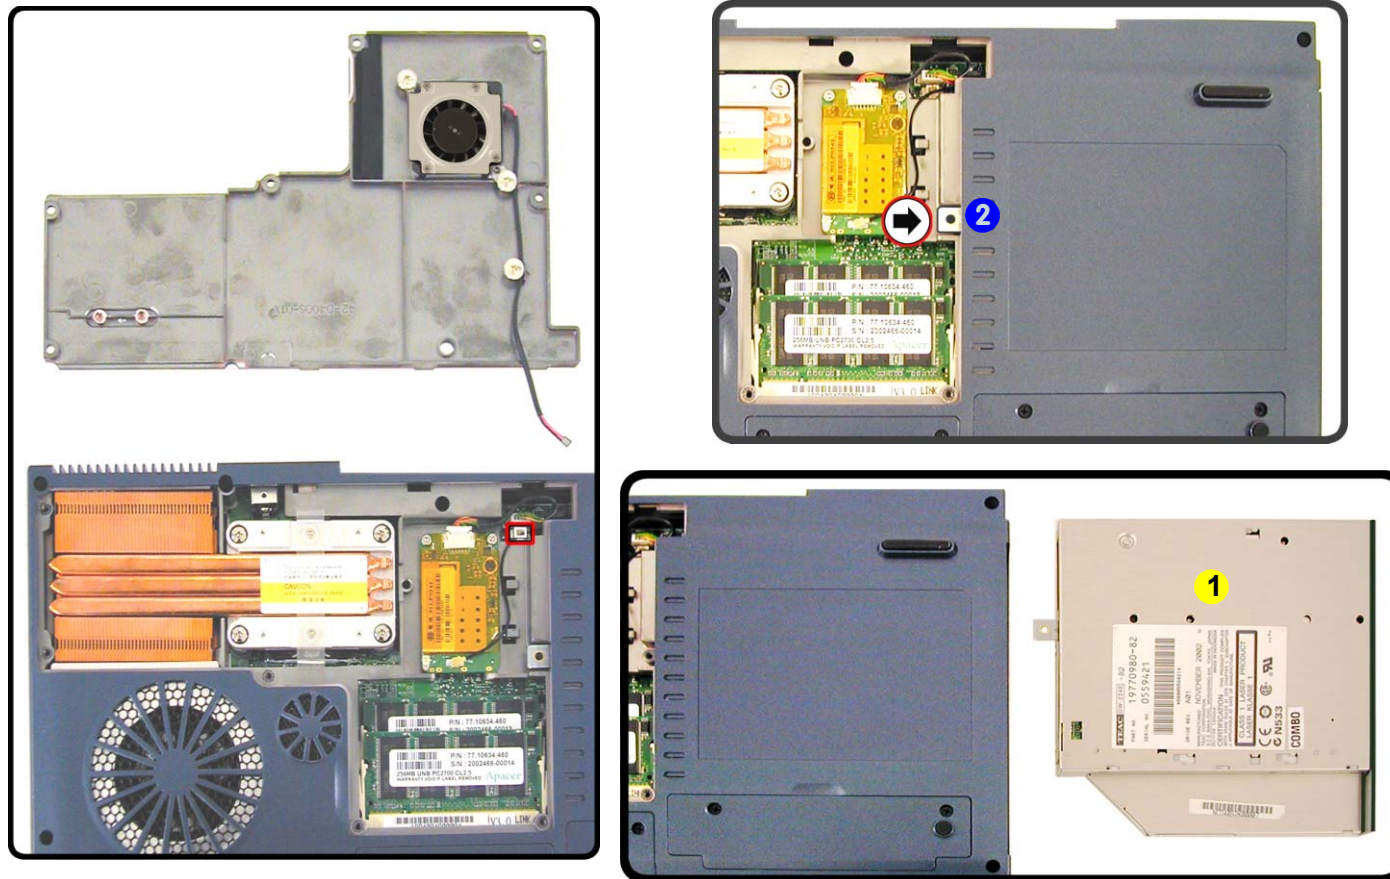

*Figure 6*  
**CD Device Removal**

Push the CD device out of the computer at point 2.

5. Insert the new device and carefully slide it into the computer (the device only fits one way. **DO NOT FORCE IT**; The screw holes should line up).
6. Replace the memory socket cover (be careful with the fan cable) and the **6** screws (see [page 2 - 12](#)).
7. Restart the computer to allow it to automatically detect the new device.



1. CD Device




## Removing the Bluetooth Module

1. Turn **off** the computer, remove the battery ([page 2 - 8](#)) and turn it over.
2. Remove screws **1** - **2** (**Figure 7a**) from the Bluetooth module cover.
3. Carefully lift up the Bluetooth module cover **3** off the computer.
4. Remove screws **3** - **6** (**Figure 7c**) and carefully disconnect cables **8** - **9**, then remove the Bluetooth module **10** (**Figure 7d**).

*Figure 7*  
**Bluetooth Module Removal**

- a. Remove the screws.
- b. Carefully lift the cover off the computer.
- c. Remove the screws and disconnect the cables.
- d. Remove the Bluetooth module.

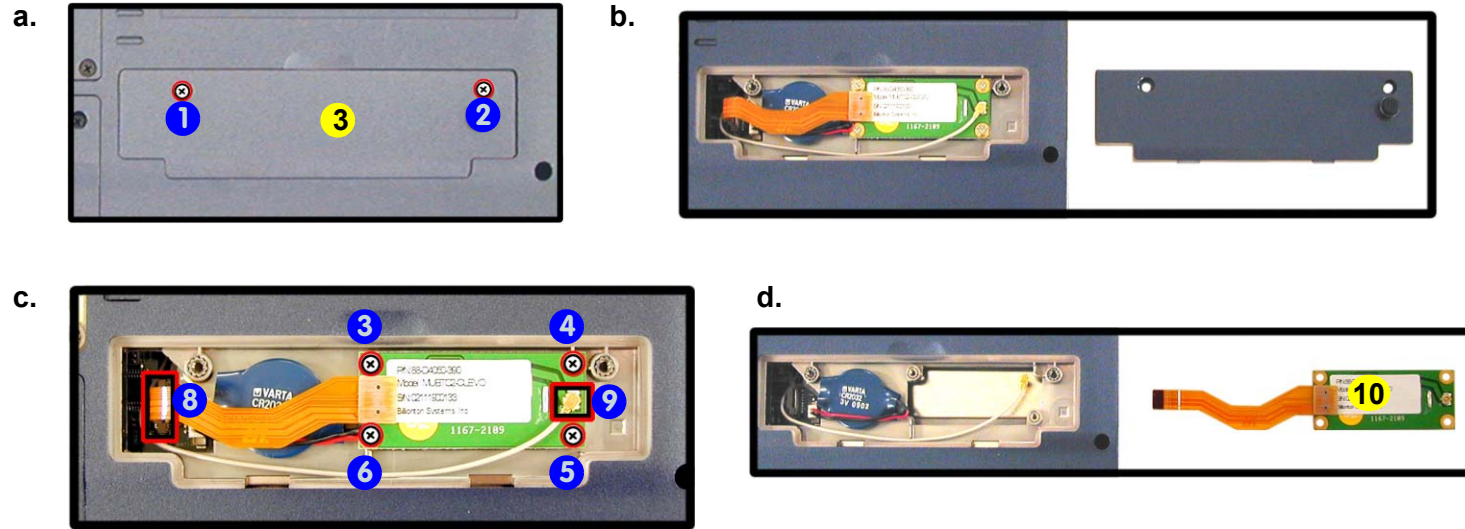


3. Bluetooth Cover  
10. Bluetooth Module

- 6 Screws


## Removing the Wireless LAN Module

1. Turn **off** the computer, remove the battery ([page 2 - 8](#)) and turn it over.
2. Remove screws **1** - **6** from the memory socket cover.
3. Carefully lift up the memory socket cover **7** (a fan cable **8** is still attached to the mainboard and you can disconnect it).
4. Remove screws **9** - **10** (**Figure 8c**), and carefully disconnect cables **11** & **12**.
5. Lift the Wireless Lan module **13** (**Figure 8d**) off the computer.

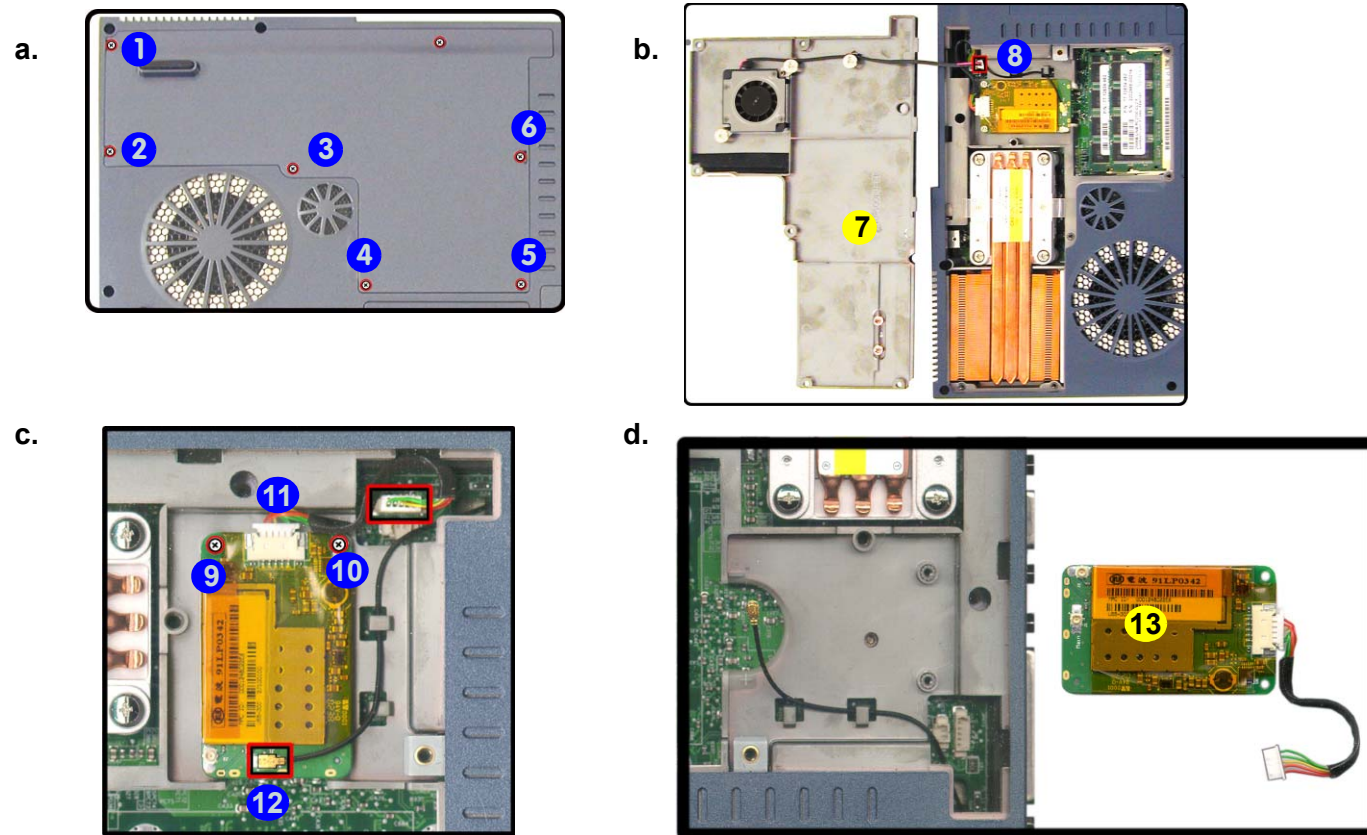


*Figure 8*  
**Wireless LAN Module Removal**

- a. Remove the screws.
- b. Carefully lift the cover off the computer.

  
**Antenna Cable Connection**

When re-inserting a Wireless LAN module, make sure the antenna cable connects to the connector J1 which is indicated as point 12 in **Figure 8c**.



7. Socket Cover  
13. WLAN Module

- 8 Screws


## Removing the Processor

1. Turn **off** the computer, remove the battery ([page 2 - 8](#)) and turn it over.
2. Remove screws **1** - **6** from the memory socket cover.
3. Carefully lift up the memory socket cover **7** (a fan cable **8** is still attached to the mainboard and you can disconnect it).
4. Remove screws **9** - **12** (**Figure 9c**) from the heat sink, **in the order indicated on the label**.
5. Carefully lift up the heat sink **13** (**Figure 9d**) off the computer.

Figure 9

### Processor Removal

- a. Remove the screws.
- b. Carefully lift the cover off the computer.
- c. Remove the screws in the order indicated.
- d. Remove the heat sink.

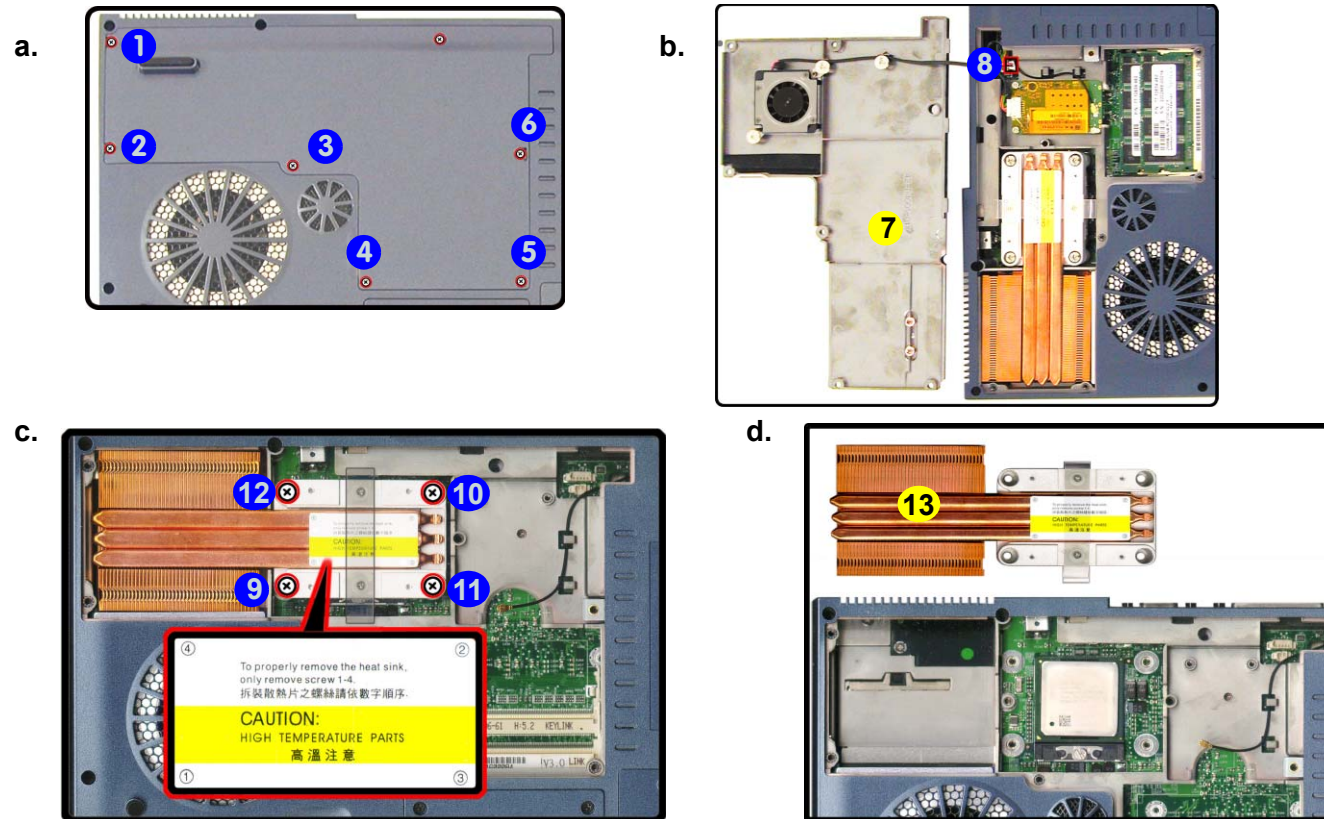

#### Reassembly Screw Order

When replacing the heat sink, make sure you insert the screws in the same order indicated on the label.




7. Socket Cover  
13. Heat Sink

- 10 Screws




6. Unlock the processor by raising lever **1** (Figure 10a).
7. Lift the CPU **3** (Figure 10b) off the computer.

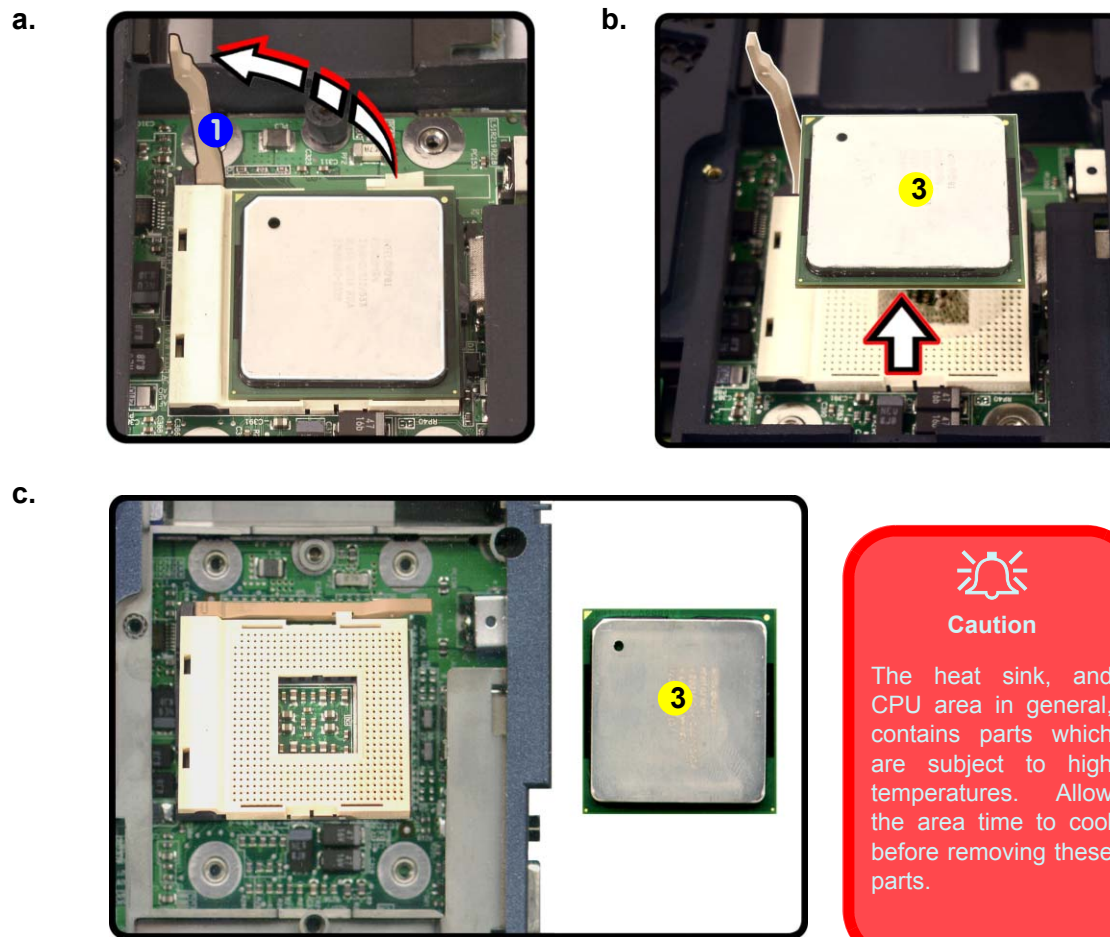

*Figure 10*  
**Processor Removal (cont'd)**

- a. Raise the lever to unlock the CPU.
- b. Lift the CPU off the socket.

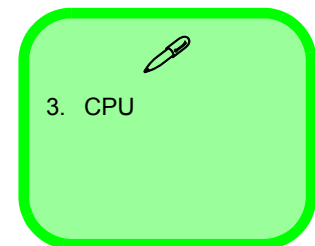





## Removing the Keyboard

1. Turn **off** the computer, remove the battery ([page 2 - 8](#)).
2. Press the **three** keyboard latches at the top of the keyboard to elevate the keyboard from its normal position (you may need to use a small screwdriver to do this).
3. Carefully lift the keyboard up and out, being careful not to bend the keyboard ribbon cable **1** (**Figure 11b**).
4. Disconnect the keyboard ribbon cable from the locking collar socket **2** (**Figure 11b**) and lift the keyboard **3** up out of the computer.

Figure 11

### Keyboard Removal

- a. Press the latches to elevate the keyboard.
- b. Disconnect the keyboard cable from the locking collar.
- c. Remove the keyboard.

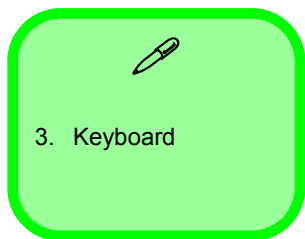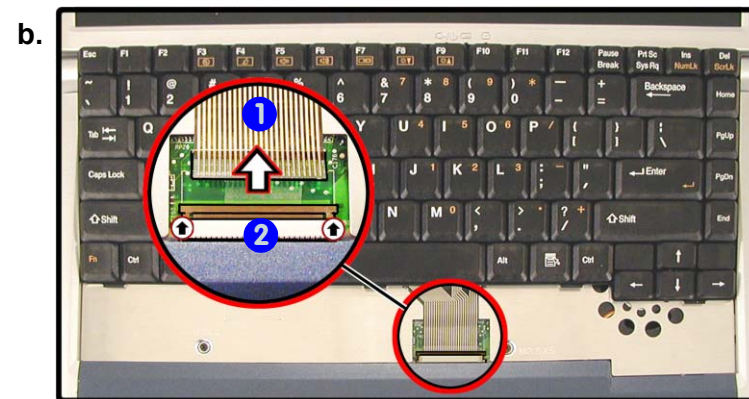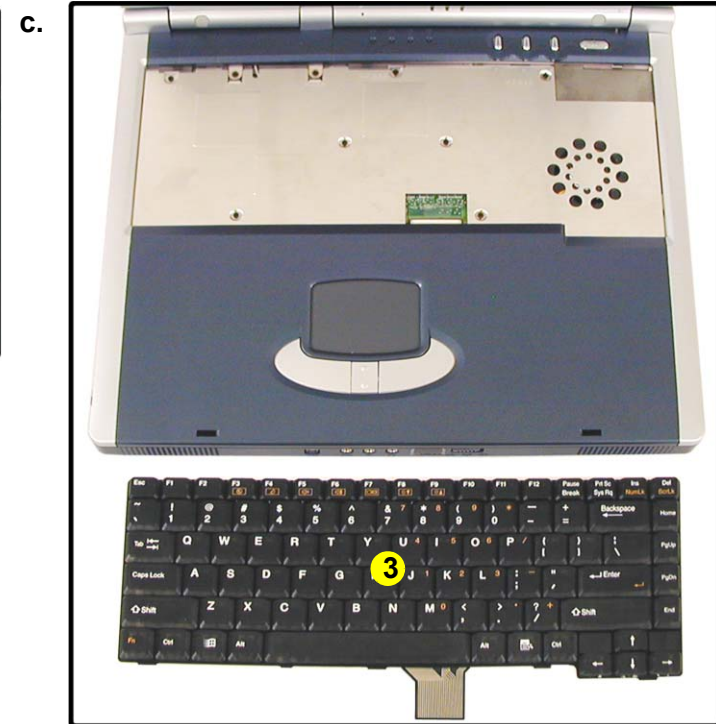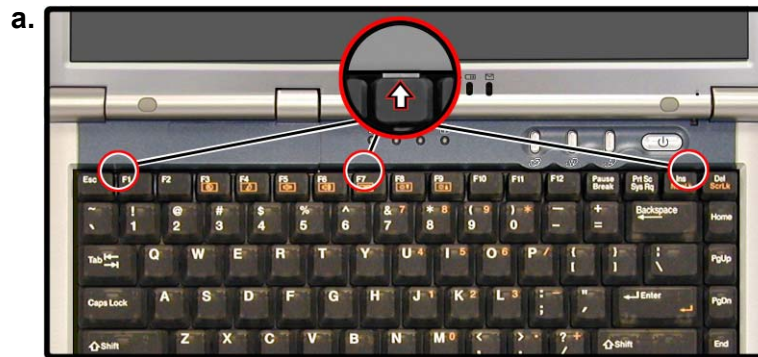





## Removing the Keyboard Shielding Plate

1. Turn **off** the computer, remove the battery ([page 2 - 8](#)) and keyboard ([page 2 - 18](#)).
2. Remove screws **1** - **9** (**Figure 12a**) from the keyboard shielding plate and lift the plate **10** off the computer.

a.

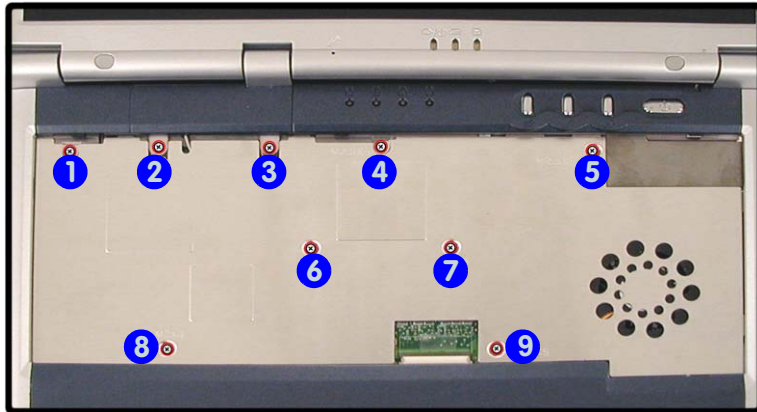

b.

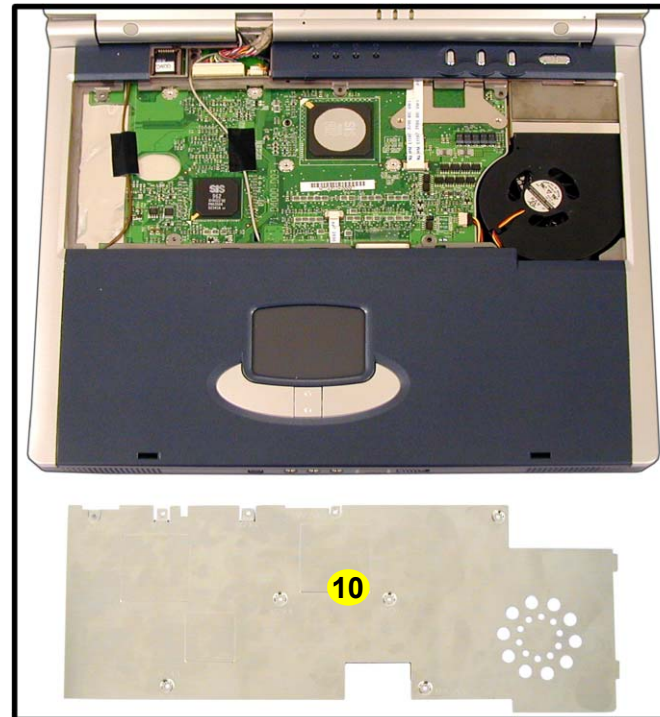

*Figure 12*  
**Keyboard Shielding  
Plate Removal**

- a. Remove the screws from the shielding plate.
- b. Lift the plate off the computer.



10. Shielding Plate


- 9 Screws

## Removing the LCD and Top Case

1. Turn **off** the computer, remove the battery ([page 2 - 8](#)), hard disk ([page 2 - 9](#)), RAM ([page 2 - 10](#)), CD Device ([page 2 - 12](#)), Bluetooth module ([page 2 - 14](#)), Wireless LAN module ([page 2 - 15](#)), CPU ([page 2 - 16](#)), keyboard ([page 2 - 18](#)) and keyboard shielding plate ([page 2 - 19](#)).
2. Remove screws **1 - 10**, and disconnect cable **11** (**Figure 13a**) from the bottom off the computer.
3. Remove screws **12 - 21** (**Figure 13b**) from the rear off the computer.
4. Remove the LCD cable shielding cover **26**, screws **22 - 23** and disconnect cables **24 - 25** (**Figure 13c**).

*Figure 13*  
**LCD & Top Case Removal**

- a. Remove the screws from the bottom of the computer.
- b. Remove the screws from the rear of the computer.
- c. Remove the LCD cable shielding cover and disconnect the cables.

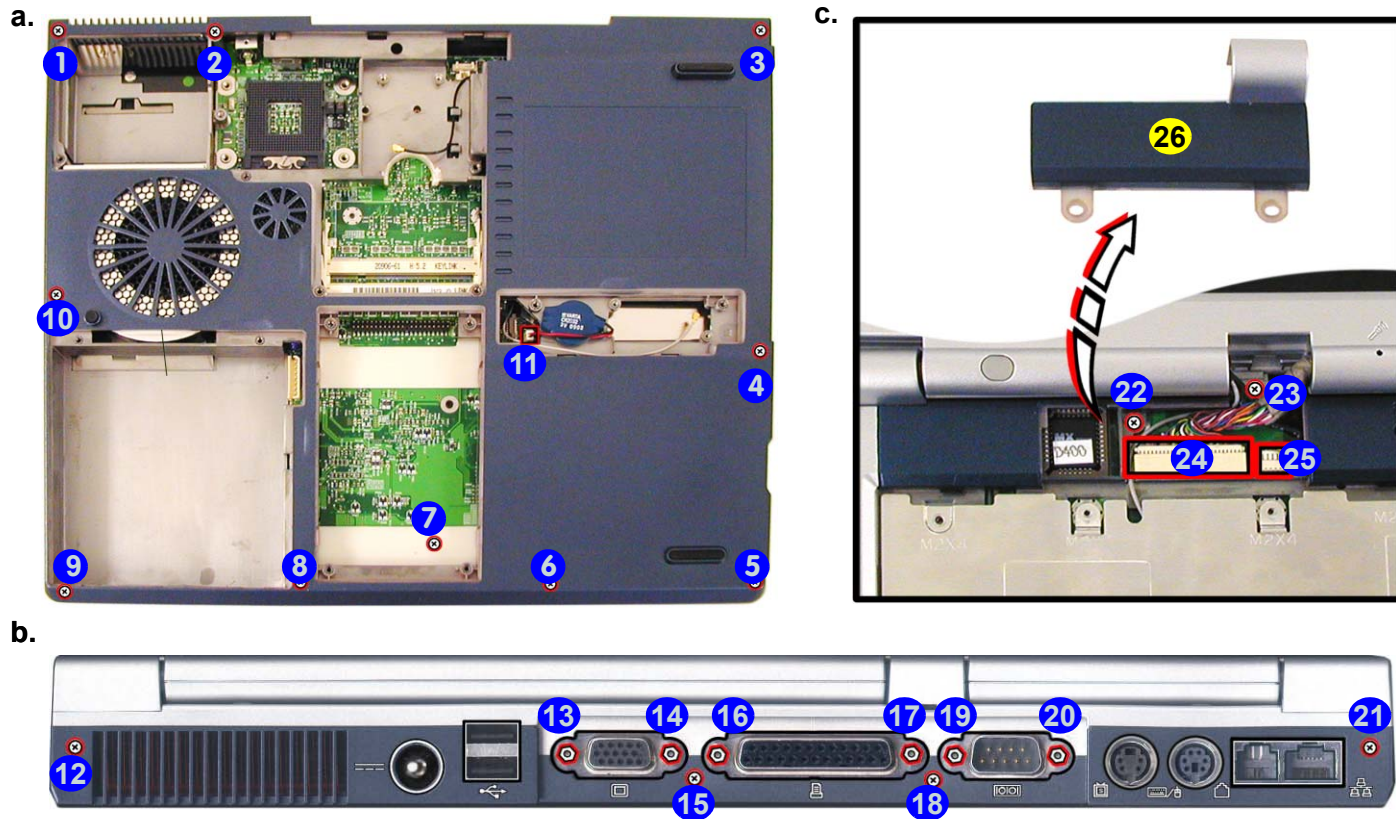

5. Slide the LCD hinge covers **1** & **2** (Figure 14a) out of the computer.
6. Remove screws **3** & **4** (Figure 14b) then carefully (pay careful attention to the antenna cables) lift the LCD assembly **5** (Figure 14c) off the computer.
7. Remove screws **6** & **7** (Figure 14d) and disconnect cables **8** & **9**, then lift the top case assembly **10** off the computer.

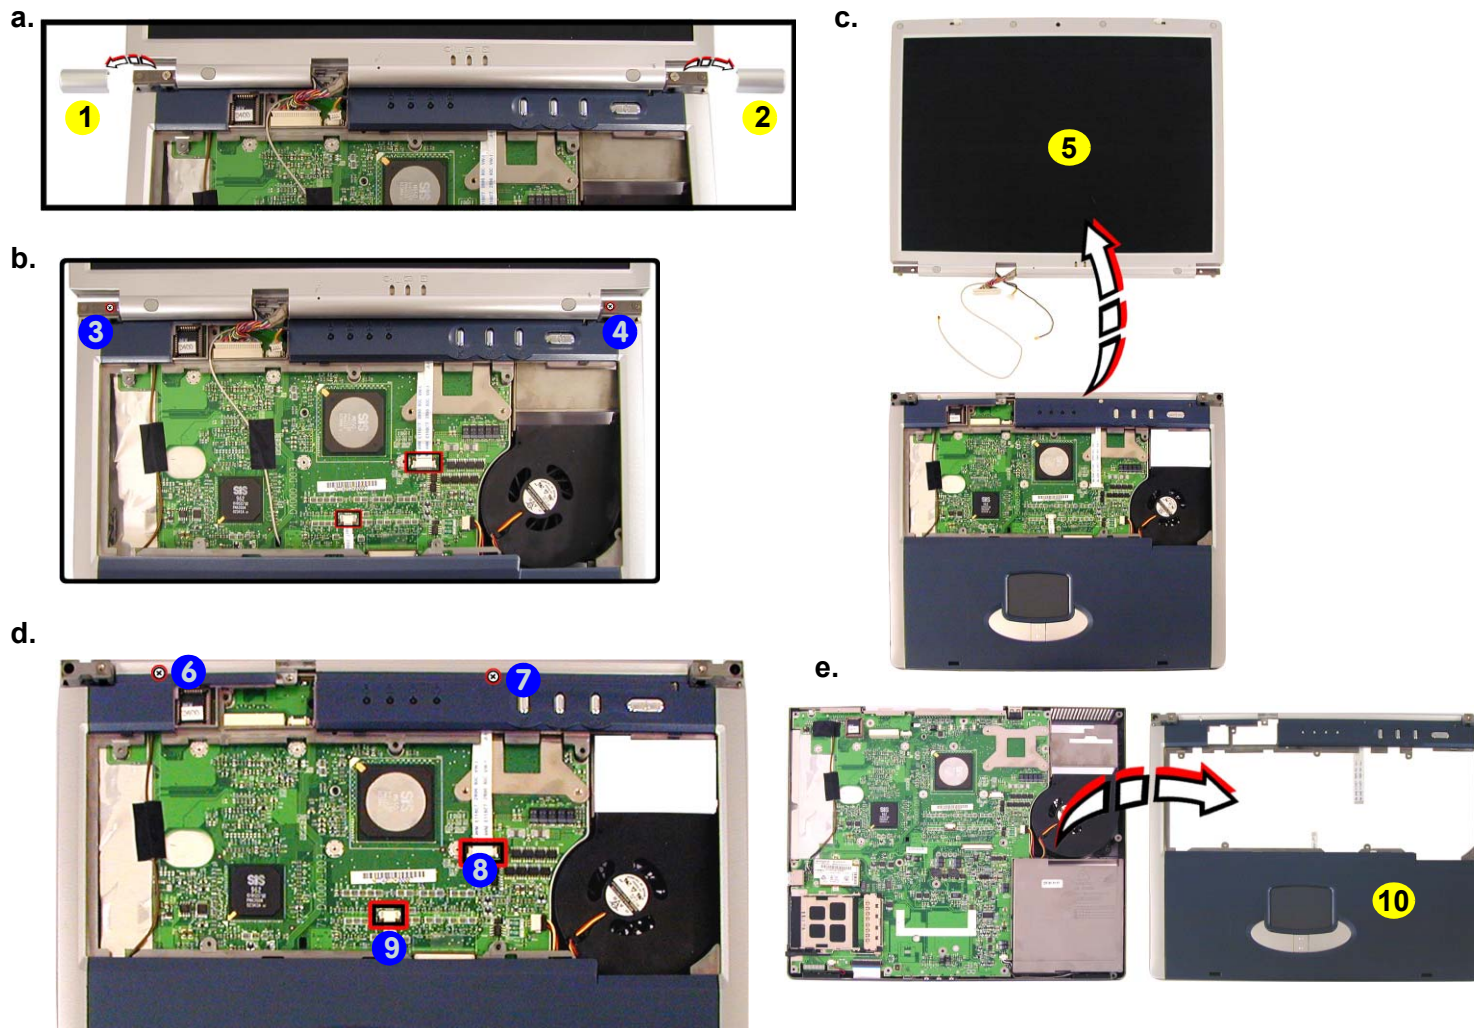


Figure 14  
LCD & Top Case  
Removal Cont'd

- a. Remove the hinge covers.
- b. Remove the screws from the LCD.
- c. Lift the LCD top case assembly.
- d. Remove the screws and disconnect the cables.
- e. Lift the top case assembly off the computer.

  
 1&2. Hinge covers  
 5. LCD Assembly  
 10. Top Case  
 • 4 Screws




## Removing the TouchPad and Click Board


1. Turn **off** the computer, remove the battery ([page 2 - 8](#)), hard disk ([page 2 - 9](#)), RAM ([page 2 - 10](#)), CD Device ([page 2 - 12](#)), Bluetooth module ([page 2 - 14](#)), Wireless LAN module ([page 2 - 15](#)), CPU ([page 2 - 16](#)), keyboard ([page 2 - 18](#)), keyboard shielding plate ([page 2 - 19](#)) and the top case and LCD ([page 2 - 20](#)).
2. Remove screws **1** - **8** (**Figure 15a**) from the touchpad and click board assembly, and lift the assembly off the top case.
3. Disconnect cable **9** (**Figure 15c**) and remove screws **10** - **11** (**Figure 15d**).
4. Separate the touchpad **12** and click board **13** (**Figure 15e**).

Figure 15

### TouchPad and Click Board Removal


- a. Remove the screws.
- b. Separate the assembly from the top case.
- c. Disconnect the cable.
- d. Remove the screws.
- e. Separate the touchpad and click board.

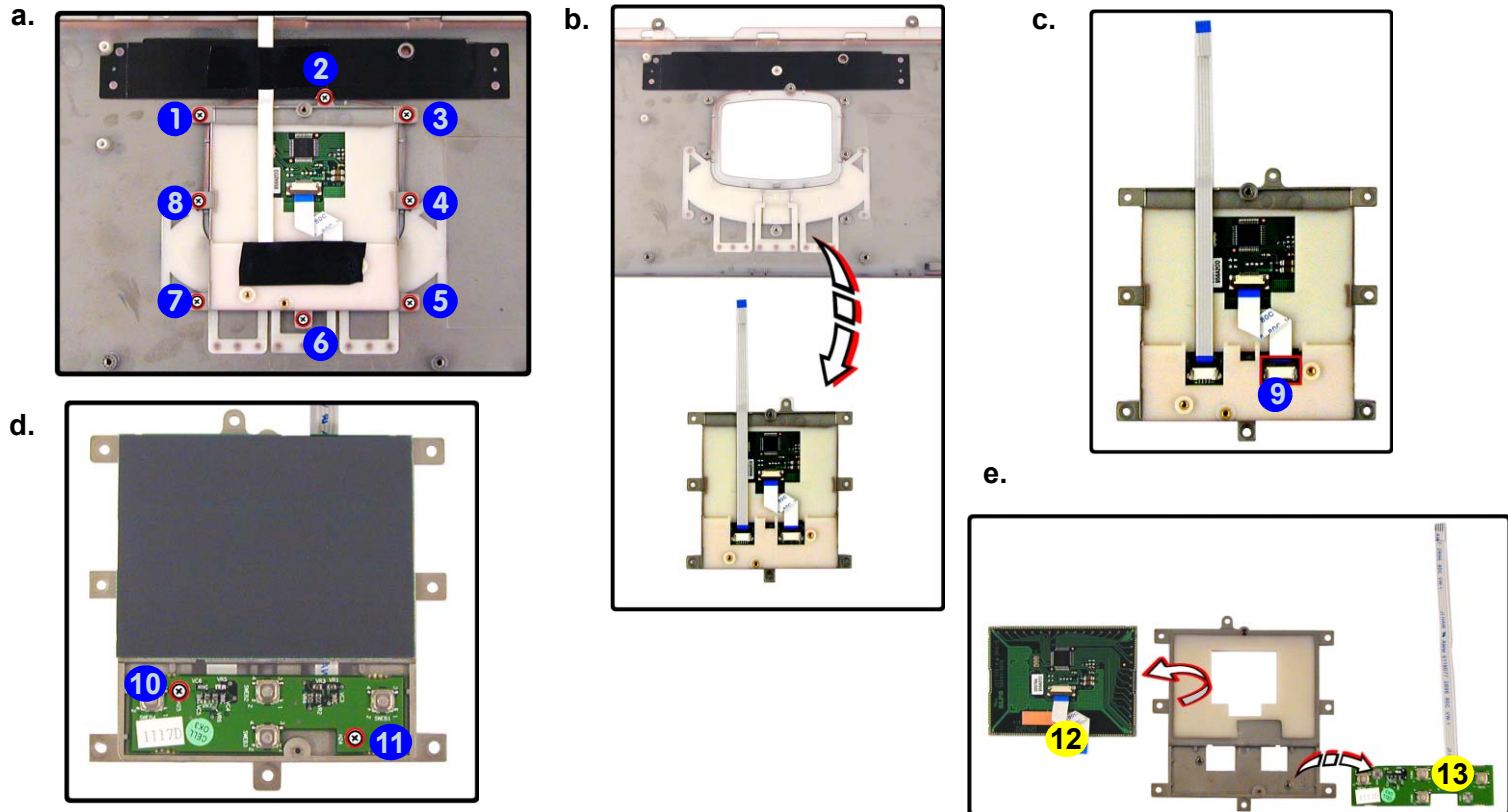

  
12. Touch Pad  
13. Click Board  
• 10 Screws

## Removing the Switch Board

1. Turn **off** the computer, remove the battery ([page 2 - 8](#)), hard disk ([page 2 - 9](#)), RAM ([page 2 - 10](#)), CD Device ([page 2 - 12](#)), Bluetooth module ([page 2 - 14](#)), Wireless LAN module ([page 2 - 15](#)), CPU ([page 2 - 16](#)), keyboard ([page 2 - 18](#)), keyboard shielding plate ([page 2 - 19](#)) and the top case and LCD ([page 2 - 20](#)). **10**
2. Remove screws **1** & **2** (**Figure 16a**) from the switch board assembly.
3. Lift the switch board assembly **3** (**Figure 16b**) off the top case.

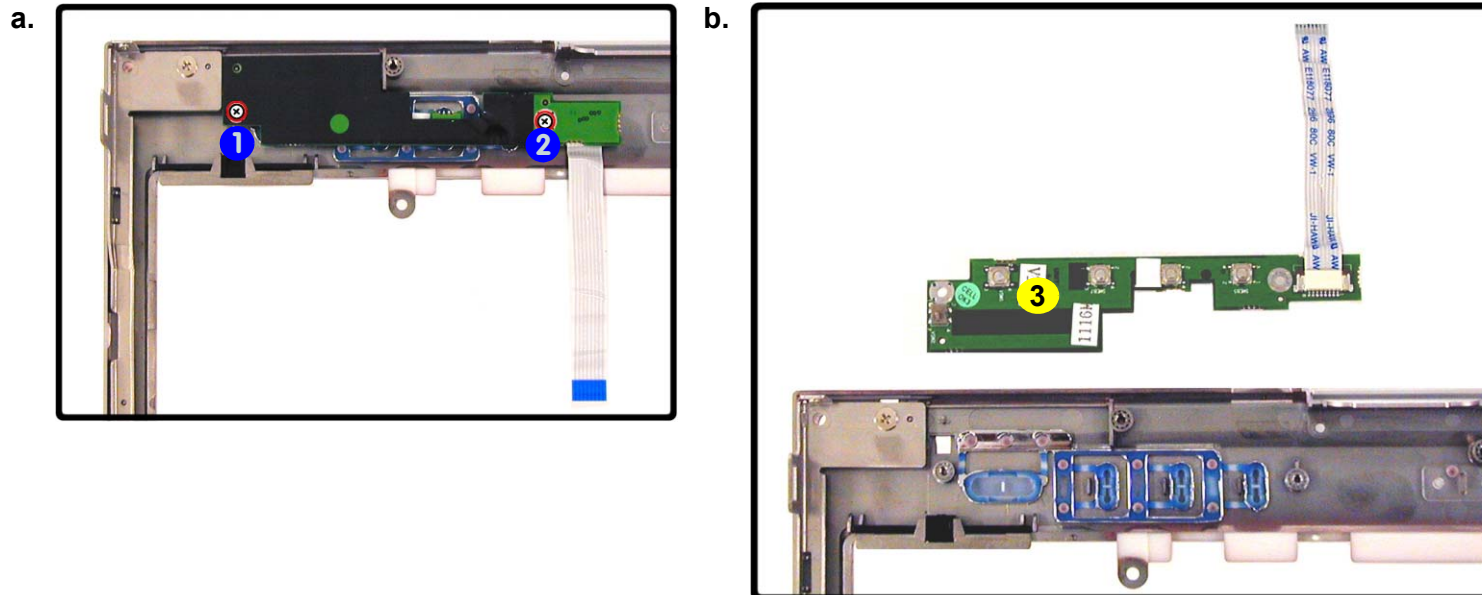

*Figure 16*  
**Switch Board Removal**

- a. Remove the screws.
- b. Lift the switch board assembly off the top case.



- 3. Switch Board
- 2 Screws




### Removing the Modem

1. Turn **off** the computer, remove the battery ([page 2 - 8](#)), hard disk ([page 2 - 9](#)), RAM ([page 2 - 10](#)), CD Device ([page 2 - 12](#)), Bluetooth module ([page 2 - 14](#)), Wireless LAN module ([page 2 - 15](#)), CPU ([page 2 - 16](#)), keyboard ([page 2 - 18](#)), keyboard shielding plate ([page 2 - 19](#)) and the top case and LCD ([page 2 - 20](#)).
2. Remove screws **1** & **2** (**Figure 17**) from the modem and disconnect cable **3**.
3. Remove the modem module **4**.

Figure 17

#### Modem Removal

Remove the screws, disconnect the cable, and remove the modem module.

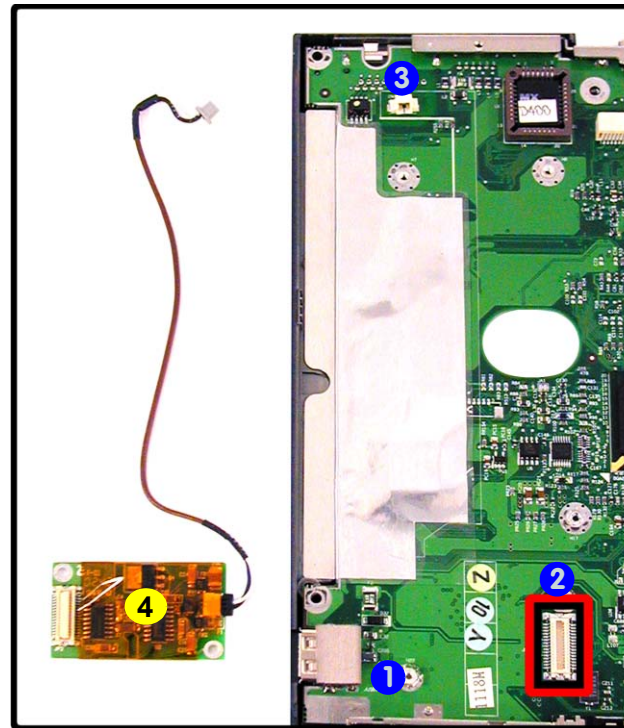


- 4. Modem
- 2 Screws


## Removing the Speakers

1. Turn **off** the computer, remove the battery ([page 2 - 8](#)), hard disk ([page 2 - 9](#)), RAM ([page 2 - 10](#)), CD Device ([page 2 - 12](#)), Bluetooth module ([page 2 - 14](#)), Wireless LAN module ([page 2 - 15](#)), CPU ([page 2 - 16](#)), keyboard ([page 2 - 18](#)), keyboard shielding plate ([page 2 - 19](#)) and the top case and LCD ([page 2 - 20](#)).
2. Disconnect cables **1** & **2** (**Figure 18a**) from the speakers to the mainboard.
3. Remove the speakers **3** (**Figure 18b**).

a.

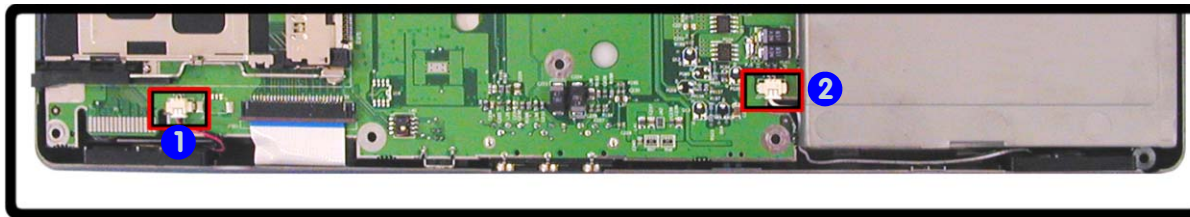

b.

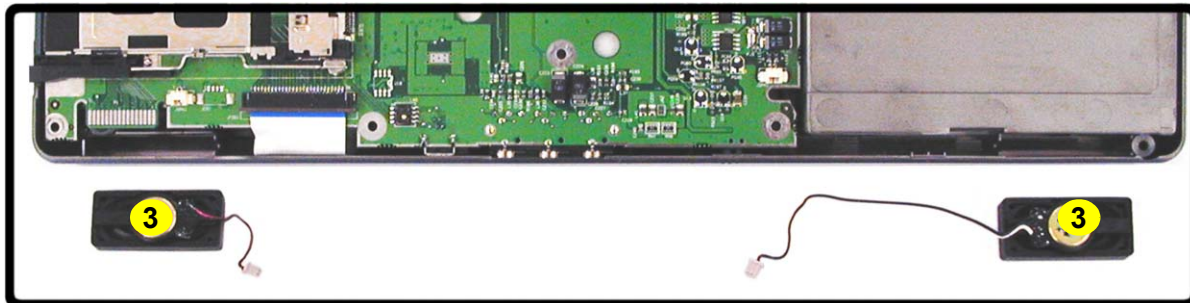

*Figure 18*  
**Speakers Removal**

- a. Disconnect the cables.
- b. Remove the speakers.



3. Speakers


## Removing the Mainboard

1. Turn **off** the computer, remove the battery ([page 2 - 8](#)), hard disk ([page 2 - 9](#)), RAM ([page 2 - 10](#)), CD Device ([page 2 - 12](#)), Bluetooth module ([page 2 - 14](#)), Wireless LAN module ([page 2 - 15](#)), CPU ([page 2 - 16](#)), keyboard ([page 2 - 18](#)), keyboard shielding plate ([page 2 - 19](#)), the top case and LCD ([page 2 - 20](#)) and speakers ([page 2 - 25](#)).
2. Disconnect cables **1** & **2** (**Figure 19a**) and remove screws **3** & **4**.
3. Separate the mainboard **5** , rear bracket **6** and bottom case **7** (**Figure 19b**).

Figure 19

### Mainboard Removal

- a. Disconnect the cables and remove the screws.
- b. Separate the mainboard, rear bracket and bottom case.

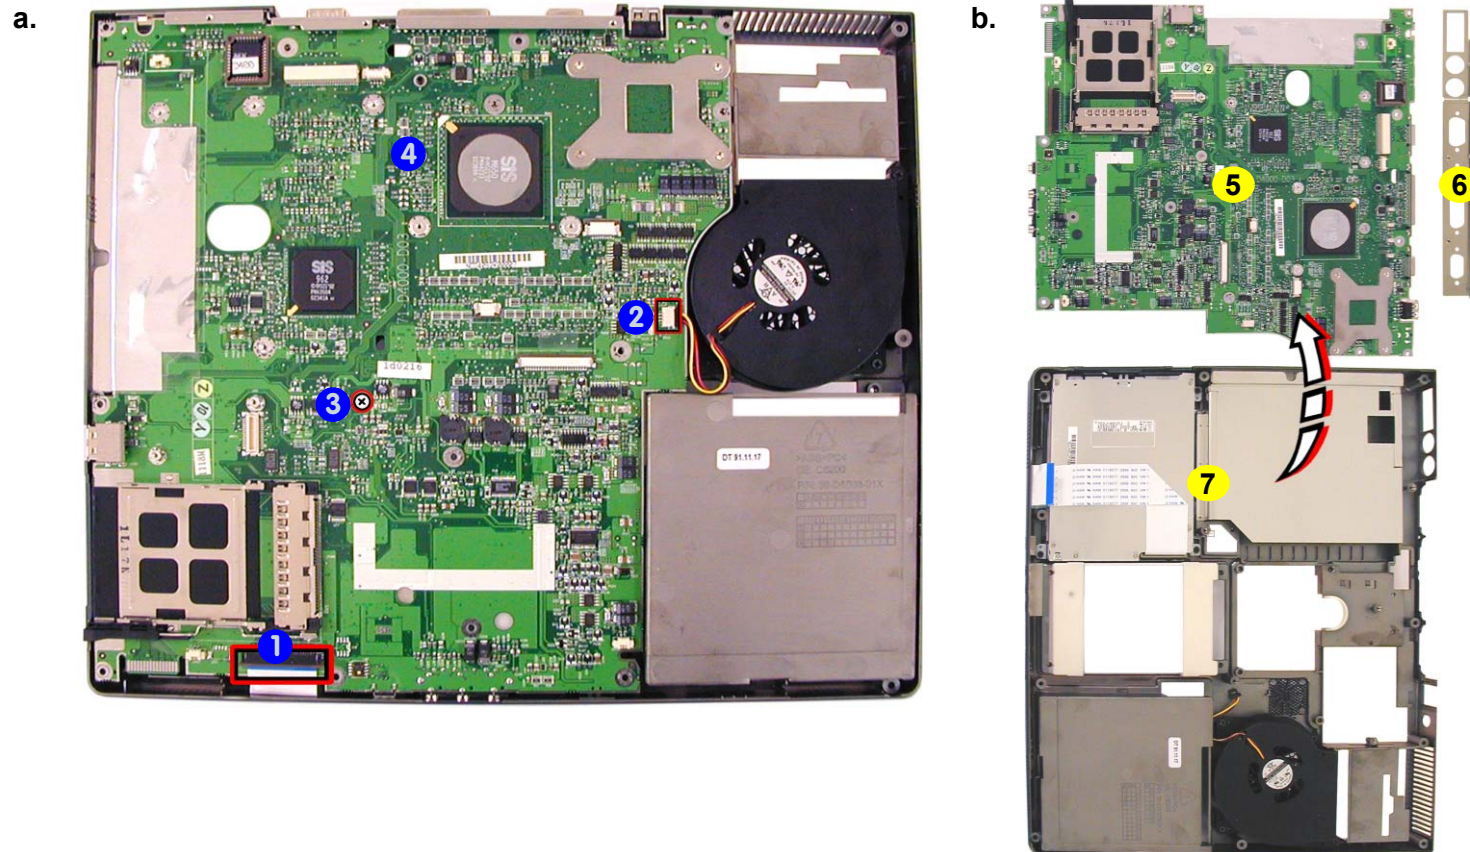


- 5. Mainboard
- 6. Rear Bracket
- 7. Bottom Case
- 2 Screws




## Removing the Fan Unit

1. Turn **off** the computer, remove the battery ([page 2 - 8](#)), hard disk ([page 2 - 9](#)), RAM ([page 2 - 10](#)), CD Device ([page 2 - 12](#)), Bluetooth module ([page 2 - 14](#)), Wireless LAN module ([page 2 - 15](#)), CPU ([page 2 - 16](#)), keyboard ([page 2 - 18](#)), keyboard shielding plate ([page 2 - 19](#)), the top case and LCD ([page 2 - 20](#)), speakers ([page 2 - 25](#)) and main-board ([page 2 - 26](#)).
2. Remove screws **1** - **4** (**Figure 20a**) and lift out the fan unit **5** .

a.

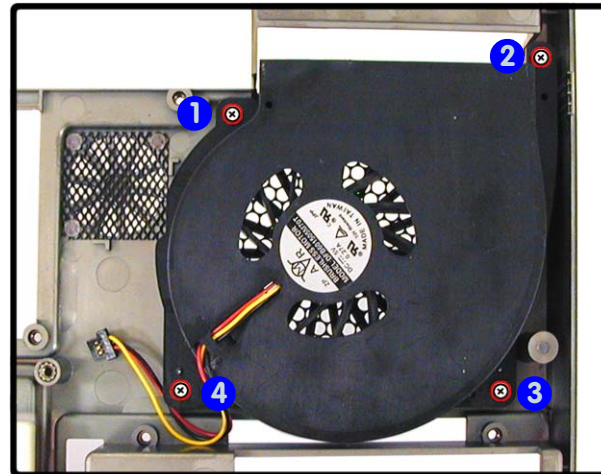

b.

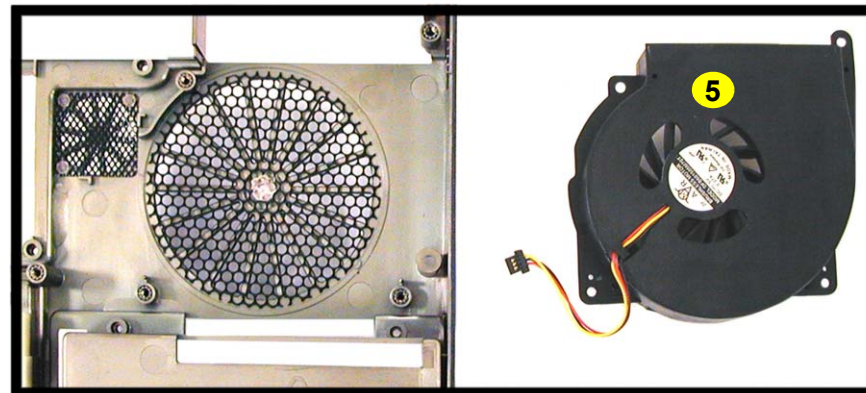

*Figure 20*  
**Fan Unit Removal**

- a. Remove the screws
- b. Lift out the fan unit.



5. Fan Unit

- 4 Screws


## Removing the Floppy Disk Drive Assembly

1. Turn **off** the computer, remove the battery ([page 2 - 8](#)), hard disk ([page 2 - 9](#)), RAM ([page 2 - 10](#)), CD Device ([page 2 - 12](#)), Bluetooth module ([page 2 - 14](#)), Wireless LAN module ([page 2 - 15](#)), CPU ([page 2 - 16](#)), keyboard ([page 2 - 18](#)), keyboard shielding plate ([page 2 - 19](#)), the top case and LCD ([page 2 - 20](#)), speakers ([page 2 - 25](#)) and main-board ([page 2 - 26](#)).
2. Remove screws **1** - **4** (**Figure 21a**) and lift out the floppy disk drive assembly.
3. Remove screws **5** - **8** (**Figure 21c**) and you can then separate the brackets **9** , floppy disk drive unit **10** , and cable **11** .

Figure 21

### Floppy Disk Drive Assembly Removal

- a. Remove the screws
- b. Lift out the FDD assembly
- c. Separate the brackets, FDD and cable.

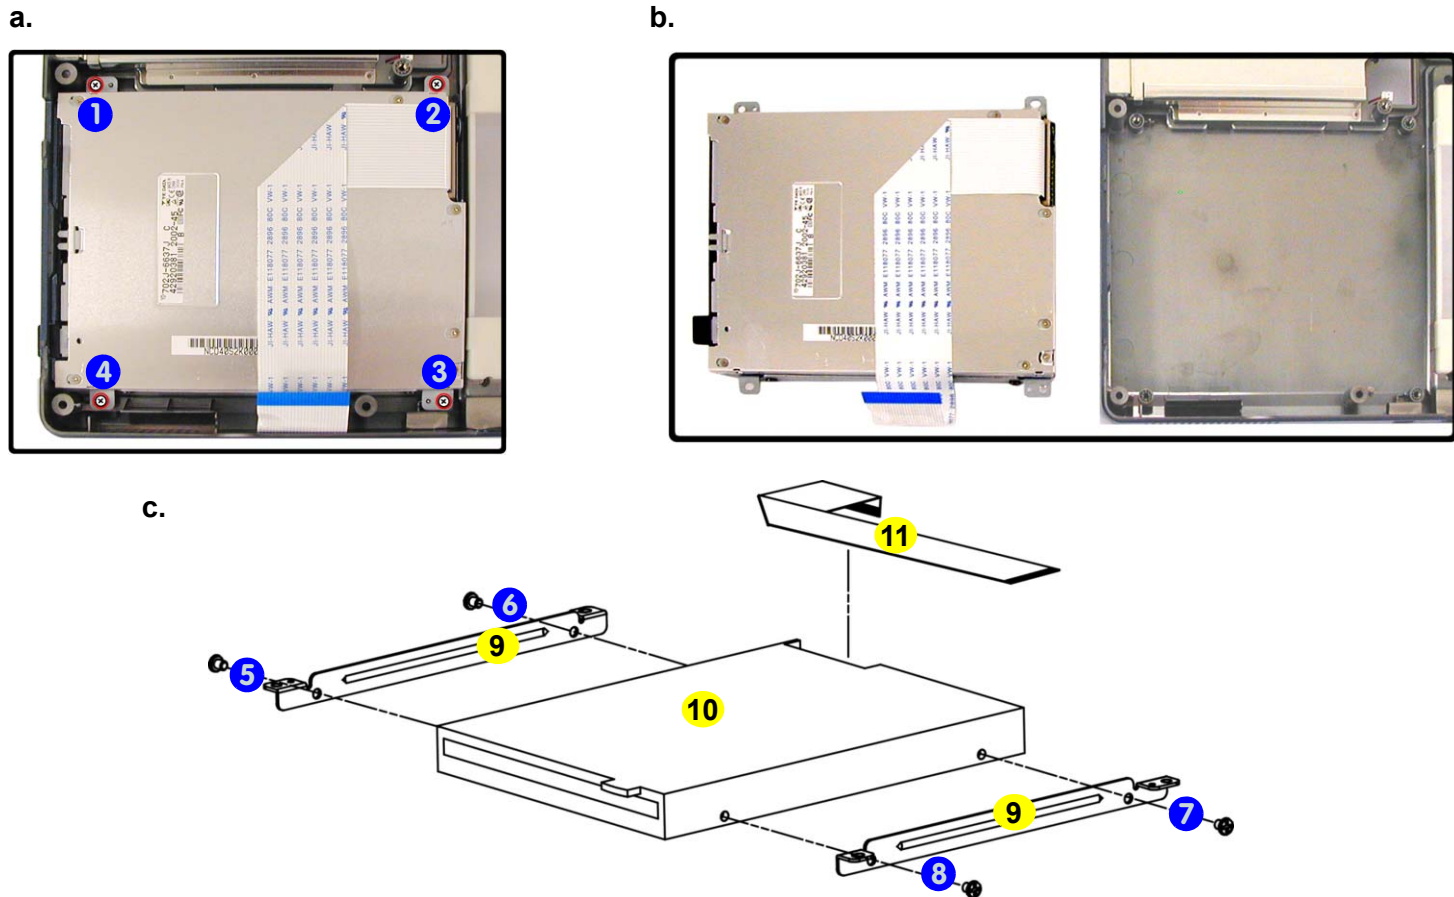


- 9. Brackets
- 10. Floppy Disk Drive
- 11. Cable
- 8 Screws



## Removing the PC Card Assembly

1. Turn **off** the computer, remove the battery ([page 2 - 8](#)), hard disk ([page 2 - 9](#)), RAM ([page 2 - 10](#)), CD Device ([page 2 - 12](#)), Bluetooth module ([page 2 - 14](#)), Wireless LAN module ([page 2 - 15](#)), CPU ([page 2 - 16](#)), keyboard ([page 2 - 18](#)), keyboard shielding plate ([page 2 - 19](#)), the top case and LCD ([page 2 - 20](#)), speakers ([page 2 - 25](#)) and mainboard ([page 2 - 26](#)).
2. Remove screws **1** & **2** (**Figure 22a**).
3. Carefully ease (use a small screwdriver) the metal pins which hold the PC Card assembly in place, at points **3** & **4** (**Figure 22b**) off the black plastic unit.
4. Lift off the PC Card assembly **5** (**Figure 22c**) off the mainboard.

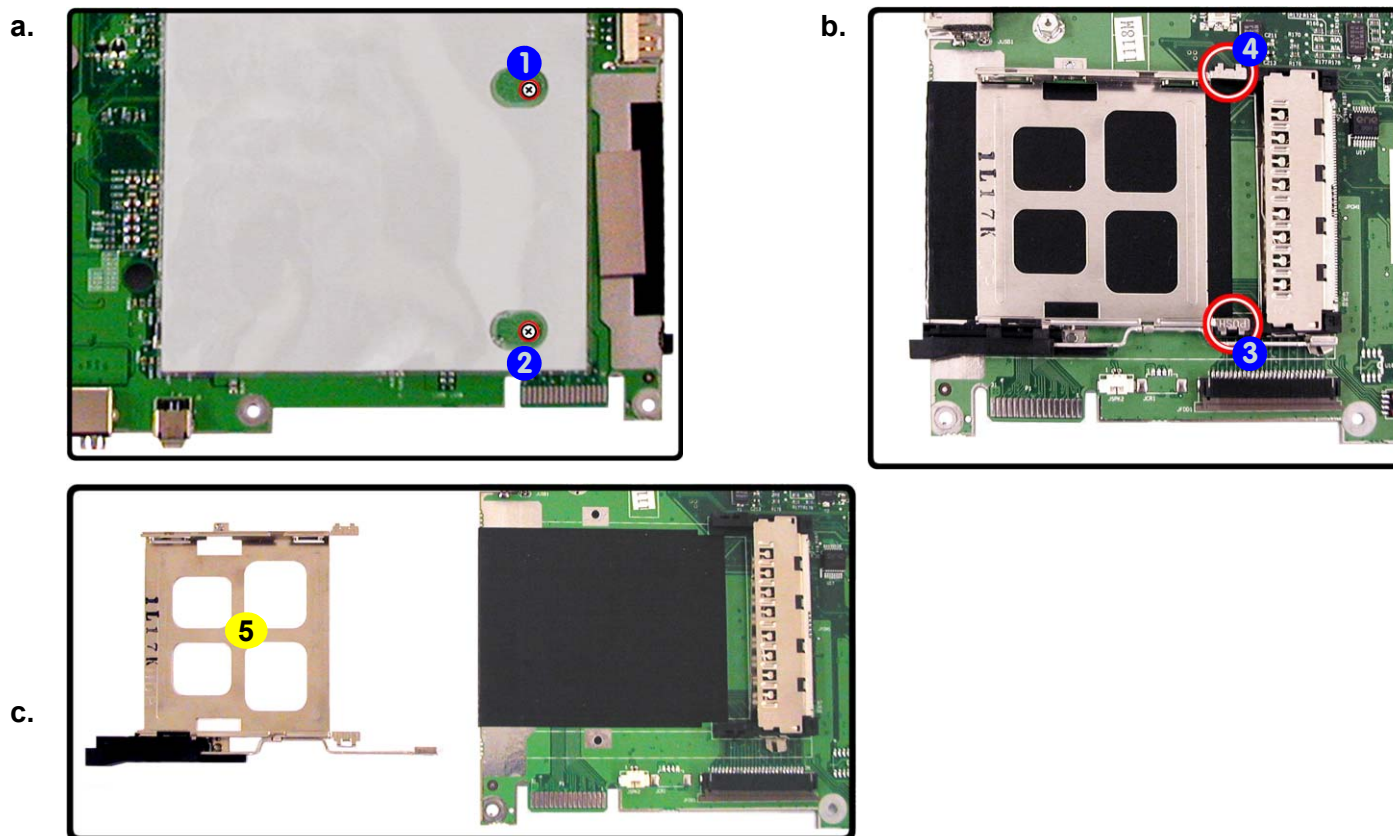

*Figure 22*  
**PC Card Assembly  
 Removal**

- a. Remove the screws.
- b. Separate the metal pins from the black plastic unit.
- c. Lift the PC Card assembly off the mainboard.



5. PC Card Assembly


- 2 Screws

## Removing the LCD Front Panel Module

1. Turn **off** the computer, remove the battery ([page 2 - 8](#)), hard disk ([page 2 - 9](#)), RAM ([page 2 - 10](#)), CD Device ([page 2 - 12](#)), Bluetooth module ([page 2 - 14](#)), Wireless LAN module ([page 2 - 15](#)), CPU ([page 2 - 16](#)), keyboard ([page 2 - 18](#)), keyboard shielding plate ([page 2 - 19](#)), and the top case and LCD ([page 2 - 20](#)).
2. Remove the rubber covers and screws at points **1** - **6** (**Figure 23a**).
3. Run your finger around the middle of the frame to carefully unsnap the LCD front panel module **7** (**Figure 23b**) from the back.

*Figure 23*  
**LCD Front Panel  
Module Removal**

- a. Remove the rubber covers and screws.
- b. Unsnap the LCD front panel from the back.

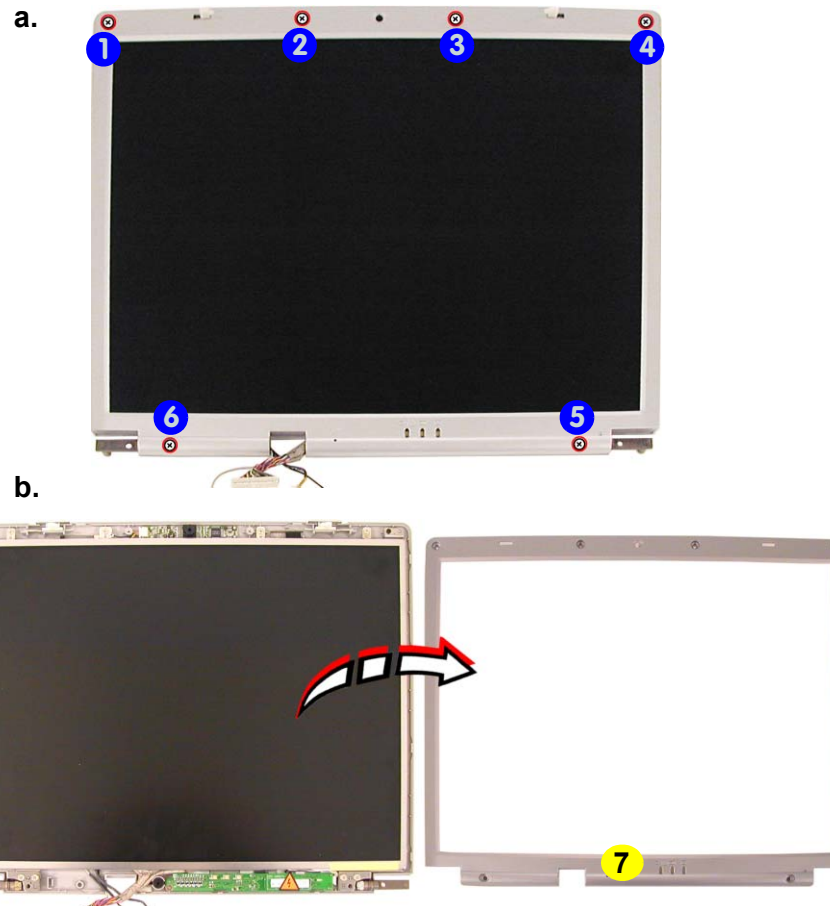


7. LCD Front Panel

- 6 Screws & Rubber Covers


## Removing the Inverter

1. Turn **off** the computer, remove the battery ([page 2 - 8](#)), hard disk ([page 2 - 9](#)), RAM ([page 2 - 10](#)), CD Device ([page 2 - 12](#)), Bluetooth module ([page 2 - 14](#)), Wireless LAN module ([page 2 - 15](#)), CPU ([page 2 - 16](#)), keyboard ([page 2 - 18](#)), keyboard shielding plate ([page 2 - 19](#)), the top case and LCD ([page 2 - 20](#)) and LCD front panel ([page 2 - 30](#)).
2. Remove screw **1** (**Figure 24a**).
3. Turn the inverter over and disconnect the cables **2** & **3** (**Figure 24b**).
4. Lift the inverter **4** (**Figure 24c**) off the LCD assembly.

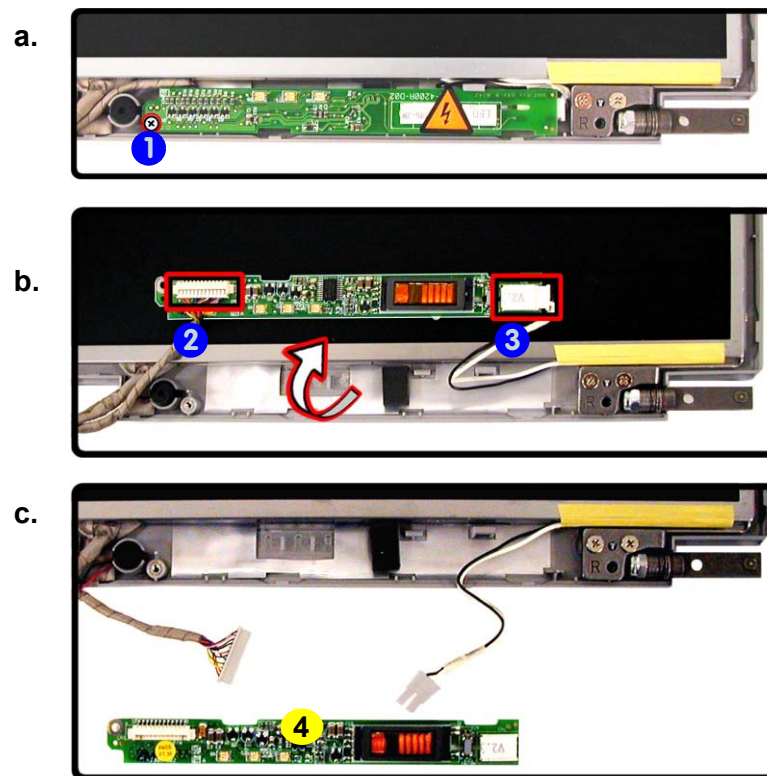

*Figure 24*  
**Inverter Removal**

- a. Remove the screw.
- b. Turn the inverter over and disconnect the cables.
- c. Lift the inverter off the LCD assembly.

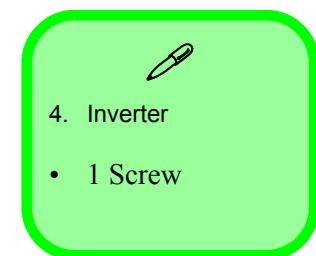




### Removing the PC Video Camera Module

1. Turn **off** the computer, remove the battery ([page 2 - 8](#)), hard disk ([page 2 - 9](#)), RAM ([page 2 - 10](#)), CD Device ([page 2 - 12](#)), Bluetooth module ([page 2 - 14](#)), Wireless LAN module ([page 2 - 15](#)), CPU ([page 2 - 16](#)), keyboard ([page 2 - 18](#)), keyboard shielding plate ([page 2 - 19](#)), the top case and LCD ([page 2 - 20](#)) and LCD front panel ([page 2 - 30](#)).
2. Disconnect cable **1** (Figure 25a).
3. Lift the PC camera module **2** (Figure 25b) off the LCD assembly.
4. If you need to remove the antenna cable, first remove the LCD module ([page 2 - 33](#)), then remove screw **3** and the antenna cable **4** (Figure 25c).

Figure 25

#### PC Camera Module Removal

- a. Disconnect the cable.
- b. Lift the PC Camera off the LCD assembly.
- c. If you need to remove the antenna first remove the LCD module then the screw, and the antenna cable.

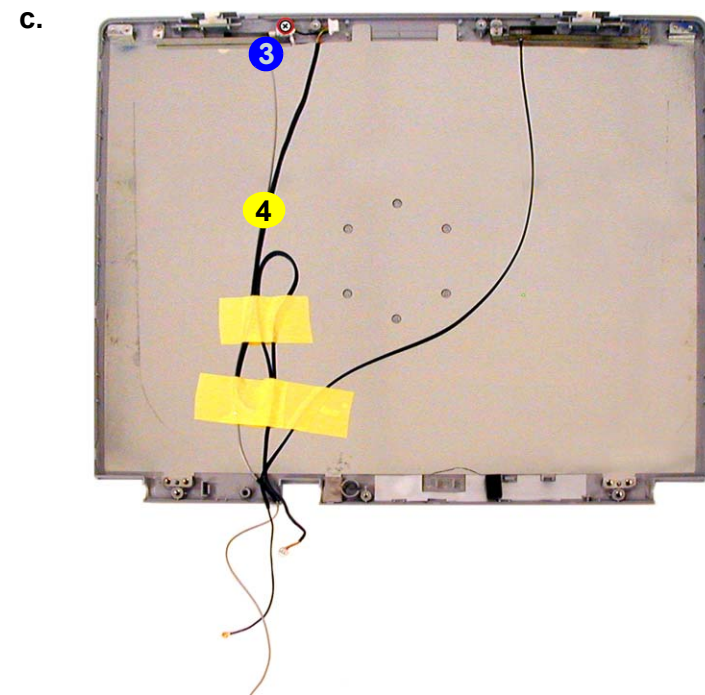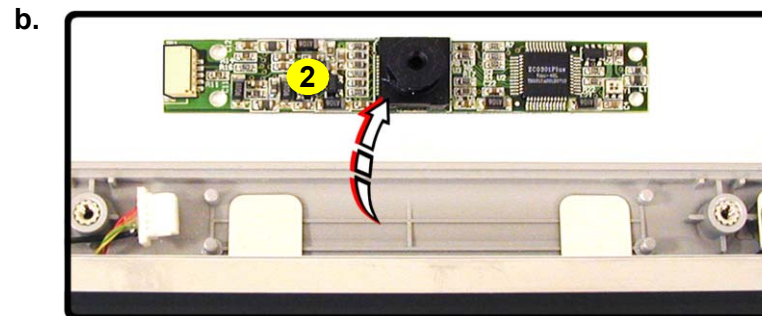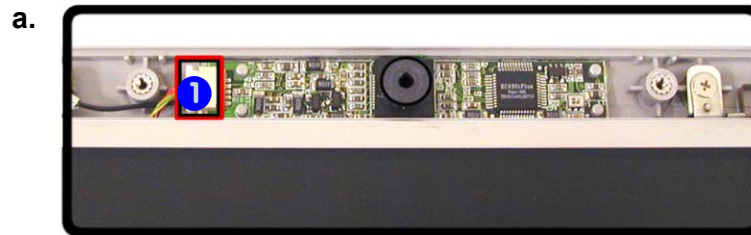

- 2. PC Camera
- 4. Antenna Cable

- 1 Screw





## Removing the LCD Module

1. Turn **off** the computer, remove the battery ([page 2 - 8](#)), hard disk ([page 2 - 9](#)), RAM ([page 2 - 10](#)), CD Device ([page 2 - 12](#)), Bluetooth module ([page 2 - 14](#)), Wireless LAN module ([page 2 - 15](#)), CPU ([page 2 - 16](#)), keyboard ([page 2 - 18](#)), keyboard shielding plate ([page 2 - 19](#)), the top case and LCD ([page 2 - 20](#)), LCD front panel ([page 2 - 30](#)) and inverter ([page 2 - 31](#)).
2. Remove screws **1** - **6** (**Figure 26a**).
3. Separate the display back panel **7** (**Figure 26b**), hinges **8** and LCD module assembly.
4. Remove screws **9** - **16** (**Figure 26c**) and separate the LCD module **17** and brackets **18**.

*Figure 26*  
**LCD Module Removal**

- a. Remove the screws.
- b. Separate the back panel, hinges and LCD module assembly.
- c. Remove the screws and separate the brackets and LCD module.

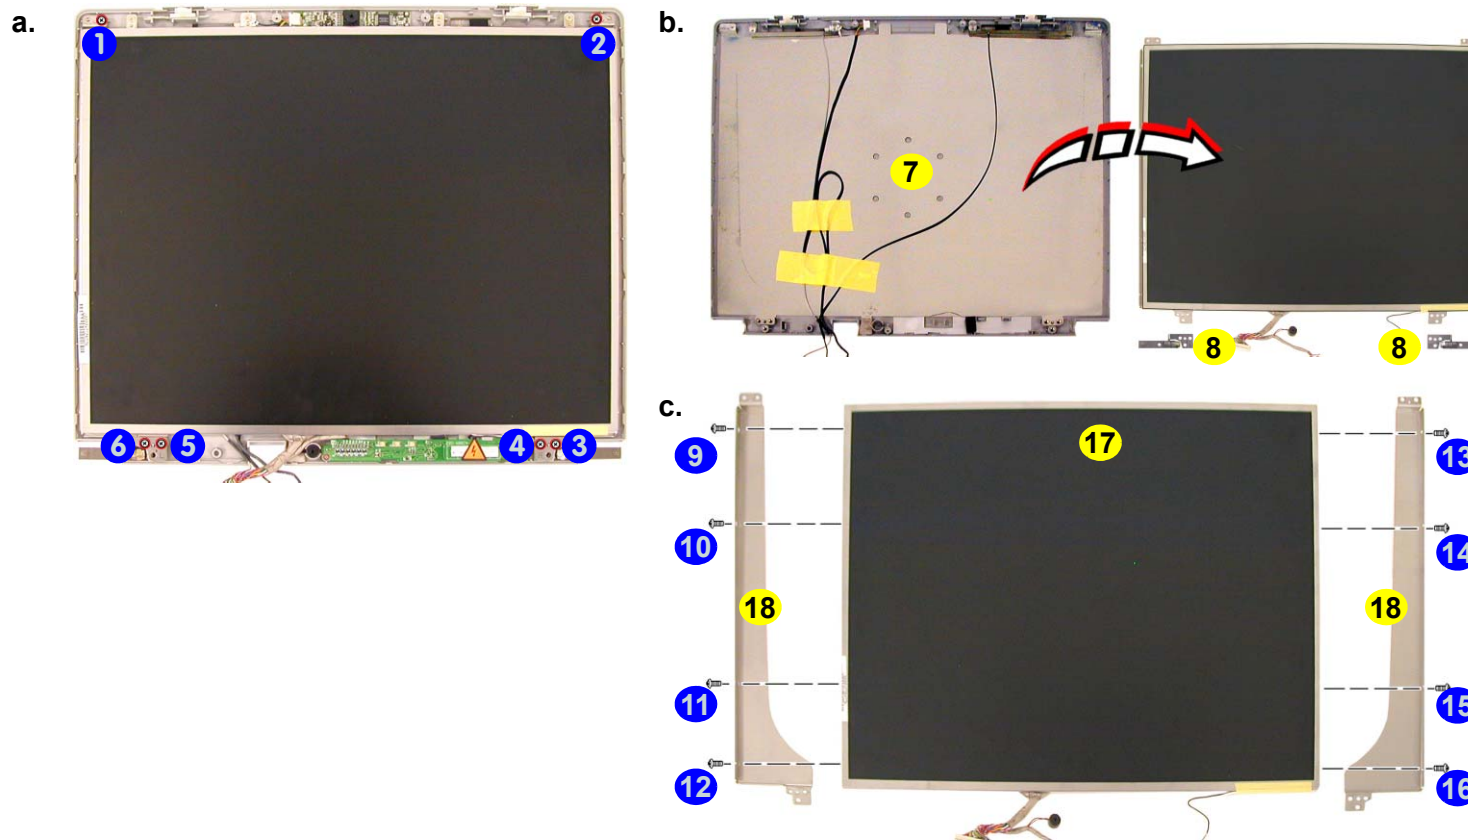



7. Back Panel  
8. Hinges  
17. LCD module  
18. Brackets

- 14 Screws





# Appendix A:Part Lists

This appendix breaks down the *D400P/D410P* series notebook's construction into a series of illustrations. The component part numbers are indicated in the tables opposite the drawings.

**Note:** This section indicates the *manufacturer's* part numbers. Your organization may use a different system, so be sure to cross-check any relevant documentation.

**Note:** Some assemblies may have parts in common (especially screws). However, the part lists DO NOT indicate the total number of duplicated parts used.

**Note:** Be sure to check any update notices. The parts shown in these illustrations are appropriate for the system at the time of publication. Over the product life, some parts may be improved or re-configured, resulting in *new* part numbers.

## Part List Illustration Location

The following table indicates where to find the appropriate part list illustration.

*Table 1 - 1*  
**Part List Illustration  
Location**

Part	400P	410P
Top	<i>page A - 3</i>	<i>page A - 13</i>
Bottom	<i>page A - 4</i>	<i>page A - 14</i>
LCD 14"	<i>page A - 5</i>	<i>page A - 15</i>
LCD 15"	<i>page A - 6</i>	<i>page A - 16</i>
CD-ROM Drive	<i>page A - 7</i>	<i>page A - 17</i>
CD-RW Drive	<i>page A - 8</i>	<i>page A - 18</i>
Combo Drive	<i>page A - 9</i>	<i>page A - 19</i>
DVD-ROM Drive	<i>page A - 10</i>	<i>page A - 20</i>
Floppy Disk Drive	<i>page A - 11</i>	<i>page A - 21</i>
Hard Disk Drive	<i>page A - 12</i>	<i>page A - 22</i>

# Top (400P)

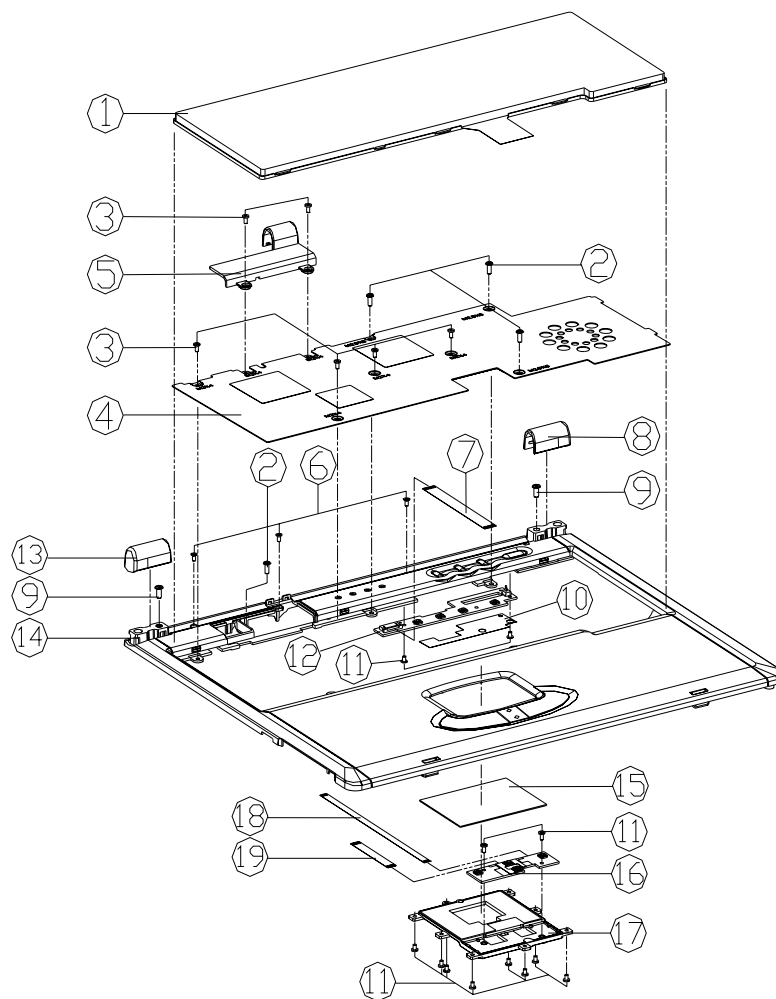


Figure 1  
Top (400P)

ITEM	PART NAME	PART NO	REMARK
1	KEYBOARD	80-88808-7G0	
2	SCREW M2.5*5L K1 BNI ICT NY	35-B9125-5R0	
3	SCREW M2*4L 1 BZ ICT NY	35-C6120-4RA	
4	KB SHIELDING	33-D4007-012	
5	CONNECTOR COVER	42-D4008-011	
6	SCREW M2*4L F NI ICT NY	35-21120-4RA	
7	FFC CABLE FOR MAIN BD TO POWER SWITCH BOARD	43-D4000-020	
8	HINGE COVER(R)	42-D400Y-012	
9	SCREW M3*6L K1 NI ICT NY	35-B1130-6RA	
10	MYLAR FOR FUNCTION BOARD	40-D400S-010	
11	SCREW M2*3L K1 NI ICT NY	35-B1120-3RB	
12	SWITCH BOARD	77-D400S-D0X	
13	HINGE COVER (L)	42-D400Y-022	
14	TOP CASE MODULE D400P	39-D4002-015	
15	TOUCHPAD ALPS NKGD0T956A M190S	49-M1902-010	
16	CLICK BOARD	77-D4002-D0X	
17	G/P HOLDER	42-D4002-020	
18	FFC CABLE FOR MAIN BD TO CLICK BD 126MM	43-D4000-030	
19	FFC CABLE FOR CLICK TO TOUCH PAD 45MM	43-D4000-040	

A.Part Lists



# Bottom (400P)

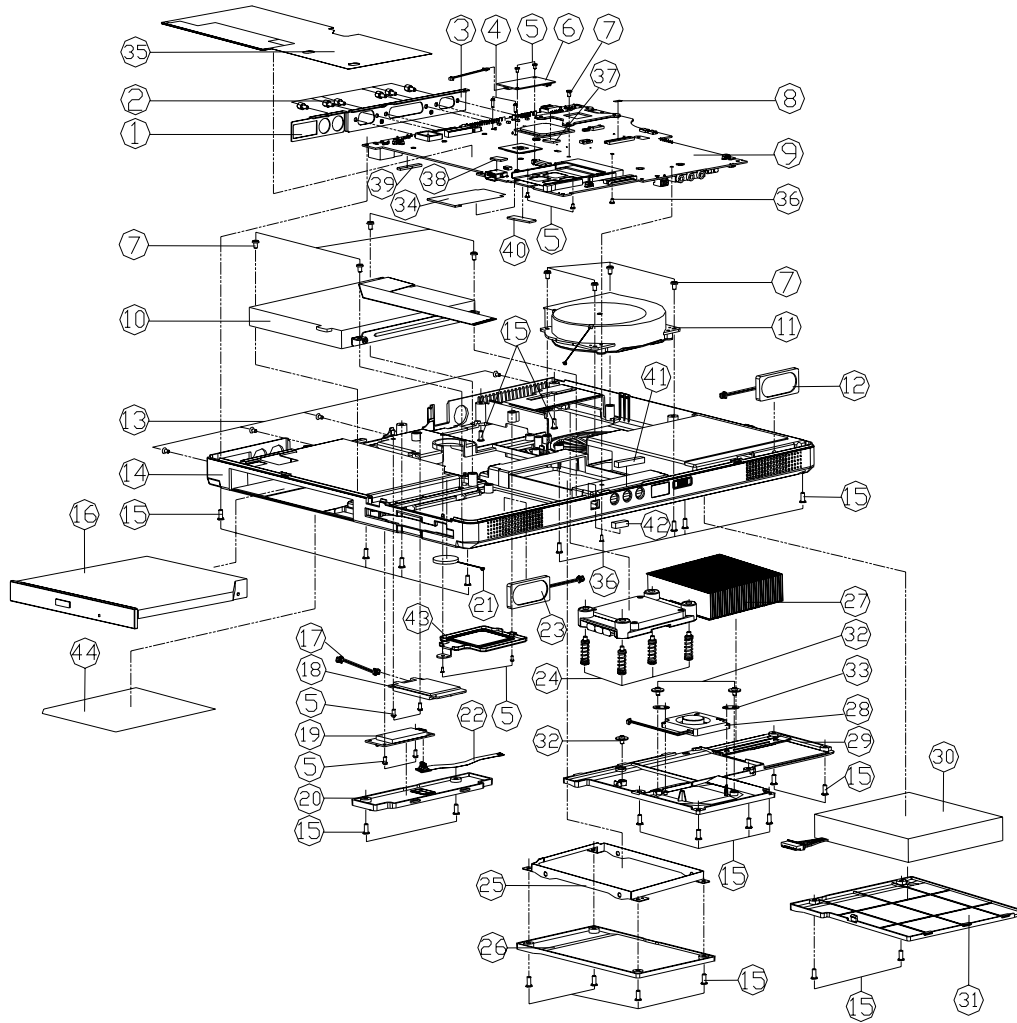


Figure 2  
Bottom (400P)

ITEM	PART NAME	PART NO	REMARK
1	I/O BRACKET	33-D400S-010	
2	HEX STUDSUM22 NI-PLJ 11MM	34-07009-011-A	
3	CABLE FOR MIC,SPK,LINE FI-SEPLACES 06006	43-D400U-012	
4	SCREW M2*6L P BZ ICT NY	35-06120-6RA	
5	SCREW M2*3L KI NI ICT NY	35-B1120-3RA	
6	MDC MODEM+TEL.CABLE MODULE	76-32200-101	
7	SCREW M2*5SL KI BNI ICT NY	35-B9125-5R0	
8	MYLARIS(8*25) FOR 85V LCD(SAMSUNG)	40-00150-150	
9	MAIN BOARD	77-M4000-DOX	
10	FDD ASS'Y(OPTION)	79-D400J-010	Reference Assy. Info (99-D400S-060)
11	D400S FAN MODULE	31-D400S-102	
12	SPEAKER 85mm IW 8 FYH-35N168 RIGHT	23-38510-801A	
13	SCREW M2*4L F NI ICT NY	35-21120-4RA	
14	BOTTOM CASE MODULE	39-D4003-017	
15	SCREW M2*6L K BZ ICT	35-82125-6R0	
16	CD-ROM DSIS(SCR-242) ASSY D400S	79-D400Z-000	Reference Assy. Info (99-D400S-070)
16	DVD-ROM DSIS(SR-083) ASSY D400S	79-D400V-000	Reference Assy. Info (99-D400S-080)
16	CD-RW TEAC(CD-V24E-480) ASSY D400S	79-D400W-000	Reference Assy. Info (99-D400S-090)
16	CD/RW DSIS(SB-161) ASSY D400S	79-D400X-000	Reference Assy. Info (99-D400S-100)
17	WIRE CABLE FOR MAIN BD TO WLAN BD	43-D4000-070	
18	WLAN 80211 b USB INTERFACE USB-300	88-D4020-300	
19	BLUETOOTH MODULE VII USB INTERFACE(USI)	88-18250-370	
20	BLUETOOTH COVER MODULE	42-D400B-101	
21	BAL. 20M 2V 230mAh V/CABLE 50M CR3220/20AP	23-22015-P80	
22	FPC CABLE FOR MAIN BD TO BLUETOOTH BD	43-D4000-011	
23	SPEAKER 25mm IW 8 FYH-35N168 LEFT	23-32510-801A	
24	SCREW M2.5*4.5PH155 d1=3.5 L=15.5 S=2.5	35-49025-155	
25	HDD BRACKET	33-D4001-010	
26	HDD COVER	42-D4001-011	
27	D400E HEAT SINK MODULE	31-D400E-101-1	
28	FAN 40*40*7T 5V 0.2A	23-A4011-462	
29	CPU COVER MODULE	42-D400S-101	
30	Smart batt. 452P 14.8V 4400mAh(SMP)	87-D408S-4D5	
30	Smart batt. 452P 14.8V 4400mAh(LGD)	87-D408S-4E5	
31	BATTERY COVER MODULE	42-D400M-102	
32	SCREW M2.5*2.5L B NI ICT W/VAS NY	35-41025-2R5	
33	FAN BRACKET	33-D400S-060	
34	PCMCIA MYLAR MYLAR 320	40-32004-000	
35	EMI SHIELDING FOR M/B	47-D400S-021	
36	SCREW M2*4L I BZ ICT NY	35-C6120-4RA	
37	GASKET FOR USB(V10mm H2mm L17mm)	47-00190-174	
38	GASKET FOR USB CONNECTOR(V10mm H4mm L15mm)	47-00190-157	
39	GASKET FOR FPD AND S-VIDEO(V10mm H5mm L25mm)	47-00190-353	
40	GASKET FOR LEFT SIDE OF M/B(V10mm H3mm L30mm)	47-00190-30B	
41	GASKET FOR AUDIO(V10mm H6.5mm L35mm)	47-00190-354	
42	GASKET FOR I2S(V10mm H5.5mm L13mm)	47-00190-133	
43	CPU HOLDER	33-D400S-030	
44	PRODUCT LABEL D400P	45-D40P3-020	

# LCD 14" (400P)

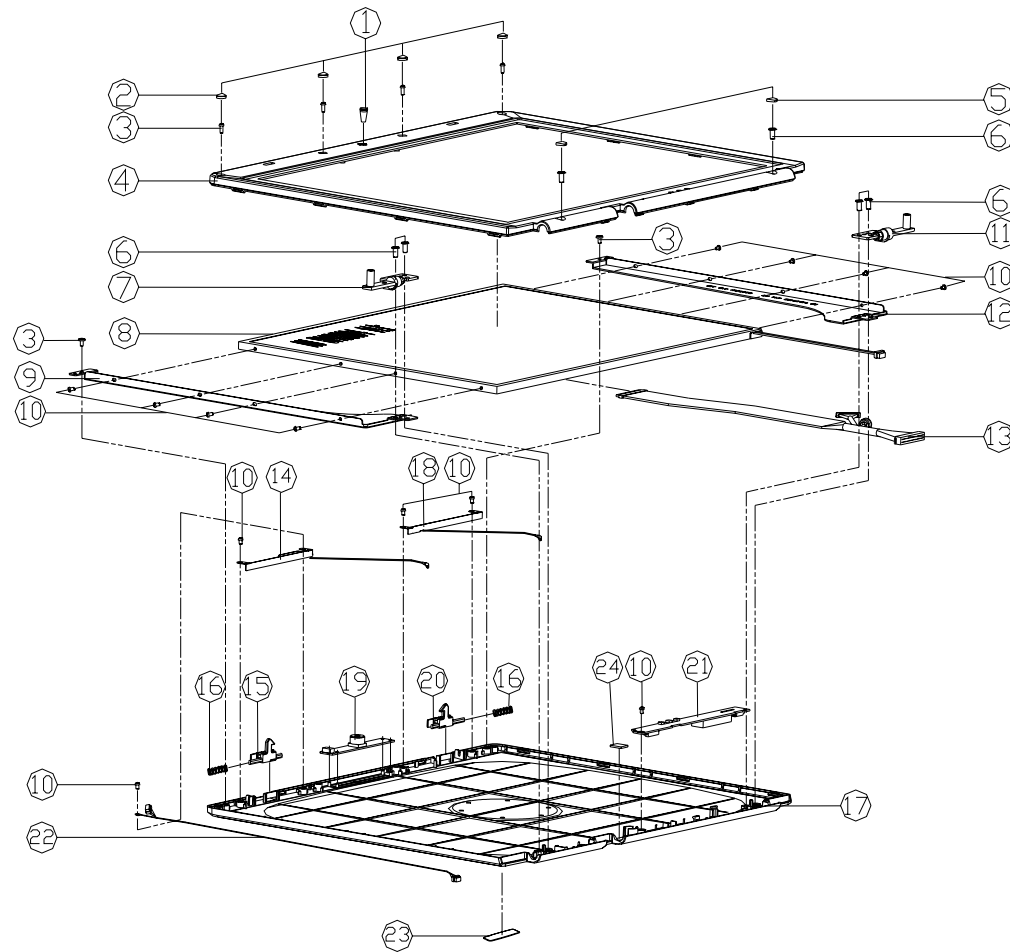


Figure 3  
LCD 14" (400P)


ITEM	PART NAME	PART NO	REMARK
1	RUBBER FDR VIBED CAMERA	47-D400P-010	
2	RUBBER FDR LCD (TOP)	47-56P32-010	
3	SCREW M2*4L I BZ ICT	35-C6120-4R0	
4	DISPLAY FRONT PANEL 14.1" MODULE	39-D4001-101	
5	DISPLAY RUBBER PAD (DOWN)	47-D4001-020	
6	SCREW M3*6L KI NI ICT NY	35-B1130-6RA	
7	HINGE (L)	33-D400Y-021	
8	LCD T AU B141XND4 V.1 14.1" XGA	50-J2287-G04	
8	LCD T 1B1 TX77-E53-029 14.1" XGA	50-J2287-E01	
9	LCD BRACKET (L) FOR AU 14.1" LCD	33-D4001-120	
9	LCD BRACKET (L) FOR 14.1" LCD	33-D4001-020	
10	SCREW M2*3L KI NI ICT NY	35-B1120-3RB	
11	HINGE (R)	33-D400Y-011	
12	LCD BRACKET (R) FOR AU 14.1" LCD	33-D4001-110	
12	LCD BRACKET (R) FOR 14.1" LCD	33-D4001-010	
13	WIRE CABLE FOR 14" LCD XGA AU	43-D4001-021	
14	ANTENNA BLUETOOTH PIFA 24G L=540mm	23-742R4-005	
15	LCD HOOK(L)	42-D4001-021	
16	SPRING FOR HOOK(φ3.7*15*0.3φ)	38-21P30-011	
17	DISPLAY BACK PANEL MODULE D400P	39-D4001-204	
18	WIRELESS ANTENNA PIFA 24G L=430mm D400S	23-742R4-004	
19	VIBED CAMERA CM6130, 300K Pixels Resolu	88-D40CC-410	OPTION
20	LCD HOOK(R)	42-D4001-011	
21	INVERTER BOARD	77-4200R-D02-1	
22	WIRE CABLE MAIN BD TO CCD MODULE	43-D4000-060	OPTION
23	NAME PLATE "NGTEBOOK"	45-42001-010	
24	GASKET FDR Y CABLE(φ10mm H20mm L15mm)	47-00190-15B	

A.Part Lists

Part Lists

LCD 15" (400P)

Figure 4  
LCD 15" (400P)

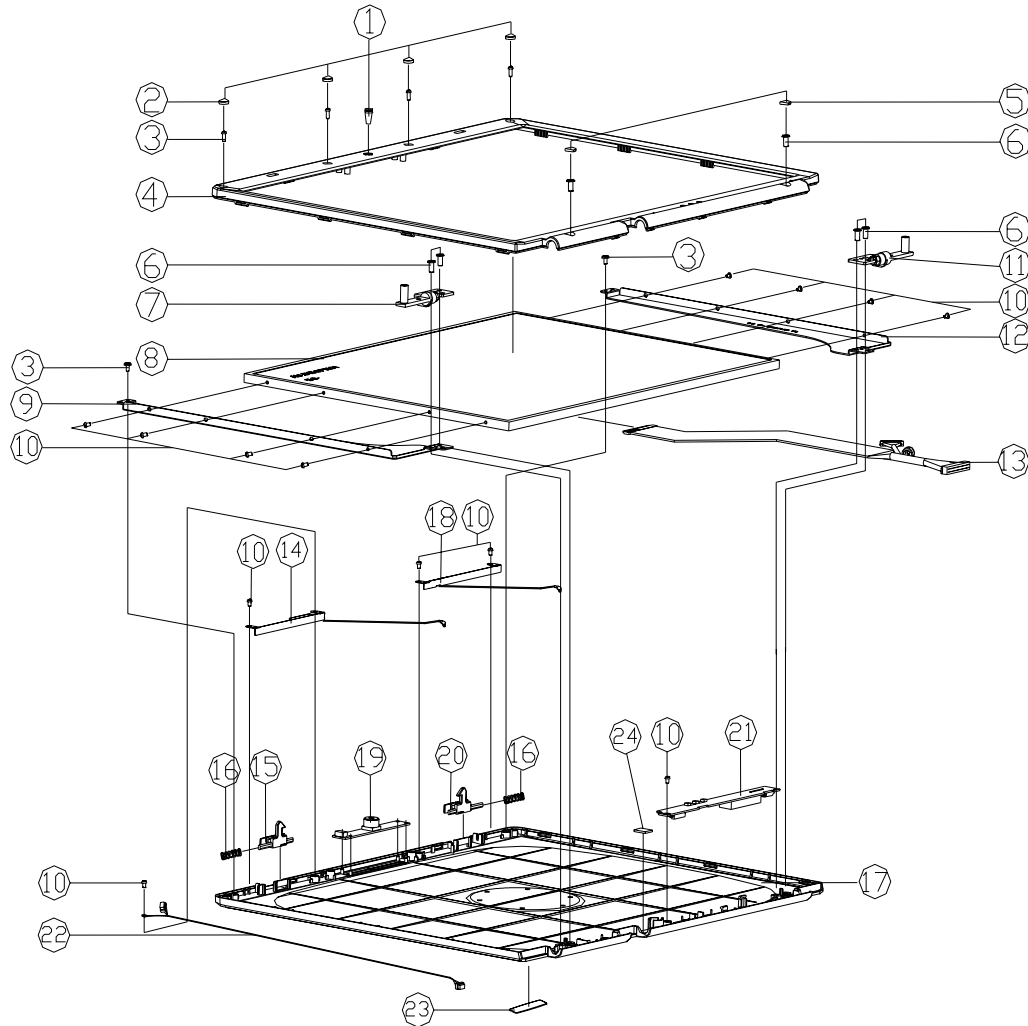

ITEM	PART NAME	PART NO	REMARK
1	RUBBER FOR VIDED CAMERA	47-D400P-010	
2	RUBBER FOR LCD (TOP)	47-56P32-010	
3	SCREW M2*4L I BZ ICT	35-C6120-4R0	
4	DISPLAY FRONT PANEL 15" MODULE	39-D4001-111	
5	DISPLAY RUBBER PAD (DOWN)	47-D4001-020	
6	SCREW M3*6L K1 NI ICT NY	35-B1130-6RA	
7	HINGE (L)	33-D400Y-021	
8	LCD 15.0" TFT AU B150P011 1400*1050 SXGA+	50-L5259-U10	
8	LCD 15.0 1BM TFT DEM95C-02 SXGA+ 4.1mm	50-L3241-E00	
9	LCD BRACKET (L) FOR AU 15.1" LCD	33-D4001-140	
9	LCD BRACKET (L) FOR 1BM 15.1" LCD	33-D4001-240	
10	SCREW M2*3L K1 NI ICT NY	35-B1120-3RB	
11	HINGE (R)	33-D400Y-011	
12	LCD BRACKET (R) FOR AU 15.1" LCD	33-D4001-130	
12	LCD BRACKET (R) FOR 1BM 15.1" LCD	33-D4001-230	
13	WIRE CABLE FOR 15" LCD SXGA+ AU	43-D4001-121	
13	WIRE CABLE FOR 15" LCD SXGA+ IDT	43-D4001-111	
14	ANTENNA BLUETOOTH PIFA 24G L=540mm	23-742R4-005	
15	LCD HOOK(L)	42-D4001-021	
16	SPRING FOR HOOK(φ3.7*15*0.3φ)	38-21P30-011	
17	DISPLAY BACK PANEL MODULE D400P	39-D4001-204	
18	WIRELESS ANTENNA PIFA 24G L=430mm 04005	23-742R4-004	
19	VIDEO CAMERA CM3130, 300K Pixels Resolu	88-D40C0-410	OPTION
20	LCD HOOK(R)	42-D4001-011	
21	INVERTER BOARD	77-4200R-D02-1	
22	WIRE CABLE MAIN BD TO CCD MODULE	43-D4000-060	OPTION
23	NAME PLATE "NOTEBOOK"	45-42001-010	
24	GASKET FOR Y CABLE(φ10mm H2mm L15mm)	47-00190-158	

# CD-ROM Drive (400P)


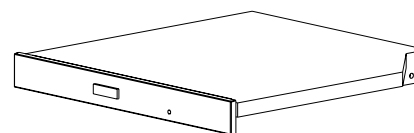



Figure 5  
CD-ROM Drive  
(400P)

ITEM	PART NAME	PART NO	REMARK
1	CD-ROM BEZEL MODULE QSI	42-D400Z-100	
1	CD-ROM BEZEL MODULE TEAC	42-D400Z-300	
2	CD-ROM 5 1/4\" 24X CAB SLIM QSI(KSCR-242)	85-607□X-C00	
2	CD-ROM 5 1/4\" 24X CD-224E-C20 12.7mm TEAC	85-607□X-709	
3	CDROM LOCK BRACKET	33-D400Z-010	
4	SCREW M2*3L KI NI ICT NY	35-B1120-3RB	

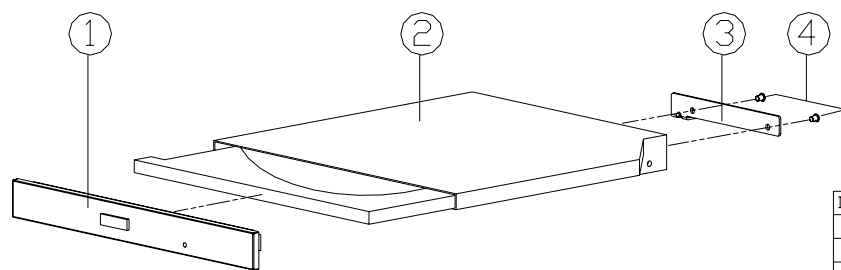

# CD-RW Drive (400P)

Figure 6  
CD-RW Drive  
(400P)

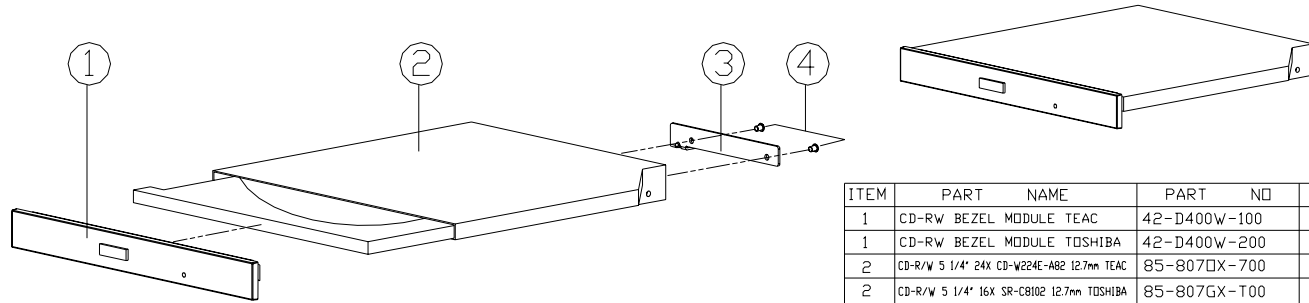

ITEM	PART NAME	PART NO	REMARK
1	CD-RW BEZEL MODULE TEAC	42-D400W-100	
1	CD-RW BEZEL MODULE TOSHIBA	42-D400W-200	
2	CD-R/W 5 1/4" 24X CD-W224E-AB2 12.7mm TEAC	85-807DX-700	
2	CD-R/W 5 1/4" 16X SR-C8102 12.7mm TOSHIBA	85-807GX-T00	
3	CDROM LOCK BRACKET	33-D400Z-010	
4	SCREW M2*3L KI NI ICT NY	35-B1120-3RB	

# Combo Drive (400P)

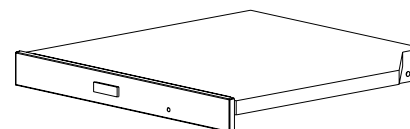
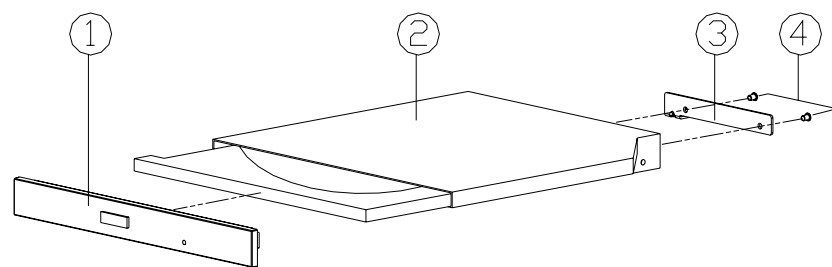



Figure 7  
Combo Drive  
(400P)

ITEM	PART NAME	PART NO	REMARK
1	COMBO BEZEL MODULE QSI D400S	42-D400X-100	
1	COMBO BEZEL MODULE SAMSUNG	42-D400X-200	
2	CD-RW/DVD 5 1/4" 24X 12.7mm SBW-241 QSI	85-907□X-C00	
2	CD-RW/DVD 5 1/4" 24X 12.7mm SN-324 SAMSUNG	85-907□X-S00	
3	CDROM LOCK BRACKET	33-D400Z-010	
4	SCREW M2*3L KI NI ICT NY	35-B1120-3RB	

A.Part Lists

## DVD-ROM Drive (400P)

Figure 8  
DVD-ROM Drive  
(400P)

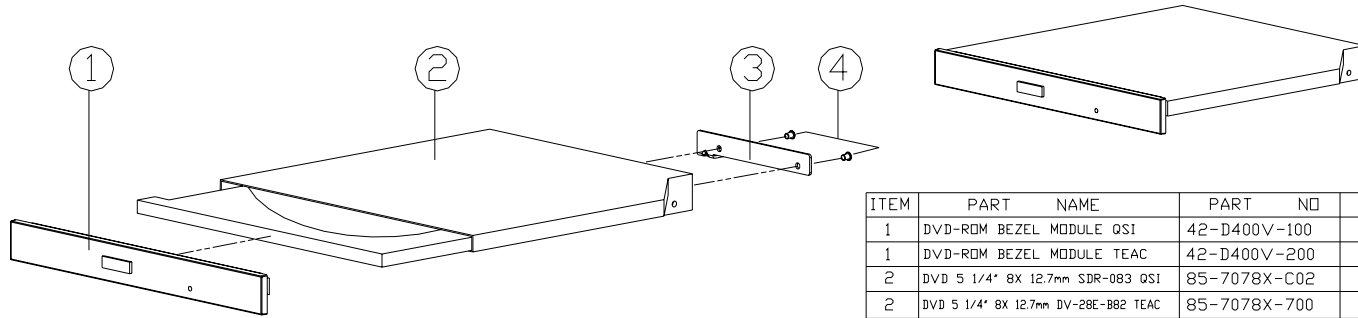

ITEM	PART NAME	PART NO	REMARK
1	DVD-ROM BEZEL MODULE QSI	42-D400V-100	
1	DVD-ROM BEZEL MODULE TEAC	42-D400V-200	
2	DVD 5 1/4" 8X 12.7mm SDR-083 QSI	85-7078X-C02	
2	DVD 5 1/4" 8X 12.7mm DV-28E-BB2 TEAC	85-7078X-700	
3	CDROM LOCK BRACKET	33-D400Z-010	
4	SCREW M2*3L KI NI ICT NY	35-B1120-3RB	

# Floppy Disk Drive (400P)


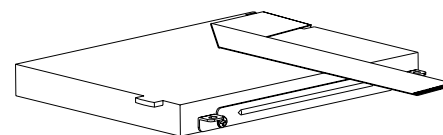


Figure 9  
Floppy Disk Drive  
(400P)



ITEM	PART NAME	PART NO	REMARK
1	SCREW M2.5*3L KI BK/D.NY	35-B4125-3RA	
2	FDD BRACKET	33-D400J-010	
3	FDD 3.5" 1.44MB 12.7mm (YD-702J-6637J)	85-11700-Y01-01	
4	FFC CABLE FOR MAIN BD TO FDD 180MM	43-D4000-050	

A.Part Lists

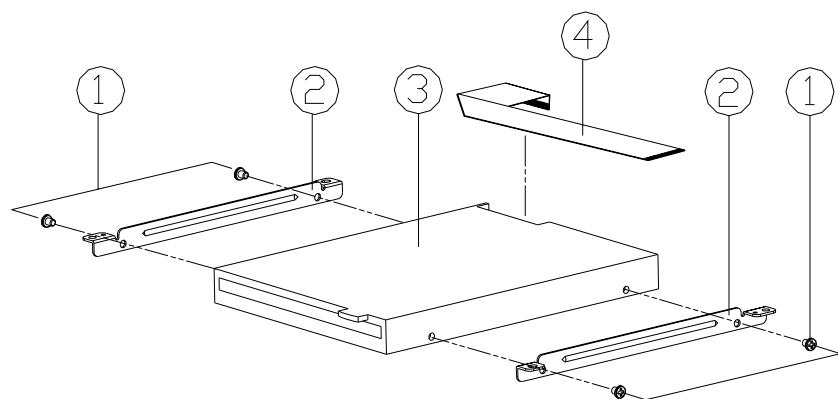


## Hard Disk Drive (400P)

Figure 10  
HDD Drive (400P)

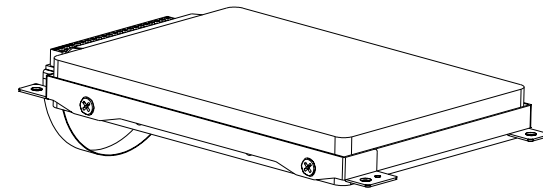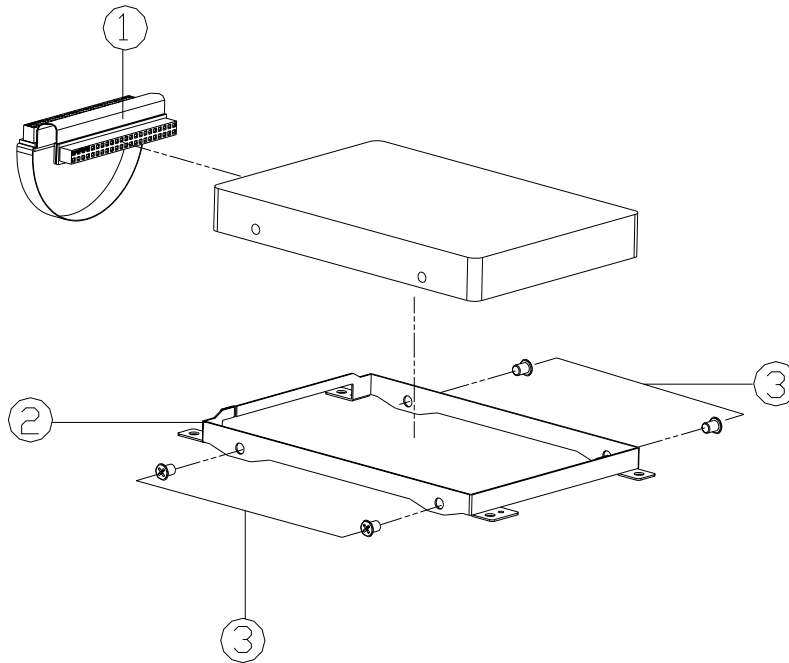

ITEM	PART NAME	PART NO	REMARK
1	FPC CABLE FOR HD TO MAIN BD, 30MM,8880	43-88800-010	
2	HDD BRACKET	77-22004-D03A	
3	SCREW M3*4L KI BZ ICT NY	35-B6130-4RB	

Top (410P)

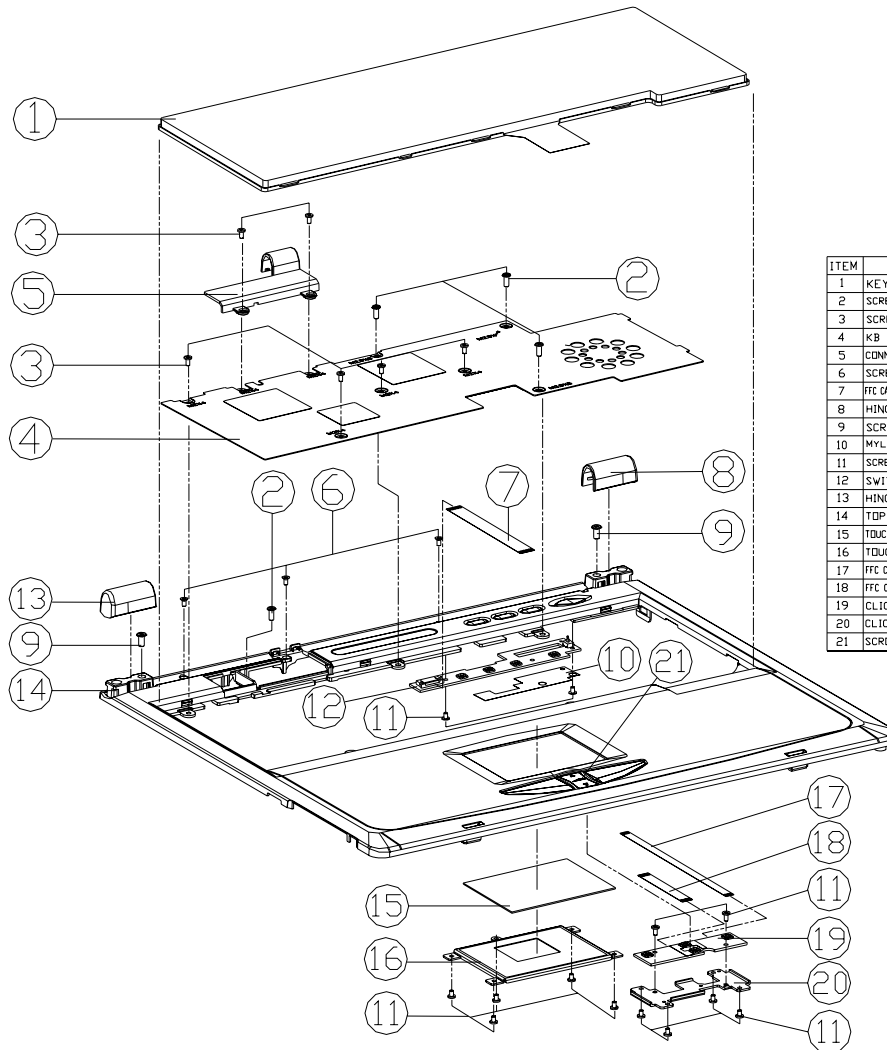

ITEM	PART NAME	PART NO	REMARK
1	KEYBOARD	80-88808-7G0	
2	SCREW M2.5*5L K1 BNI ICT NY	35-B9125-5R0	
3	SCREW M2*4L 1 BZ ICT NY	35-C6120-4RA	
4	KB SHIELDING	33-D4007-012	
5	CONNECTOR COVER FOR D410S	42-D4108-011	
6	SCREW M2*4L F NI ICT NY	35-21120-4RA	
7	FFC CABLE FOR MAIN BB TO POWER SWITCH BOARD	43-D4000-020	
8	HINGE COVER(R)	42-D400Y-012	
9	SCREW M3*5L K1 NI ICT NY	35-B1130-5RA	
10	MYLAR FOR FUNCTION BOARD	40-D400S-011	
11	SCREW M2*3L K1 NI ICT NY	35-B1120-3RB	
12	SWITCH BOARD	77-D400S-D05	
13	HINGE COVER (L)	42-D400Y-022	
14	TOP CASE MODULE D410S	39-D4102-015	
15	TOUCHPAD ALPS KKGDDF1956A M190S	49-M1902-010	
16	TOUCH PAD BRACKET	33-D4102-011	
17	FFC CABLE FOR MAIN BB TO CLICK BD 126MM	43-D4000-030	
18	FFC CABLE FOR CLICK TO TOUCH PAD 45MM	43-D4000-040	
19	CLICK BOARD	77-D4002-D05	
20	CLICK PCB BRACKET	33-D410S-010	
21	SCROLL KNDB	42-D4102-021	

Figure 11  
Top (410P)

# Bottom (410P)

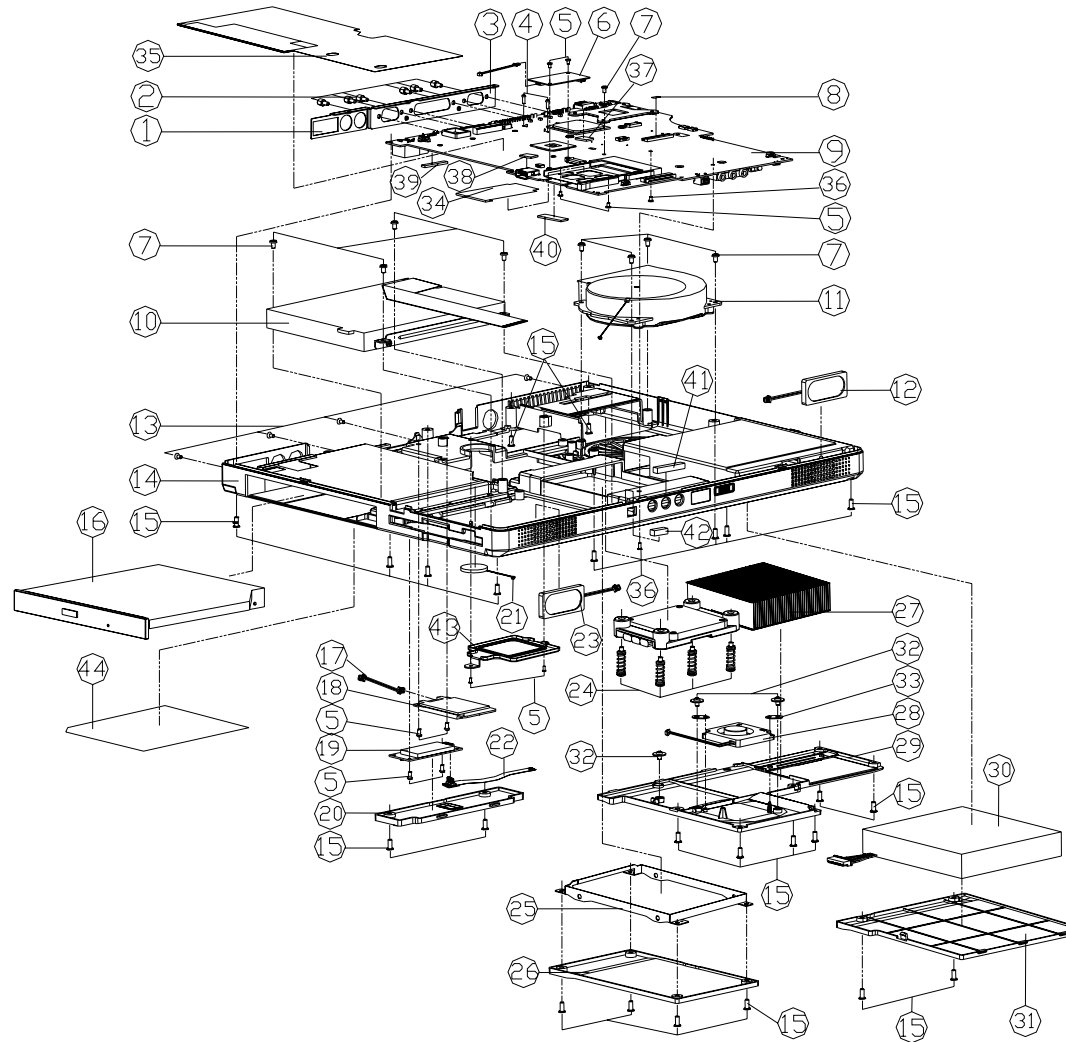


Figure 12  
Bottom (410P)

ITEM	PART NAME	PART NO	REMARK
1	1/O BRACKET	33-D400S-010	
2	HEX STUD(SUM22 NI-PL) 11MM	34-07009-011-A	
3	CABLE FOR MDC179MM-AM F1-S2SACES 05206	43-D400U-012	
4	SCREW M2*6L P BZ ICT NY	35-06120-6RA	
5	SCREW M2*3L KI NI ICT NY	35-B1120-3RA	
6	MDC MODULE+TEL.CABLE MODULE	76-32200-101	
7	SCREW M2.5*5L KI BNI ICT NY	35-B9125-5R0	
8	MYLAR(M5*0.25) FOR 85V LCD(SAMSUNG)	40-00150-150	
9	MAIN BOARD	77-M4000-D04	
10	FDD ASS'Y(OPTION)	79-D400J-010	Reference Assy Mfg (99-D400S-350)
11	D400S FAN MODULE	31-D400S-102	
12	SPEAKER 85mm IW 8 FYH-35N6B RIGHT	23-38510-801A	
13	SCREW M2*4L F NI ICT NY	35-21120-4RA	
14	BOTTOM CASE MODULE FOR D410S	39-D4103-016	
15	SCREW M2.5*6L K BZ ICT	35-82125-6R0	
16	CD-ROM TEAC(ICD-244E-C20) ASSY D410S	79-D410Z-031	Reference Assy Mfg (99-D410S-070)
16	DVD-ROM DS1(SDR-083) ASSY D410S	79-D410V-000	Reference Assy Mfg (99-D410S-060)
16	CD-RW TEAC(ICD-V224E-AB2) ASSY D410S	79-D410W-000	Reference Assy Mfg (99-D410S-050)
16	COMBO TEAC(ICD-V224E-AB2) ASSY D410S	79-D410X-030	Reference Assy Mfg (99-D410S-100)
17	WIRE CABLE FOR MAIN BD TO WLAN USB BD	43-D4000-070	
18	WLAN 802.11 b USB INTERFACE USB-300	88-D4020-380	
19	BLUETOOTH MODULE VII USB INTERFACE(US)	88-18250-370	
20	BLUETOOTH COVER MODULE D410S	42-D410B-101	
21	BAT. 2000 3V 230MM W/CABLE 30MM CR032/0734P	23-22015-P2B	
22	IPC CABLE FOR MAIN BD TO BLUETOOTH BD D400	43-D4000-011	
23	SPEAKER 25mm IW 8 FYH-35N6B LEFT	23-32510-801A	
24	SCREW M2.5*0.45P155 di=35 L=155 S=25	35-49025-155	
25	HDD BRACKET	33-D4001-010	
26	HDD COVER FOR D410S	42-D4101-011	
27	D400E HEAT SINK MODULE	31-D40EN-101-1	
28	FAN 40*40*7T 5V 0.26(A)-POWER)	23-A4011-462	
29	CPU COVER MODULE D410U	42-D41US-101	
30	Smart batt. 4SRP 14.8V 4400MAH(SMP)	87-D40BS-4D5	
30	Smart batt. 4SRP 14.8V 4400MAH(GLD)	87-D40BS-4E5	
31	BATTERY COVER MODULE D410S	42-D410S-102	
32	SCREW M2.5*2.5L B NI ICT W/VAS NY	35-41025-2R5	
33	FAN BRACKET	33-D400S-060	
34	PCMCIA MYLAR MYLAR 320	40-32004-000	
35	EMI SHIELDING FOR M/B	47-D400S-020	
36	SCREW M2*4L I BZ ICT NY	35-C6120-4RA	
37	GASKET FOR USB(W/10mm H20mm L17mm)	47-00190-174	
38	GASKET FOR USB CONNECTOR(W/10mm H4mm L15mm)	47-00190-157	
39	GASKET FOR PS2 AND S-VIDEO(W/5mm H5mm L35mm)	47-00190-353	
40	GASKET FOR LEFT SIDE OF W/B(W/10mm H3mm L30mm)	47-00190-30B	
41	GASKET FOR AUDIO(W/10mm H6.5mm L35mm)	47-00190-354	
42	GASKET FOR I394(W/5mm H5.5mm L13mm)	47-00190-133	
43	CPU HOLDER	33-D40ES-030	
44	PRODDT LABEL D410P	45-D41P3-021	

# LCD 14" (410P)

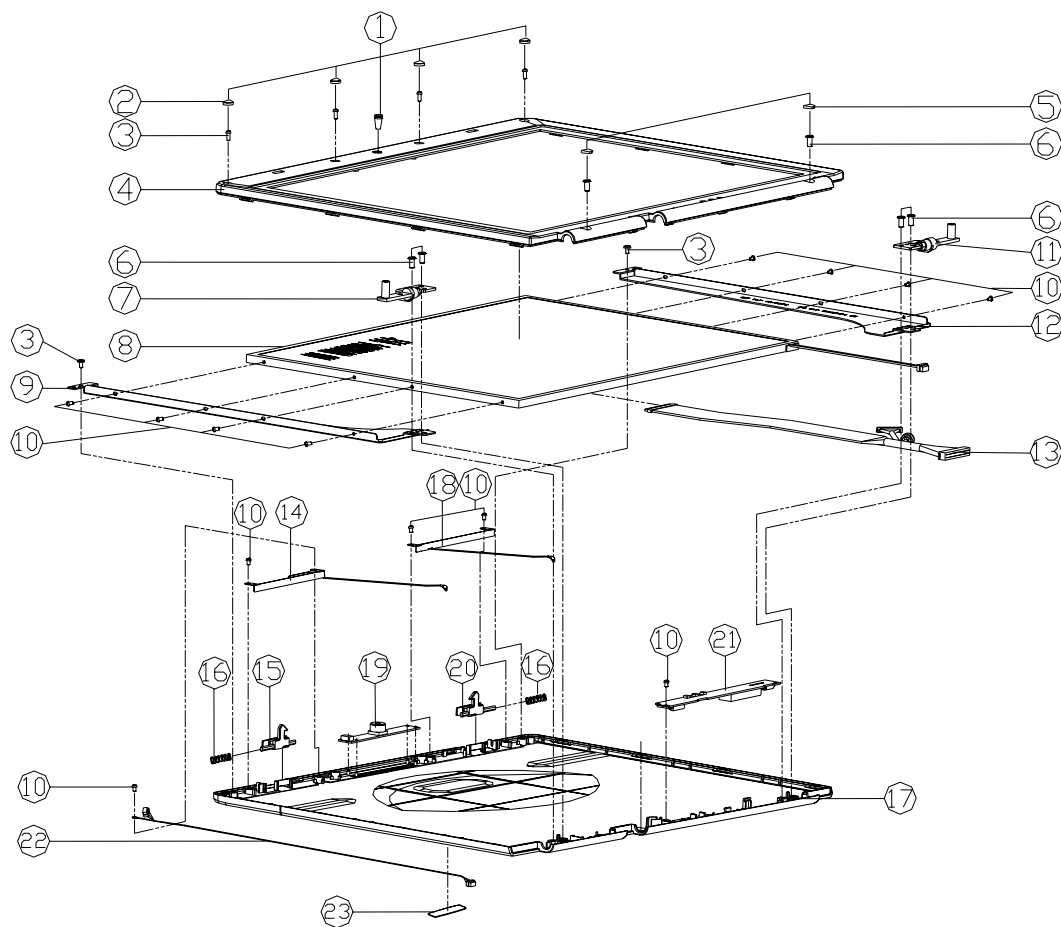


Figure 13  
LCD 14" (410P)

ITEM	PART NAME	PART NO	REMARK
1	RUBBER FOR VIDEO CAMERA	47-D400P-010	
2	RUBBER FOR LCD (TOP)	47-56P32-010	
3	SCREW M2*4L I BZ ICT	35-C6120-4R0	
4	DISPLAY FRONT PANEL 14.1" MODULE	39-D4001-101	
5	DISPLAY RUBBER PAD (DOWN)	47-D4001-020	
6	SCREW M3*6L KI NI ICT NY	35-B1130-6RA	
7	HINGE (L)	33-D400Y-022	
8	LCD T NEC NL102768C28-1F 14.1"XGA	50-J2264-J00	
8	LCD HITACHI TX36D79VC1A8 14.1" XGA 60m	50-J2206-102	
8	LCD T UNIPAC UB14X03 14.1" XGA 60m	50-J2260-U09	
9	LCD BRACKET (L) FOR AU 14.1" LCD	33-D4001-120	
9	LCD BRACKET (L) FOR NEC 14.1" LCD	33-D4001-060	
9	LCD BRACKET (L) FOR HITACHI 14.1" LCD	33-D4001-220	
10	SCREW M2*3L KI NI ICT NY	35-B1120-3RB	
11	HINGE (R)	33-D400Y-012	
12	LCD BRACKET (R) FOR AU 14.1" LCD	33-D4001-112	
12	LCD BRACKET (R) FOR NEC 14.1" LCD	33-D4001-150	
12	LCD BRACKET (R) FOR HITACHI 14.1" LCD	33-D4001-210	
13	WIRE CABLE FOR 14" LCD XGA AU	43-D4001-021	
13	WIRE CABLE FOR 14" LCD XGA NEC	43-D4001-040	
13	WIRE CABLE FOR 14" LCD XGA HITACHI	43-D4001-050	
14	800S BLUETOOTH ANTENNA PIFA 24G L=54mm	23-742R4-005-1	
15	LCD HOOK(L)	42-D4001-022	
16	SPRING FOR HOOK(φ3.7*15*0.3d)	38-21P30-011	
17	DISPLAY BACK PANEL MODULE D410S	39-D4101-203	
18	WIRELESS ANTENNA PIFA 24G L=43mm 800S	23-742R4-004-1	
19	VIDEO CAMERA CMOS130, 300k Pixels Resolu	88-D40C0-410	OPTION
20	LCD HOOK(R)	42-D4001-012	
21	INVERTER BOARD	77-4200R-D02-1	
22	WIRE CABLE MAIN BD TO CCD MODULE	43-D4000-060	
23	NAME PLATE "NOTEBOOK"	45-42001-010	


A.Part Lists

Part Lists

# LCD 15" (410P)

A.Part Lists

Figure 14  
LCD 15" (410P)

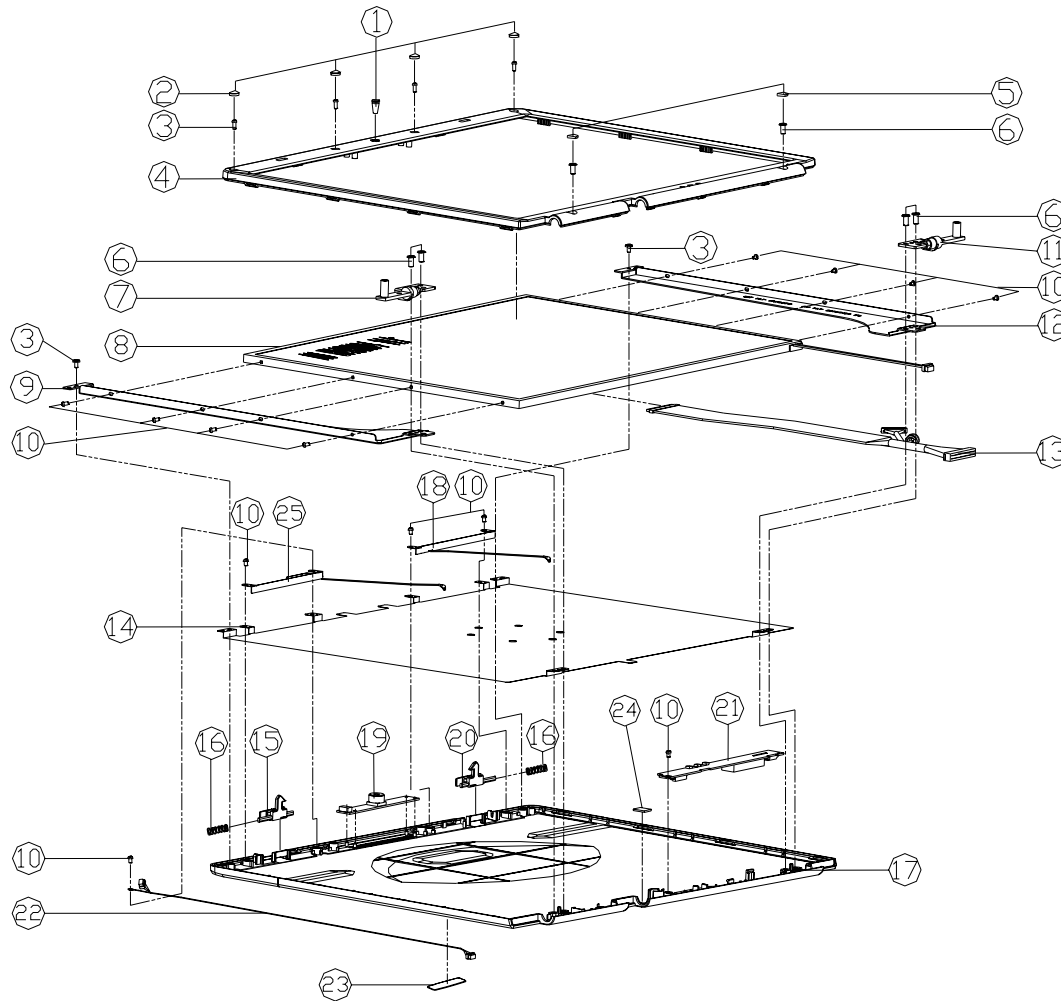

ITEM	PART NAME	PART NO	REMARK
1	RUBBER FOR VIDEO CAMERA	47-D400P-010	
2	RUBBER FOR LCD (TOP)	47-56P32-010	
3	SCREW M2*4L I BZ ICT	35-C6120-4R0	
4	DISPLAY FRONT PANEL 15" MODULE	39-D4001-111	
5	DISPLAY RUBBER PAD (DOWN)	47-D4001-020	
6	SCREW M3*6L K1 NI ICT NY	35-B1130-6RA	
7	HINGE (L)	33-D400Y-022	
8	LCD T AU B150XG01 V2 15" XGA 6.0mm	50-L2260-G00	
8	LCD T LG LP150X05-AE2 15" XGA 6.5mm	50-L2265-L03	
8	LCD T OPT CLAM50X08HS-GRAB0 15" XGA	50-L2260-C00	
8	LCD T SAMSUNG LTN15P3-L01 15" SXGA+	50-L5275-M06	
8	LCD T OPT CLAM50X08GLARE TYP0 15" XGA	50-L2260-C02	
8	LCD T LG LP150HS-C0MGLARE TYP0 15" XGA	50-L2265-L05	
9	LCD BRACKET (L) FOR AU 15.1" LCD	33-D4001-340	
10	SCREW M2*3L K1 NI ICT NY	35-B1120-3RB	
11	HINGE (R)	33-D400Y-012	
12	LCD BRACKET (R) FOR AU 15.1" LCD	33-D4001-330	
13	WIRE CABLE FOR 15" LCD SXGA+ AU	43-D4001-130	
13	WIRE CABLE FOR 15"LCD SXGA+ SAMSUNG	43-D4001-160	
14	ANTENNA BLUETOOTH PIFA 24G L=540mm	23-742R4-005-1	
15	LCD HOOD(KL)	42-D4001-022	
16	SPRING FOR HOOD(K*03.7*15*0.3d)	38-21P30-011	
17	DISPLAY BACK PANEL MIDDLE D410S	39-D4101-203	
18	WIRELESS ANTENNA PIFA 24G L=430mm D400S	23-742R4-004-1	
19	VIDEO CAMERA CM3130, 300K Pixels Resolu	88-D40C0-410	OPTION
20	LCD HOOD(KR)	42-D4001-012	
21	INVERTER BOARD	77-4200R-D02-1	
22	WIRE CABLE MAIN BD TO CCD MODULE	43-D4000-060	OPTION
23	NAME PLATE "NOTEBOOK"	45-42001-010	



# CD-ROM Drive (410P)

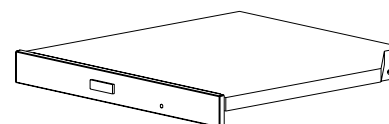
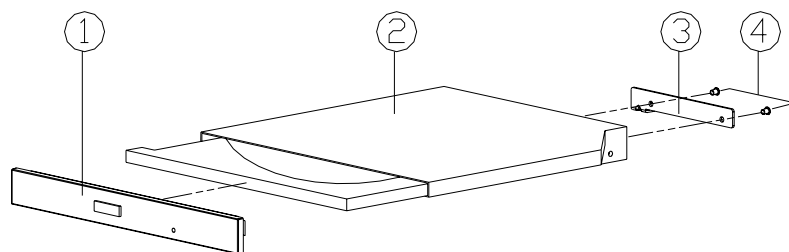




Figure 15  
CD-ROM Drive  
(410P)

ITEM	PART NAME	PART NO	REMARK
1	OSI CD-ROM BEZEL MODULE D410S	42-D410Z-101	
1	TEAC CD-ROM BEZEL MODULE D410S	42-D410Z-301	
2	CD-ROM 5 1/4" 24X CAB SLIM OSIS(SCR-242)	85-607DX-C00	
2	CD-ROM 5 1/4" 24X CD-224E-C20 12.7mm TEAC	85-607DX-709	
3	CDROM LOCK BRACKET	33-D400Z-010	
4	SCREW M2*3L KI NI ICT NY	35-B1120-3RB	

A.Part Lists

# CD-RW Drive (410P)

Figure 16  
CD-RW Drive  
(410P)

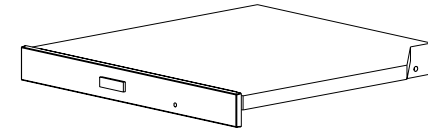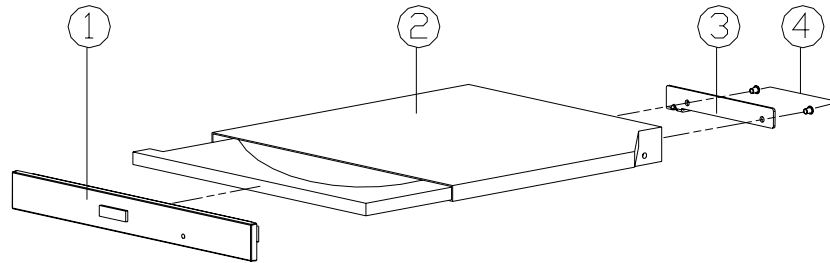

ITEM	PART NAME	PART NO	REMARK
1	TEAC CD-RW BEZEL MODULE D410S	42-D410W-101	
1	TOSHIBA CD-RW BEZEL MODULE D410S	42-D410W-201	
2	CD-R/W 5 1/4" 24X CD-W224E-A82 12.7mm TEAC	85-807DX-700	
2	CD-R/W 5 1/4" 16X SR-C8102 12.7mm TOSHIBA	85-807GX-T00	
3	CDROM LOCK BRACKET	33-D400Z-010	
4	SCREW M2*3L KI NI ICT NY	35-B1120-3RB	

# Combo Drive (410P)

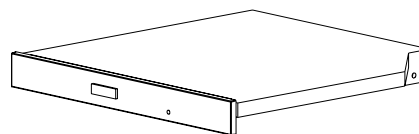
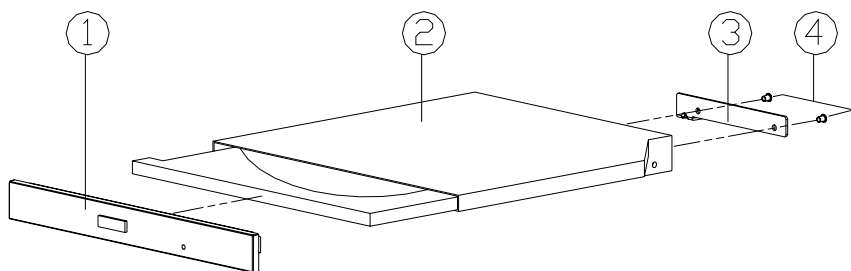




Figure 17  
Combo Drive  
(410P)

ITEM	PART NAME	PART NO	REMARK
1	OSI COMBO BEZEL MODULE D410S	42-D410X-101	
1	SAMSUNG COMBO BEZEL MODULE D410S	42-D410X-201	
1	TEAC COMBO BEZEL MODULE D410S	42-D410X-300	
2	CD-RW/DVD 5 1/4" 24X 12.7mm SBW-241 OSI	85-907□X-C00	
2	CD-RW/DVD 5 1/4" 24X 12.7mm SN-324 SAMSUNG	85-907□X-S00	
2	CD-RW/DVD 5 1/4" 24X 12.7mm DW-224E TEAC	85-907□X-700	
3	CDROM LOCK BRACKET	33-D400Z-010	
4	SCREW M2*3L KI NI ICT NY	35-B1120-3RB	

A.Part Lists

## DVD-ROM Drive (410P)

Figure 18  
DVD-ROM Drive  
(410P)

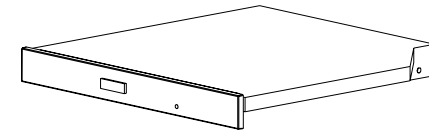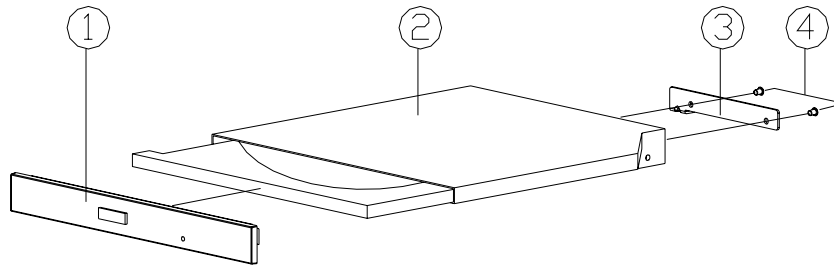

ITEM	PART NAME	PART NO	REMARK
1	OSI DVD-ROM BEZEL MODULE D410S	42-D410V-101	
1	TEAC DVD-ROM BEZEL MODULE D410S	42-D410V-201	
2	DVD 5 1/4" 8X 12.7mm SDR-083 OSI	85-7078X-C02	
2	DVD 5 1/4" 8X 12.7mm DV-28E-BB2 TEAC	85-7078X-700	
3	CDROM LOCK BRACKET	33-D400Z-010	
4	SCREW M2*3L KI NI ICT NY	35-B1120-3RB	

# Floppy Disk Drive (410P)


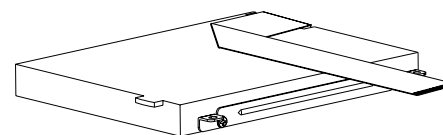




Figure 19  
Floppy Disk Drive  
(410P)

ITEM	PART NAME	PART NO	REMARK
1	SCREW M2.5*3L KI BK/D.NY	35-B4125-3RA	
2	FDD BRACKET	33-D400J-010	
3	FDD 3.5" 1.44MB 12.7mm (YD-702J-6637J)	85-11700-Y01-01	
4	FFC CABLE FOR MAIN BD TO FDD 180MM	43-D4000-050	

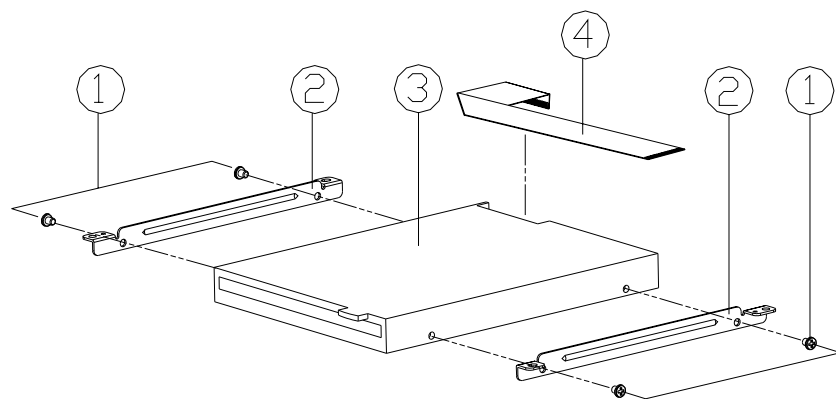

## Hard Disk Drive (410P)

Figure 20  
HDD Drive (410P)

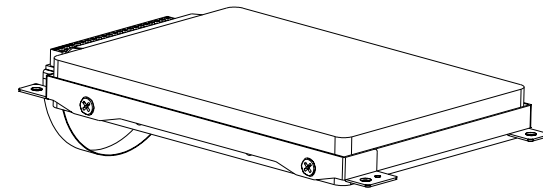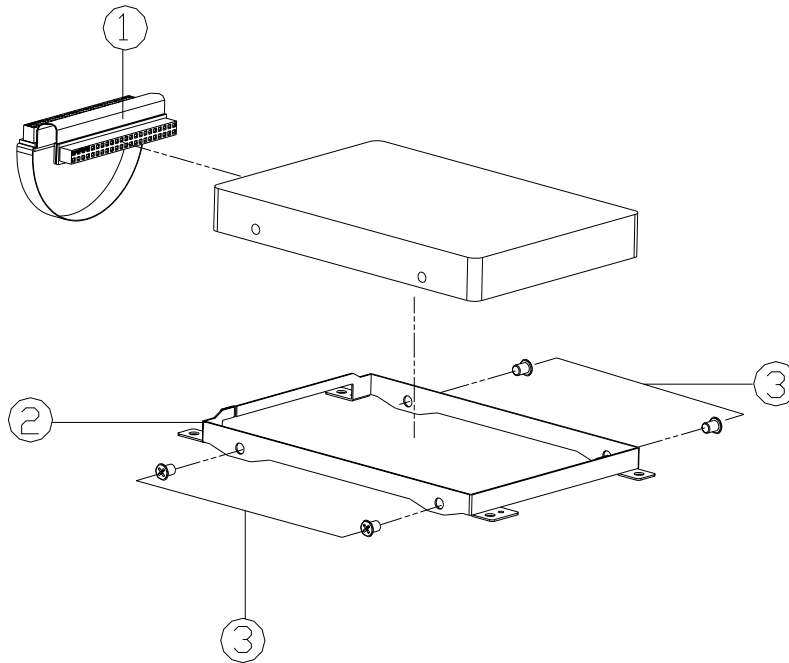

ITEM	PART NAME	PART NO	REMARK
1	FPC CABLE FOR HD TO MAIN BD, 30MM,8880	43-88800-010	
2	HDD BRACKET	77-22004-D03A	
3	SCREW M3*4L KI BZ ICT NY	35-B6130-4RB	

# Appendix B:Schematic Diagrams


This appendix has circuit diagrams of the *D400P/D410P* notebook's PCB's. The following table indicates where to find the appropriate schematic diagram.

Diagram - Page	Diagram - Page	Diagram - Page
<i>System Block Diagram - Page B - 2</i>	<i>962 (PCI/IDE/HyperZip) 1 of 4 - Page B - 14</i>	<i>LAN RTL8100BL - Page B - 26</i>
<i>Socket 478 1 of 2 - Page B - 3</i>	<i>962 (Misc Signals) 2 of 4 - Page B - 15</i>	<i>Audio Codec ALC201A - Page B - 27</i>
<i>Socket 478 &amp; ITP 2 of 2 - Page B - 4</i>	<i>962 (USB I/F) 3 of 4 - Page B - 16</i>	<i>Audio Out &amp; Off Board Connectors - Page B - 28</i>
<i>Clock Generator - Page B - 5</i>	<i>962 (Power &amp; RTC) 4 of 4 - Page B - 17</i>	<i>System Power Control - Page B - 29</i>
<i>M650 (Host/AGP) 1 of 4 - Page B - 6</i>	<i>HDD/Combo Connector - Page B - 18</i>	<i>Fan Control and SpeedStep - Page B - 30</i>
<i>M650 (Memory for DDR) 2 of 4 - Page B - 7</i>	<i>USB Port - Page B - 19</i>	<i>VCORE - Page B - 31</i>
<i>M650 (&amp; CRT Out) 3 of 4 - Page B - 8</i>	<i>PCMCIA ENE1410 - Page B - 20</i>	<i>DDR Power - Page B - 32</i>
<i>M650 (Power) 4 of 4 - Page B - 9</i>	<i>PCMCIA Power - Page B - 21</i>	<i>System - Page B - 33</i>
<i>DDR Memory DIMM - Page B - 10</i>	<i>1394 PHY TSB41LV01 - Page B - 22</i>	<i>Charger - Page B - 34</i>
<i>DDR SSTL-2 Termination - Page B - 11</i>	<i>LPC Super I/O - Page B - 23</i>	<i>SW Board and HotKey - Page B - 35</i>
<i>LVDS Interface (SiS302LV) - Page B - 12</i>	<i>LPT/COM Port - Page B - 24</i>	<i>TouchPad and Switch Board - Page B - 36</i>
<i>Panel Con &amp; LED Indicator - Page B - 13</i>	<i>LPC H8 - Page B - 25</i>	

*Table 1*  
Schematic  
Diagrams


## System Block Diagram

# D400 System Block Diagram

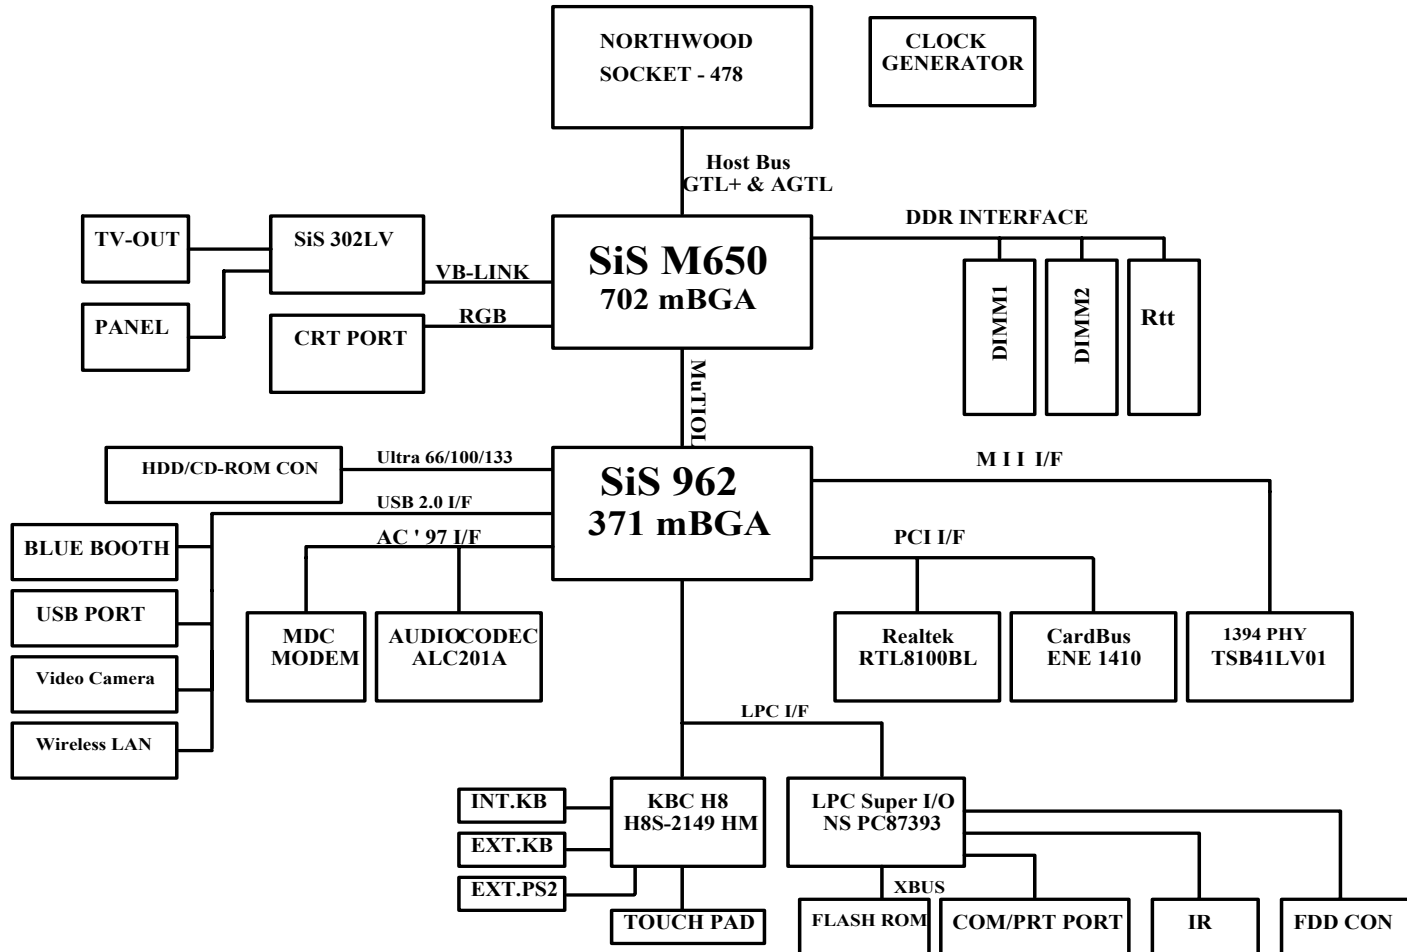

Sheet 1 of 41  
System Block  
Diagram

# Socket 478 1 of 2

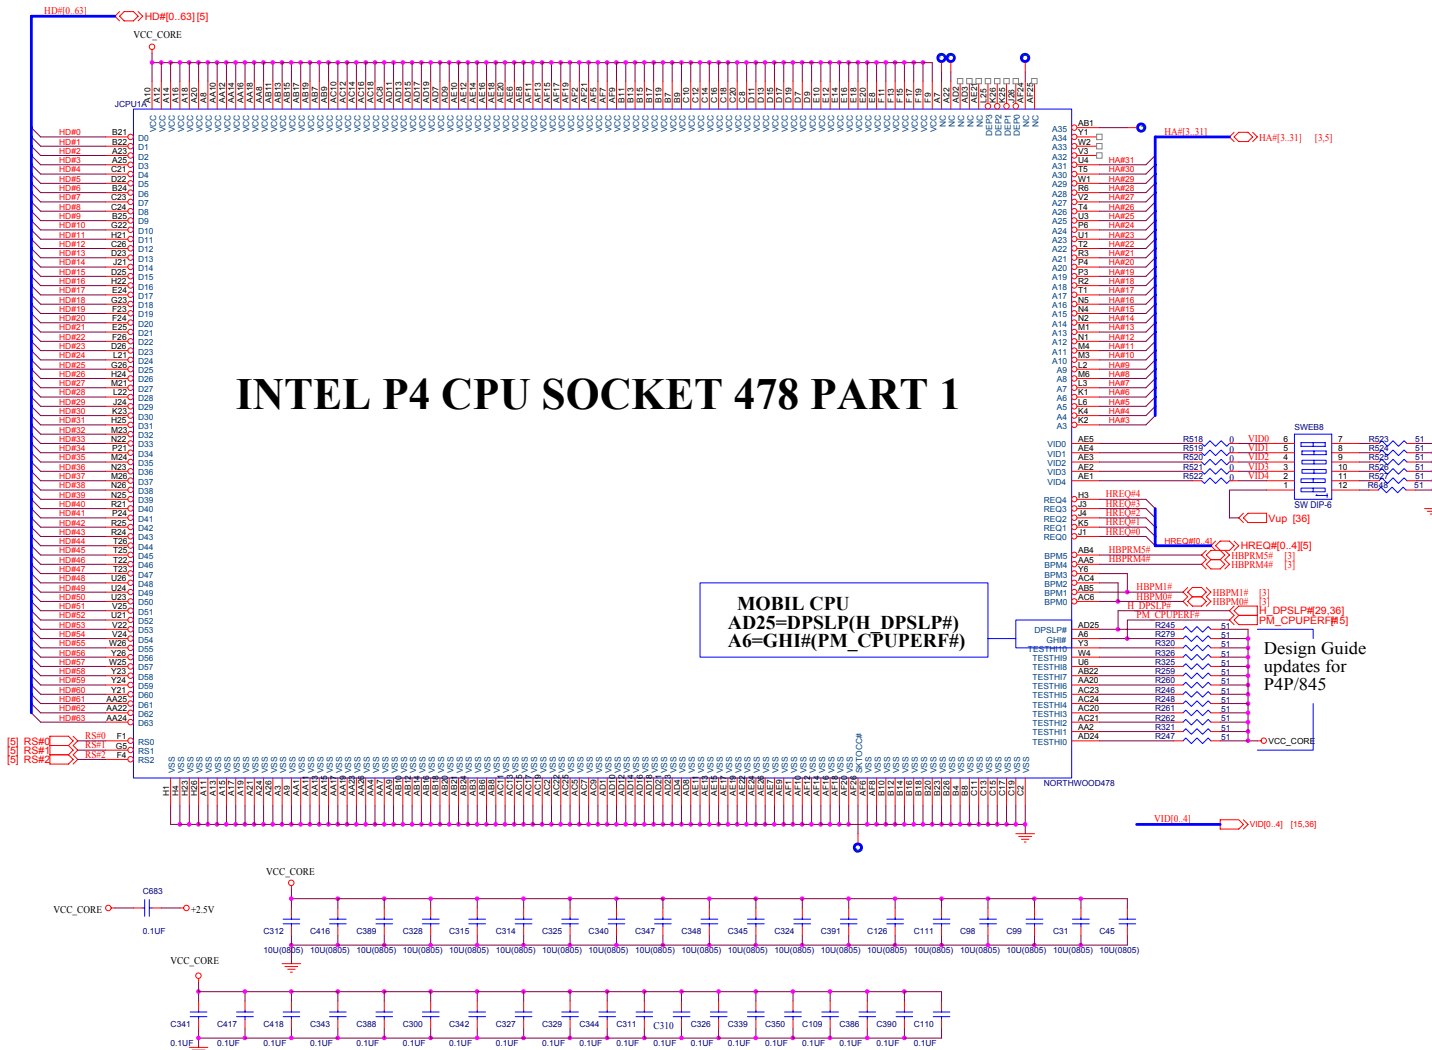

Sheet 2 of 41  
 Socket 478 1 of 2



B. Schematic Diagrams







# Clock Generator

B. Schematic Diagrams

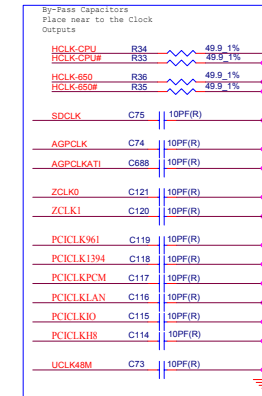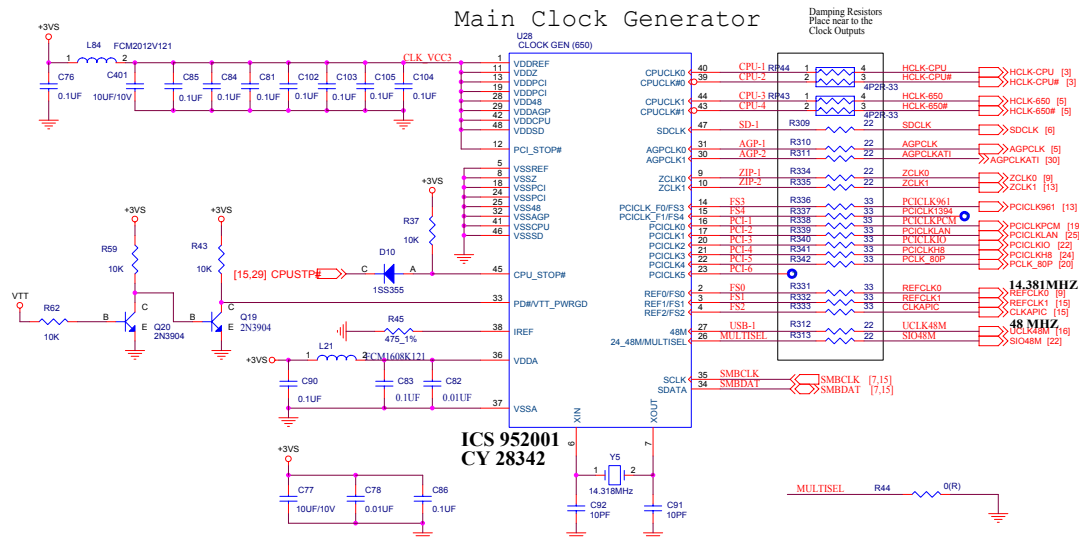



Sheet 4 of 41  
Clock Generator

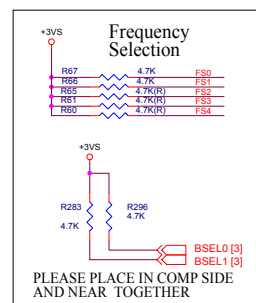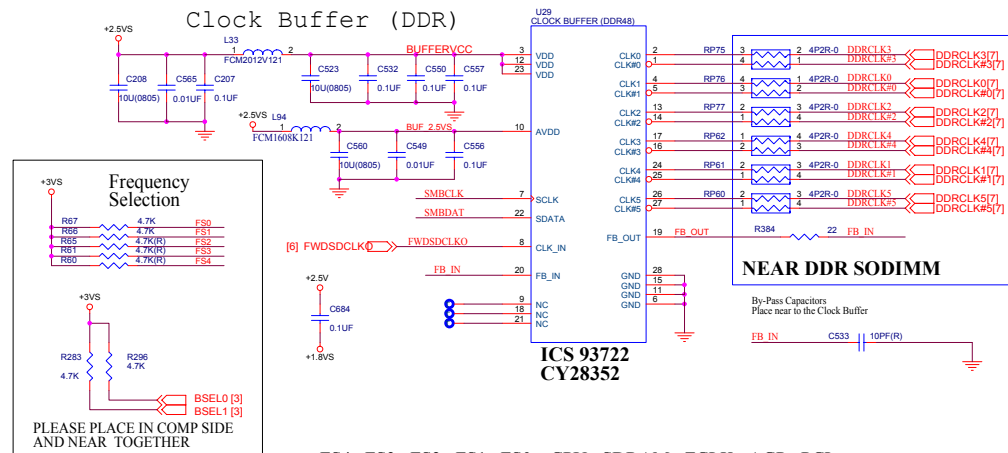

FS4	FS3	FS2	FS1	FS0	CPU	SDRAM	ZCLK	AGP	PCI
0	0	0	1	1	100M	133M	66M	66M	33M
0	0	0	0	1	100M	100M	66M	66M	33M




# M650 (Memory for DDR) 2 of 4

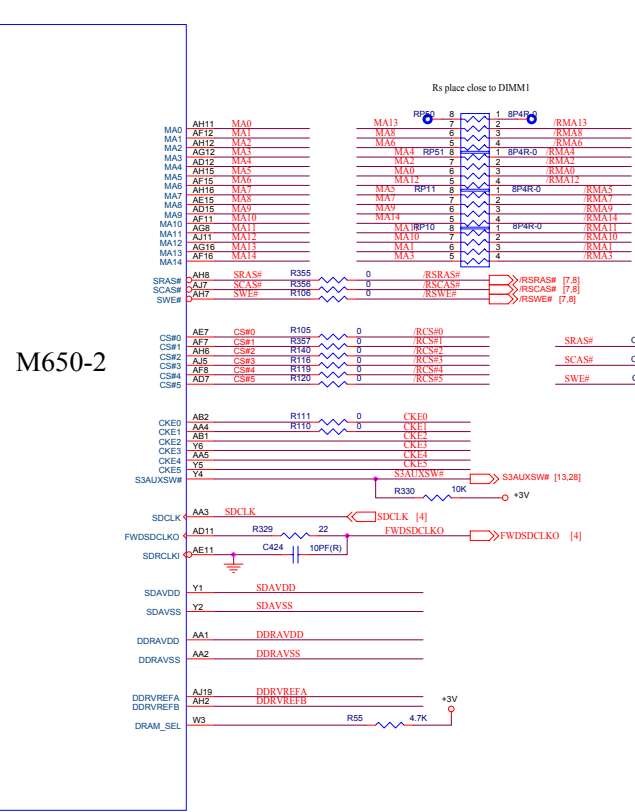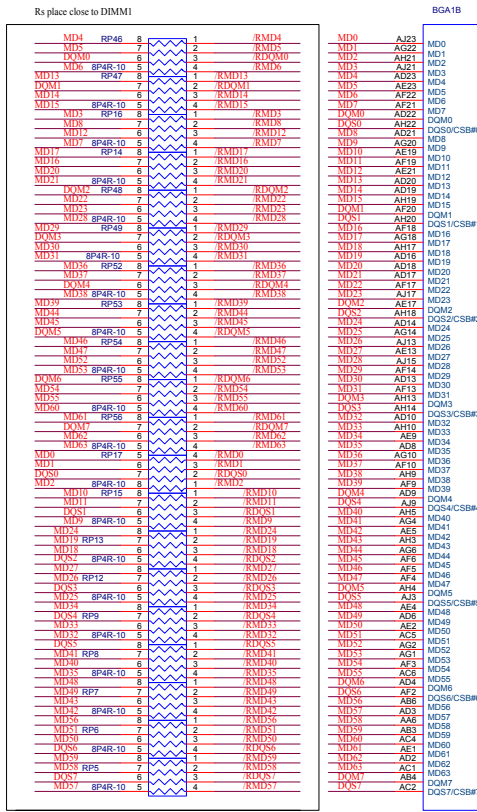


# M650 (& CRT Out) 3 of 4

Sheet 7 of 41  
M650 & CRT Out  
3 of 4


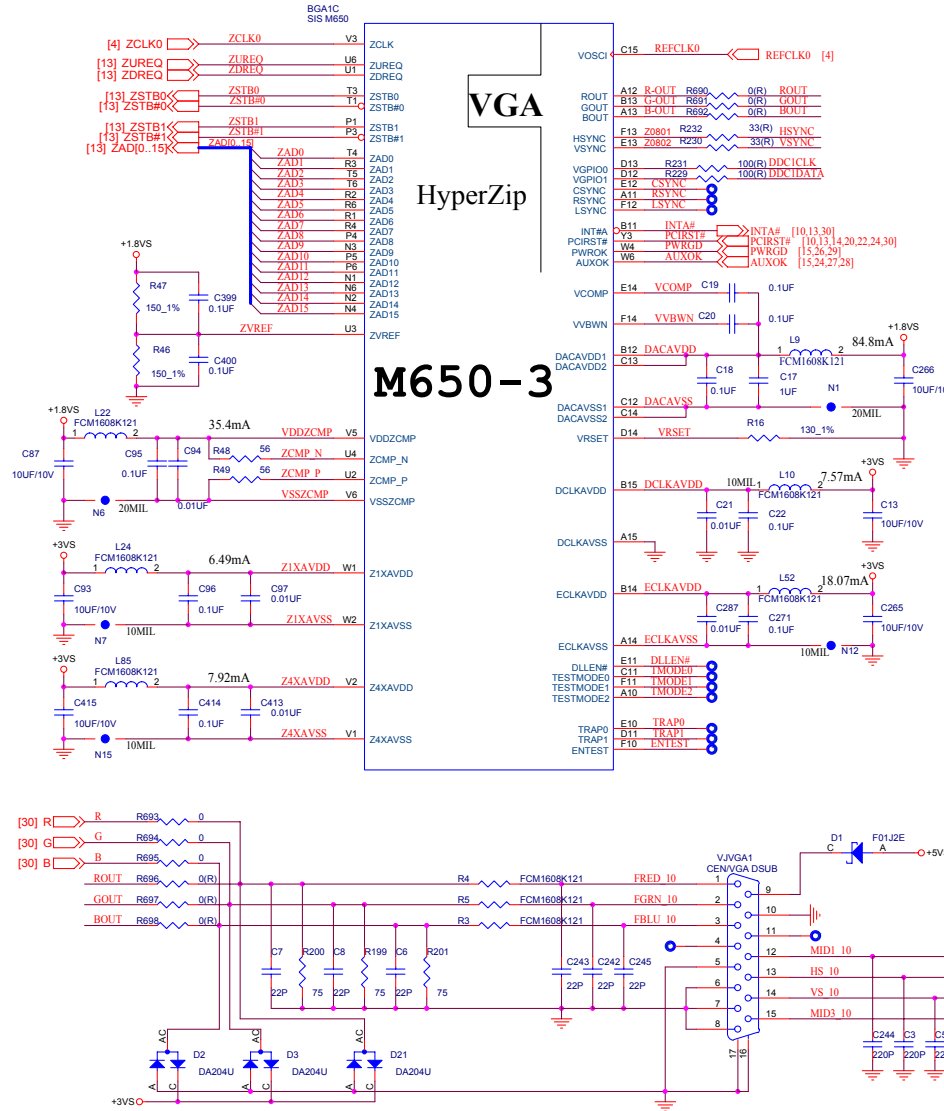


NOTE: This page is for universal PCB design (suitable for both 645 or 650)

NB Hardware Trap Table			
	0	1	Default
DI_LEN#	enable PL1	disable PL1	0
DRAM_SEL	SDR	DDR	1(DDR)
TRAP0	normal	NB.debug.mode	0
TRAP1	TV selection, NTSC/PAL(0/1)		0
CSYNC	enable VB		0
RSYNC	enable VGA interface		1
LSYNC	enable panel link		0

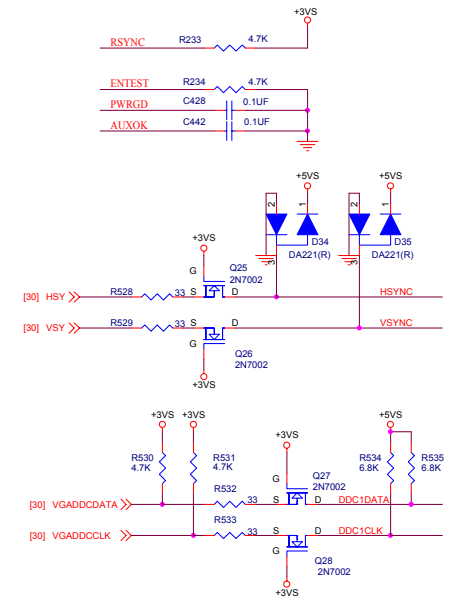

# M650 (Power) 4 of 4

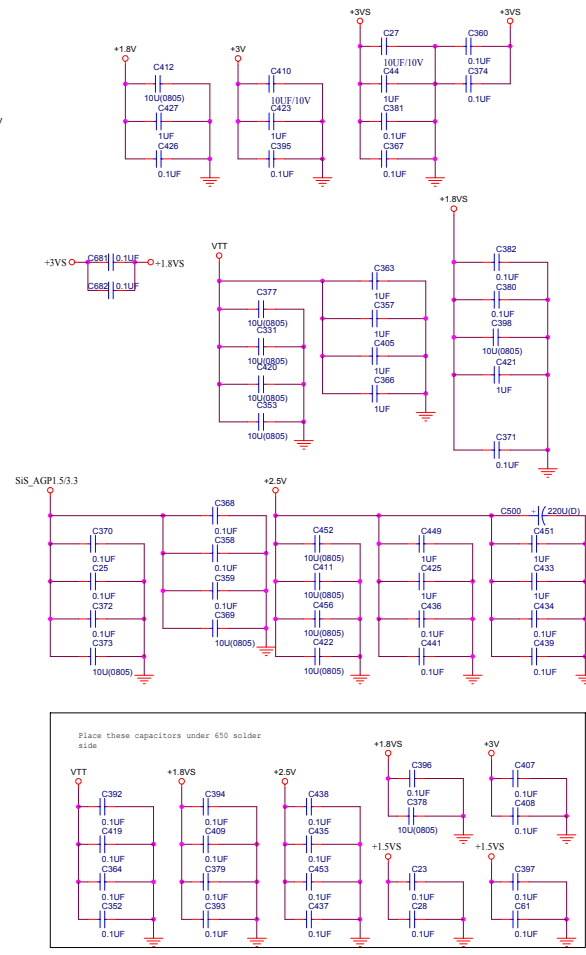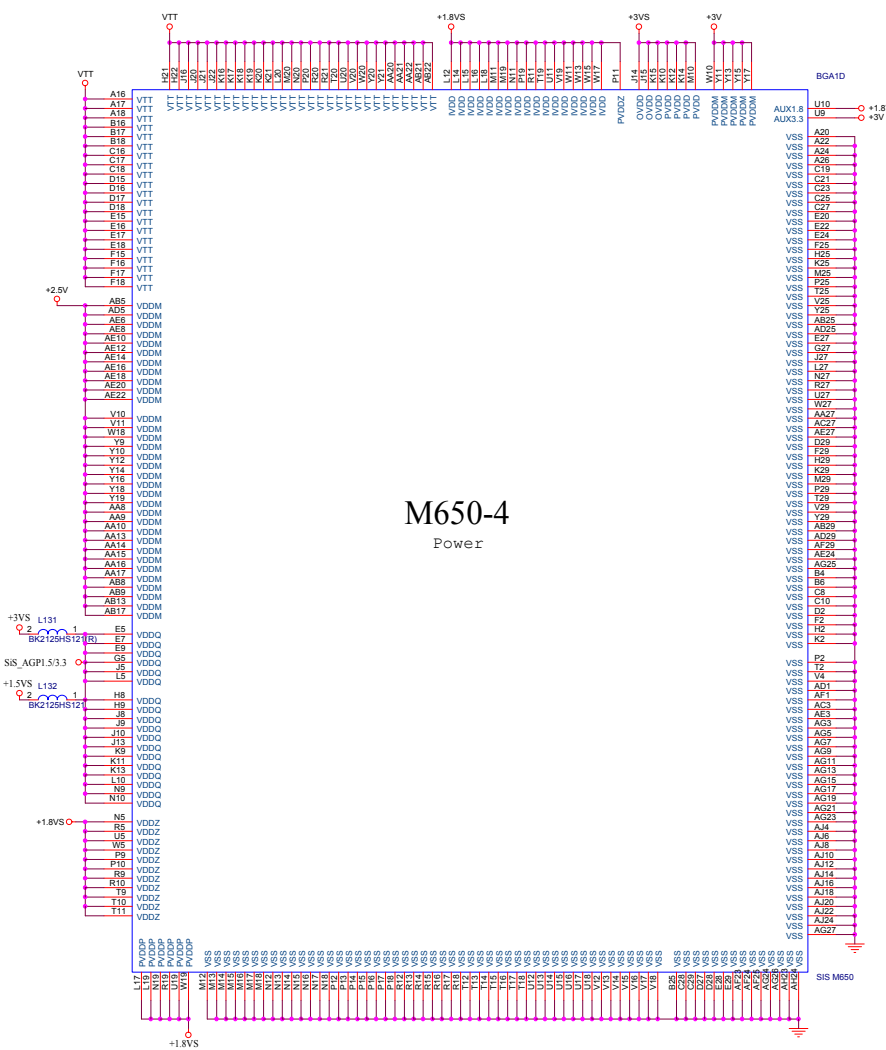

Sheet 8 of 41  
M650 (Power)  
4 of 4


B. Schematic Diagrams

# Schematic Diagrams

## DDR Memory DIMM

B.Schematic Diagrams

Sheet 9 of 41  
DDR Memory DIMM

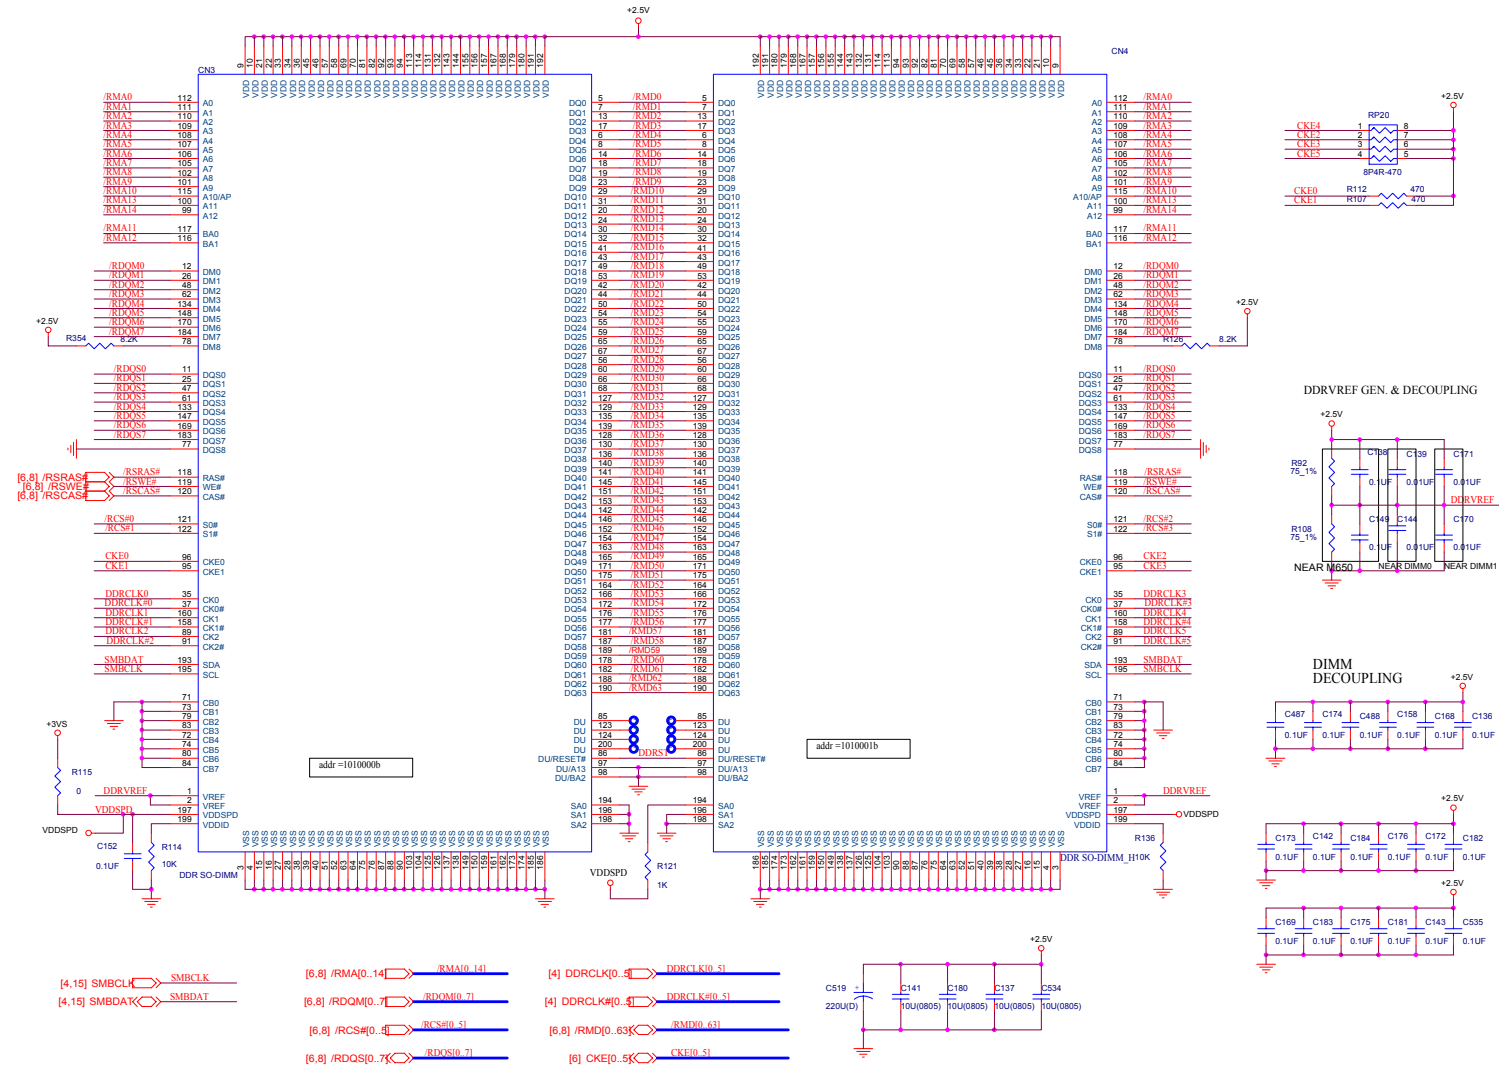



B - 10 DDR Memory DIMM (71-M4000-D03)



# DDR SSTL-2 Termination

SSTL-2 Termination Resistors




	DDR	Rs	Rtt							
MD/DQM/(DQS)	SSTL-2	10	33							
MA/Control	SSTL-2	0	CS	SSTL-2	0	47	CKE	OD 2.5V		
CS	SSTL-2	0	47							
CKE	OD 2.5V									

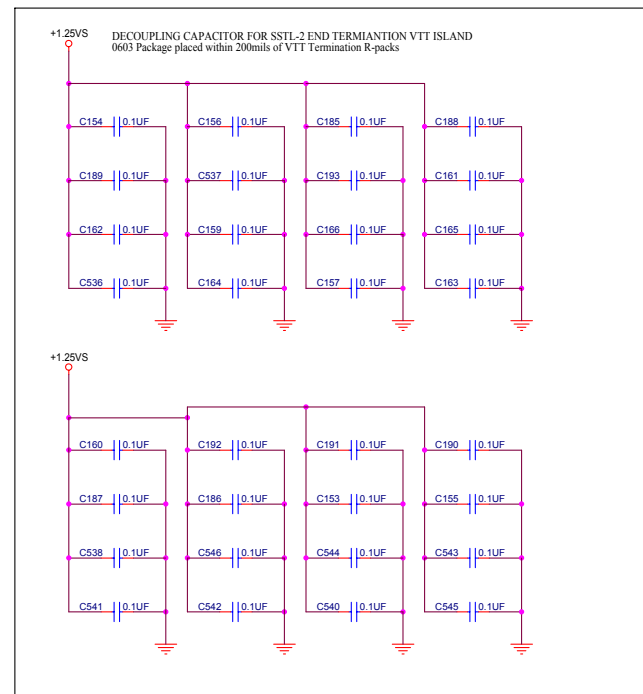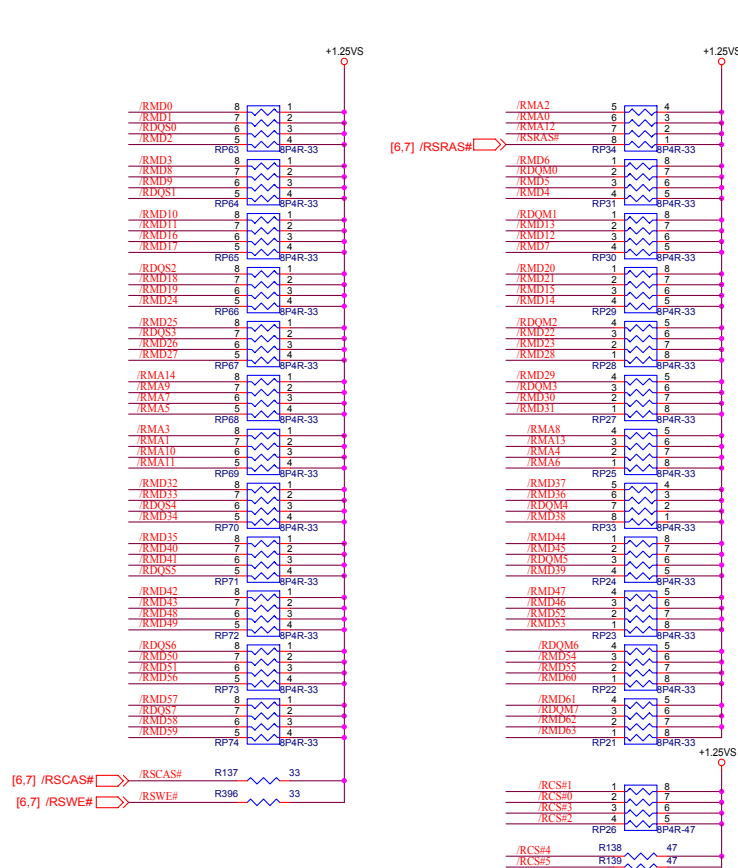

Sheet 10 of 41  
DDR SSTL-2  
Termination



# Panel Con & LED Indicator



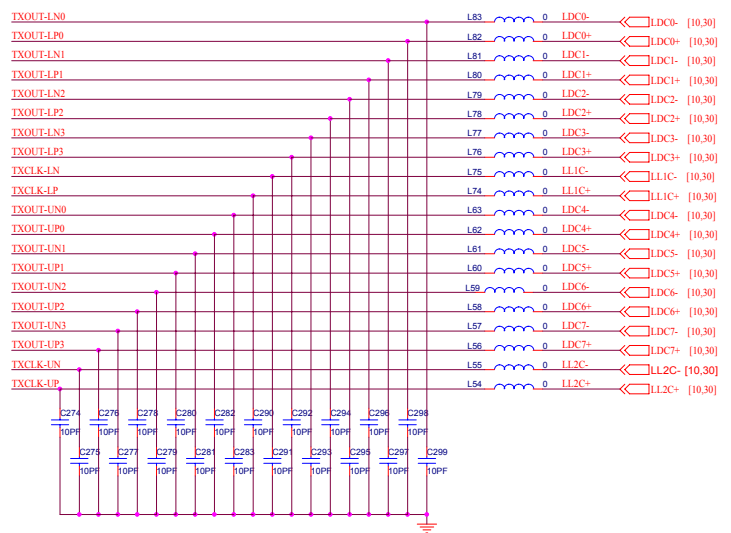
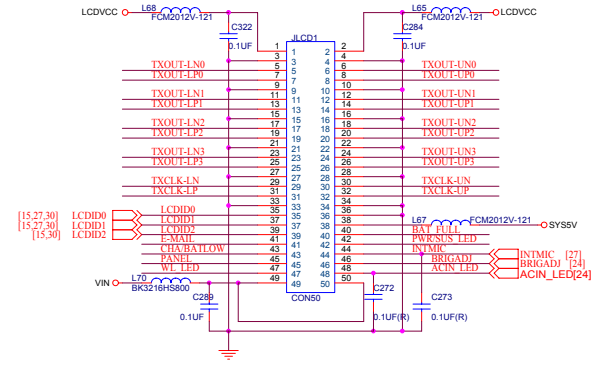
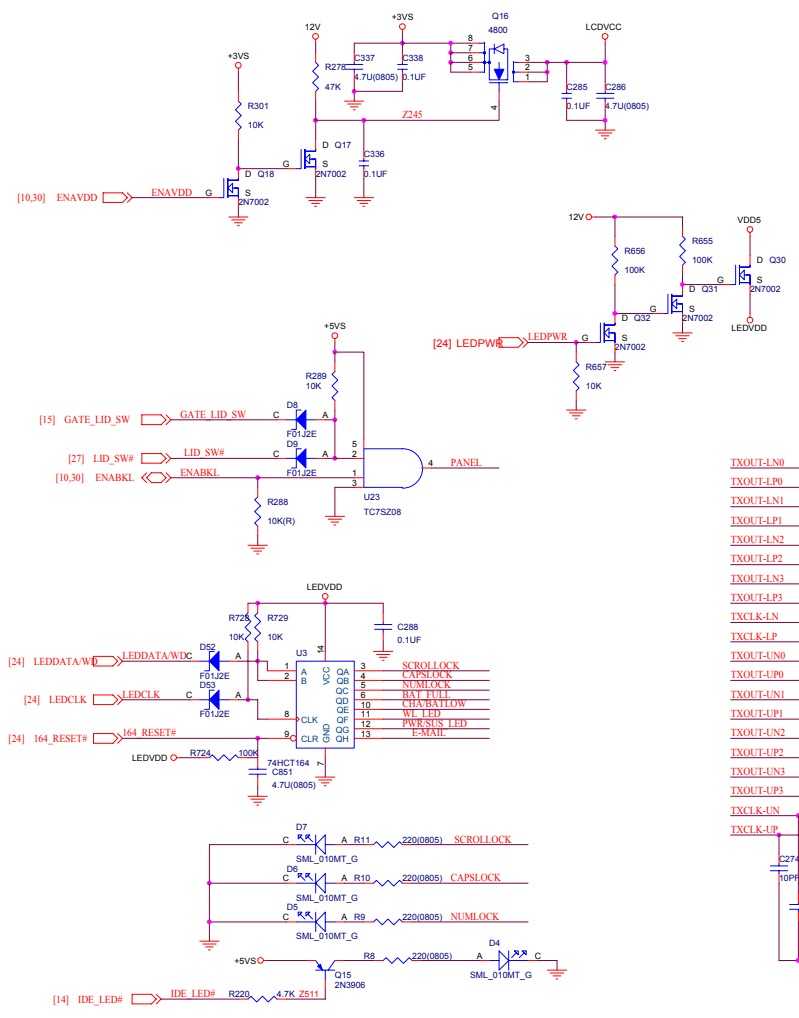


Sheet 12 of 41  
Panel Con & LED  
Indicator

B.Schematic Diagrams



# 962 (Misc Signals) 2 of 4

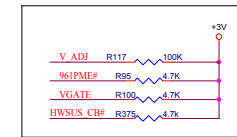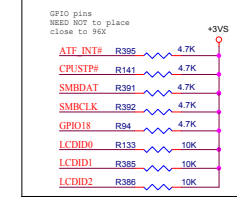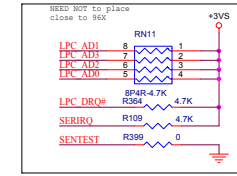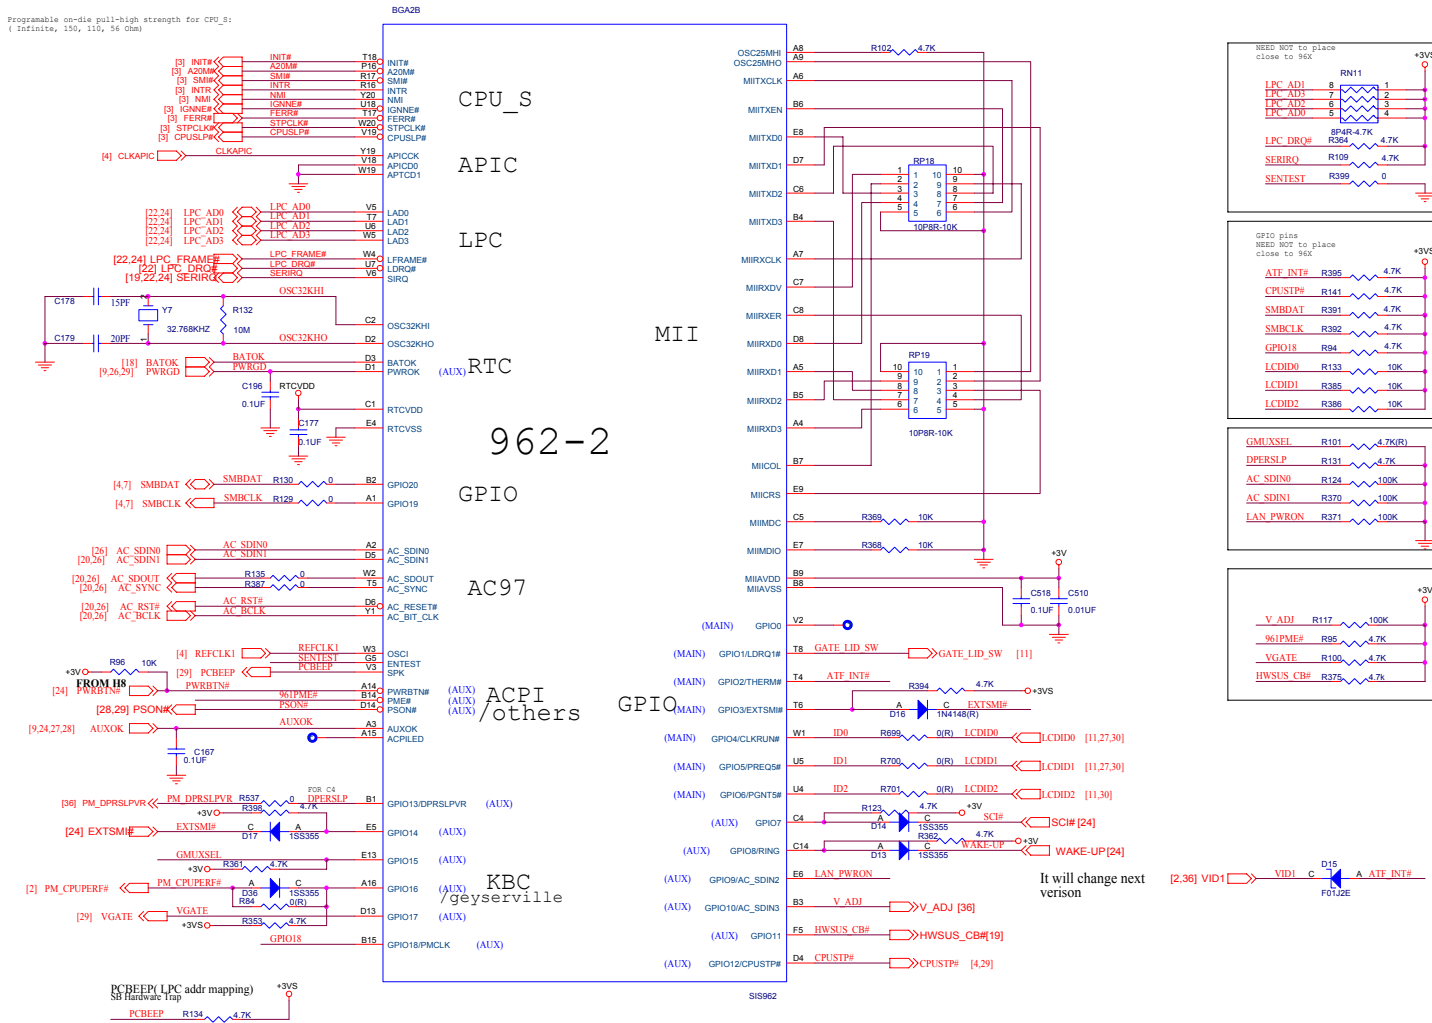


Sheet 14 of 41  
962 (Misc Signals)  
2 of 4

B.Schematic Diagrams






# 962 (USB I/F) 3 of 4

Sheet 15 of 41  
962 (USB I/F)  
3 of 4

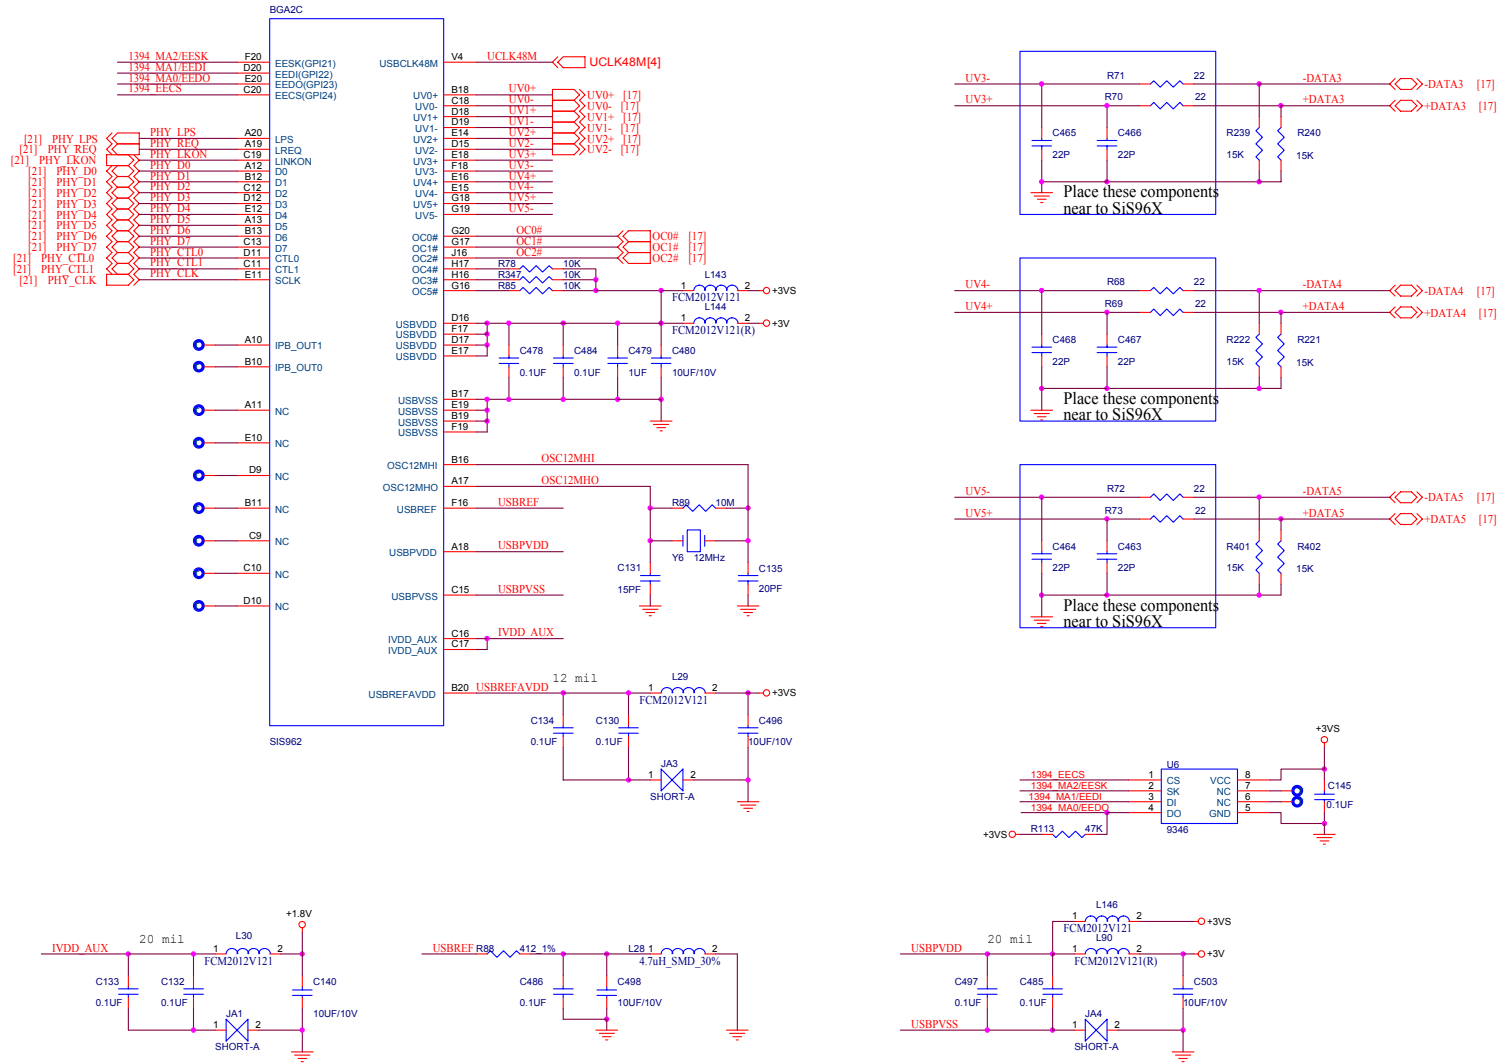




# 962 (Power & RTC) 4 of 4

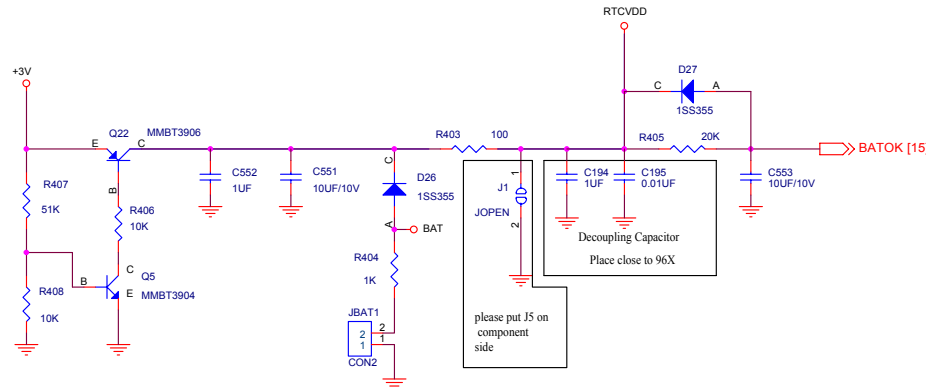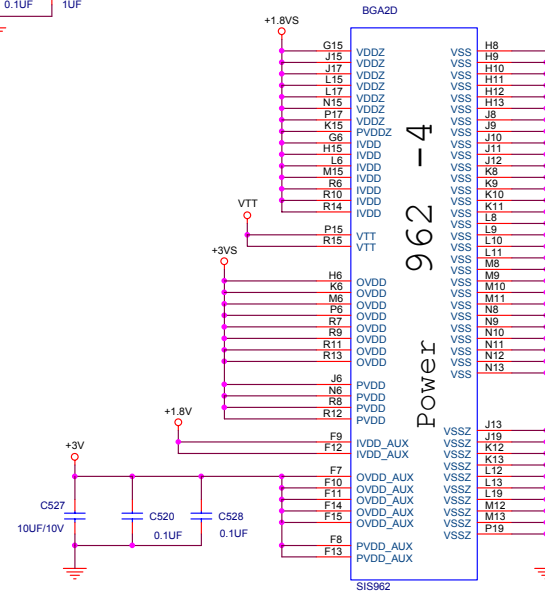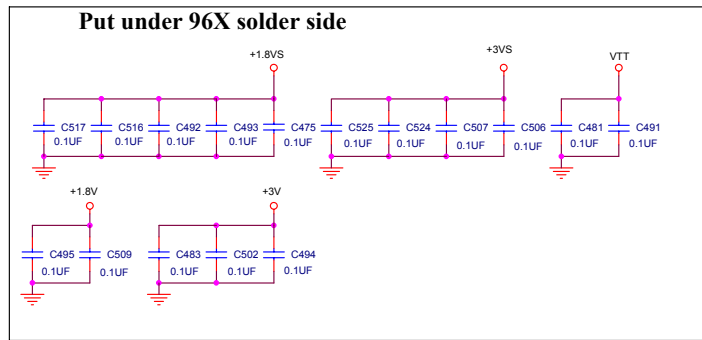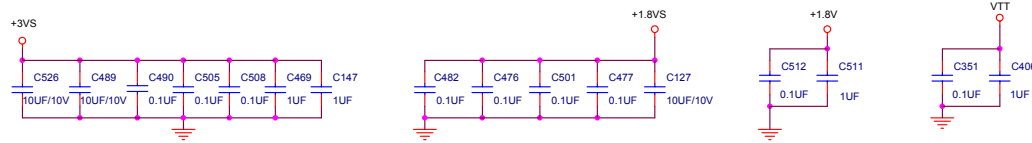

Sheet 16 of 41  
962 (Power & RTC)  
4 of 4



# USB Port

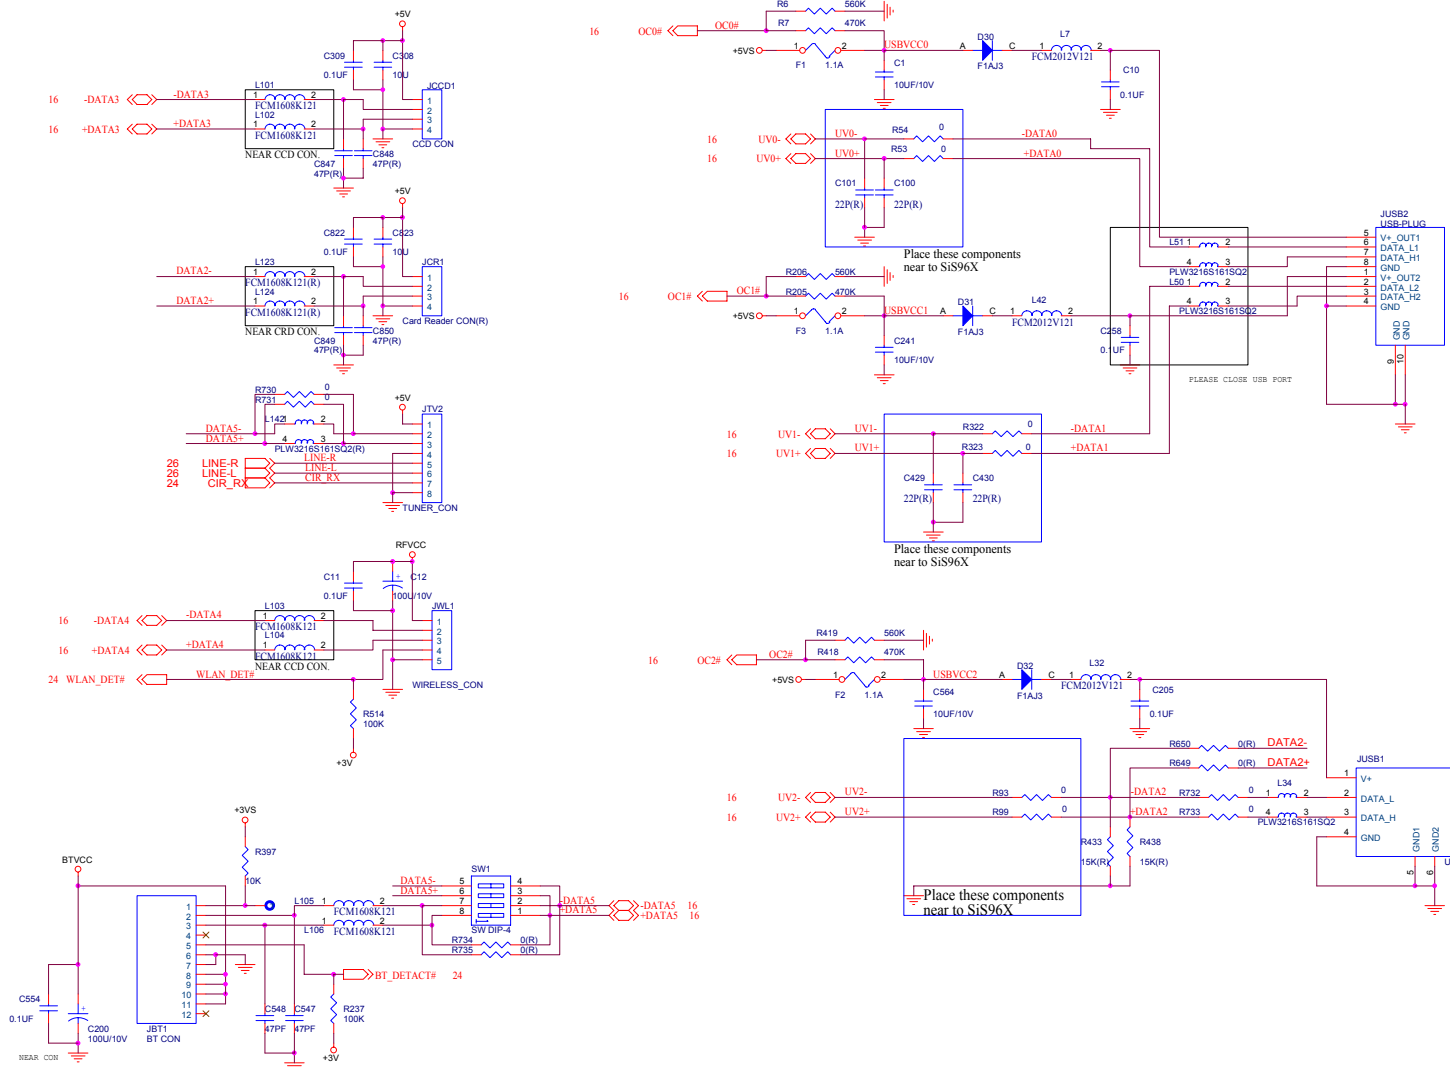


Sheet 18 of 41  
USB Port

B. Schematic Diagrams



# PCMCIA Power

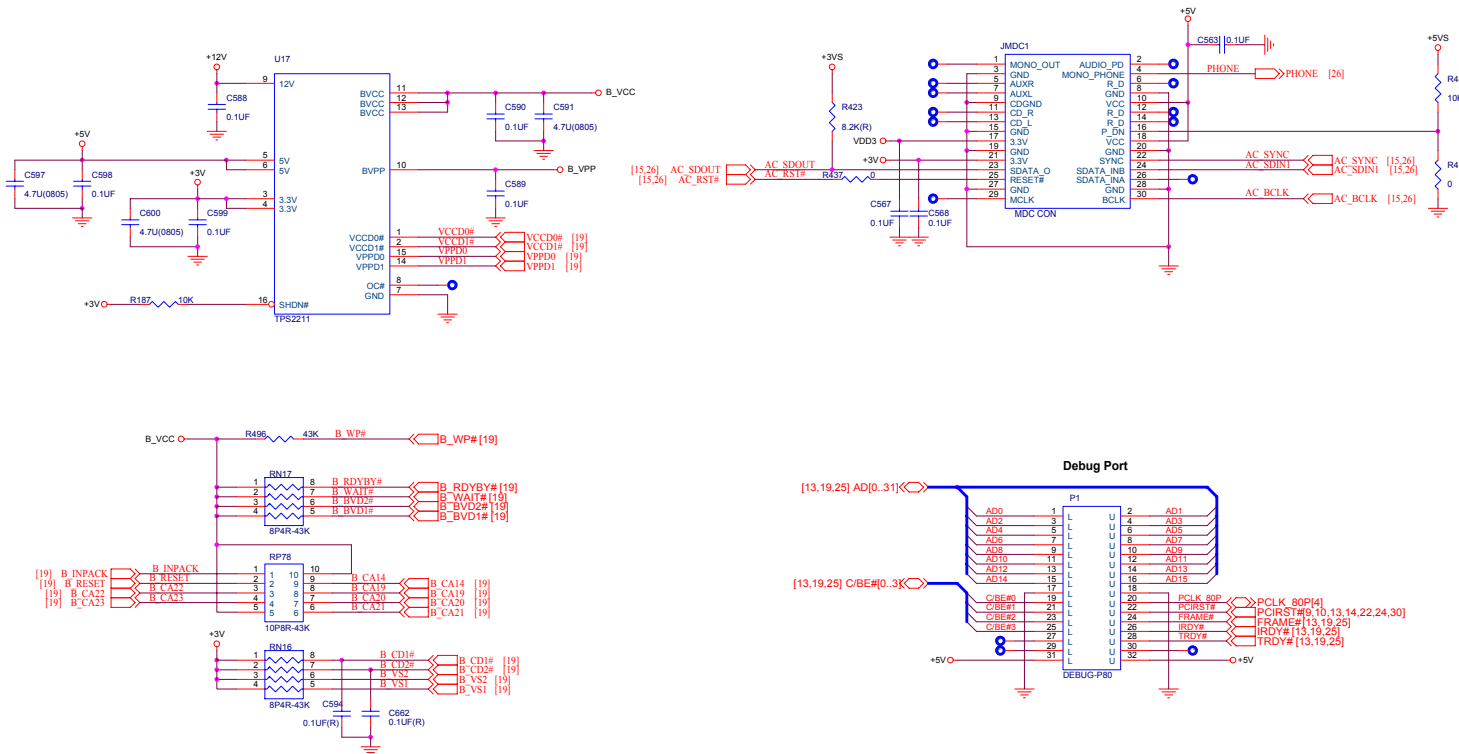


Sheet 20 of 41  
PCMCIA Power

B. Schematic Diagrams


# 1394 PHY TSB41LV01

Sheet 21 of 41  
1394 PHY  
TSB41LV01

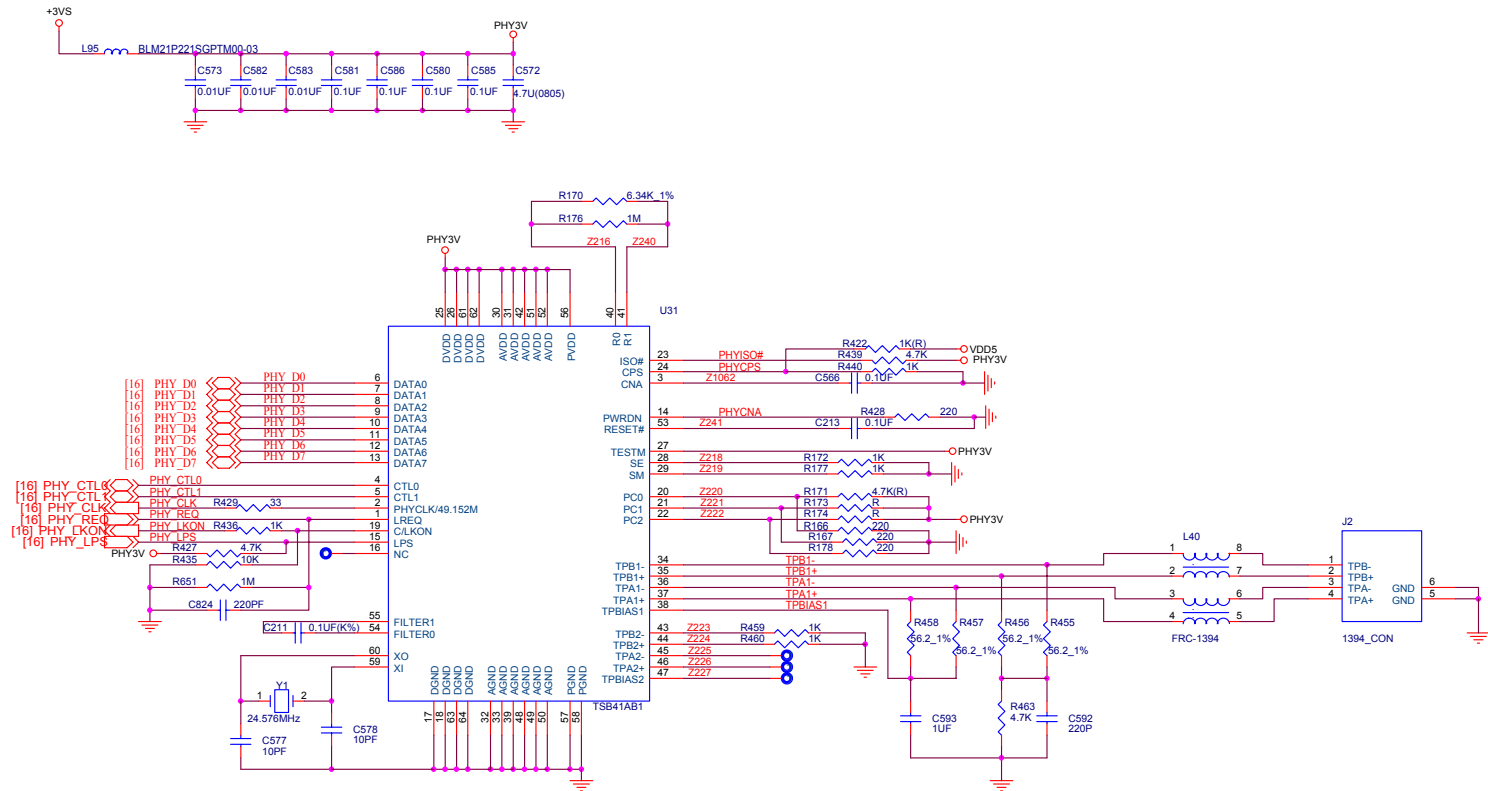



# LPC Super I/O

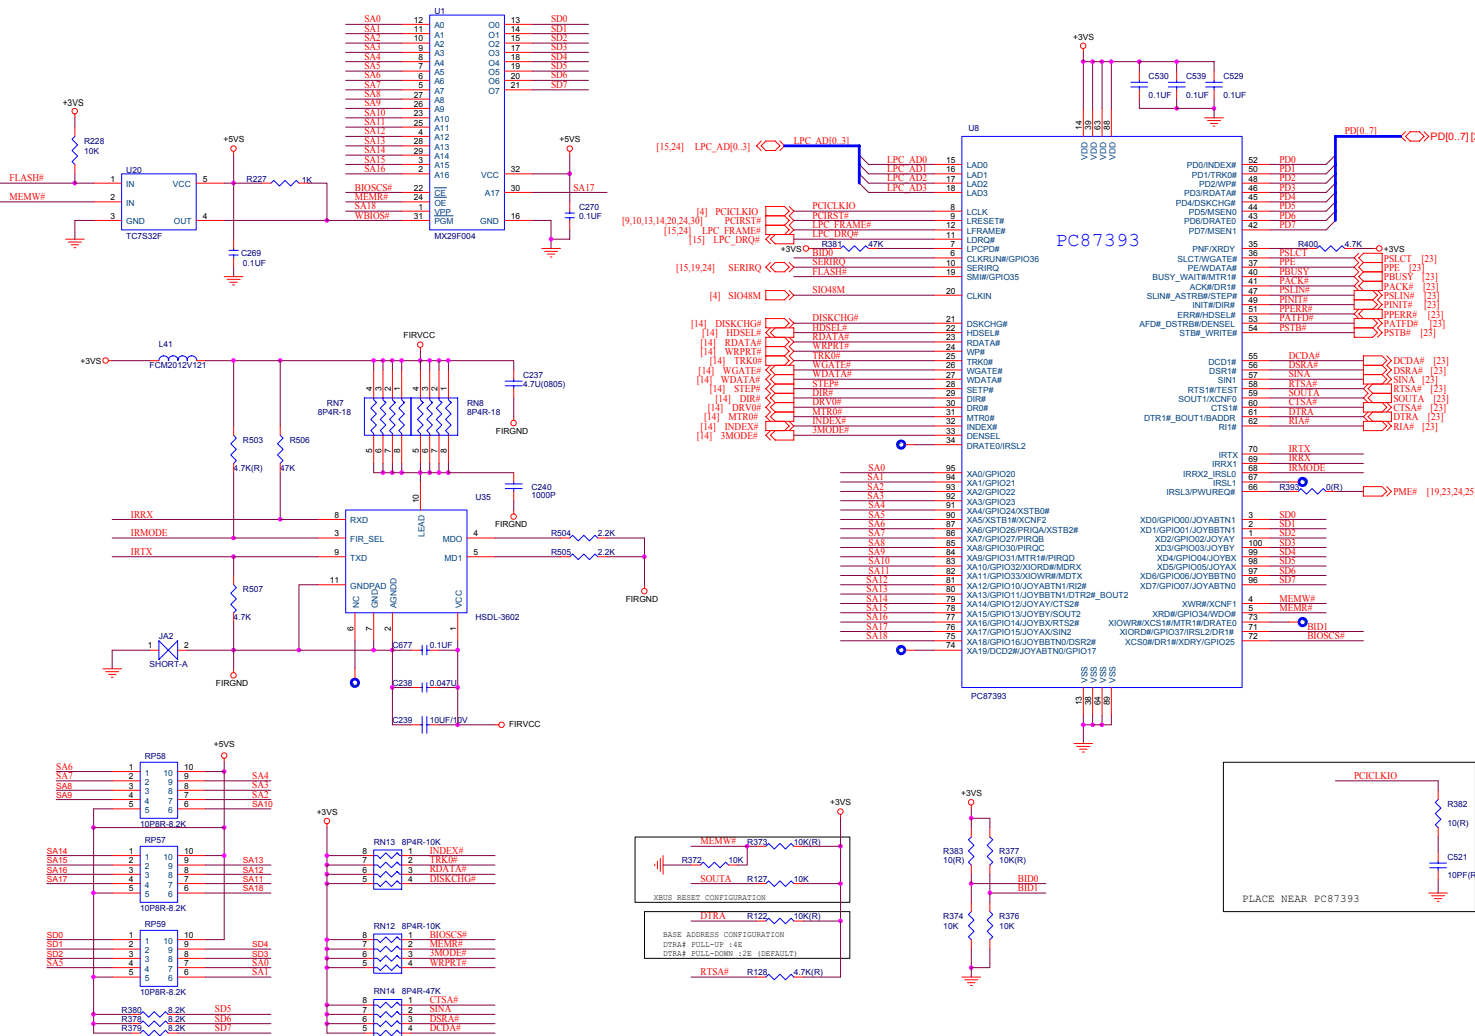


# Schematic Diagrams


## LPT/COM Port

B.Schematic Diagrams

Sheet 23 of 41  
LPT/COM Port

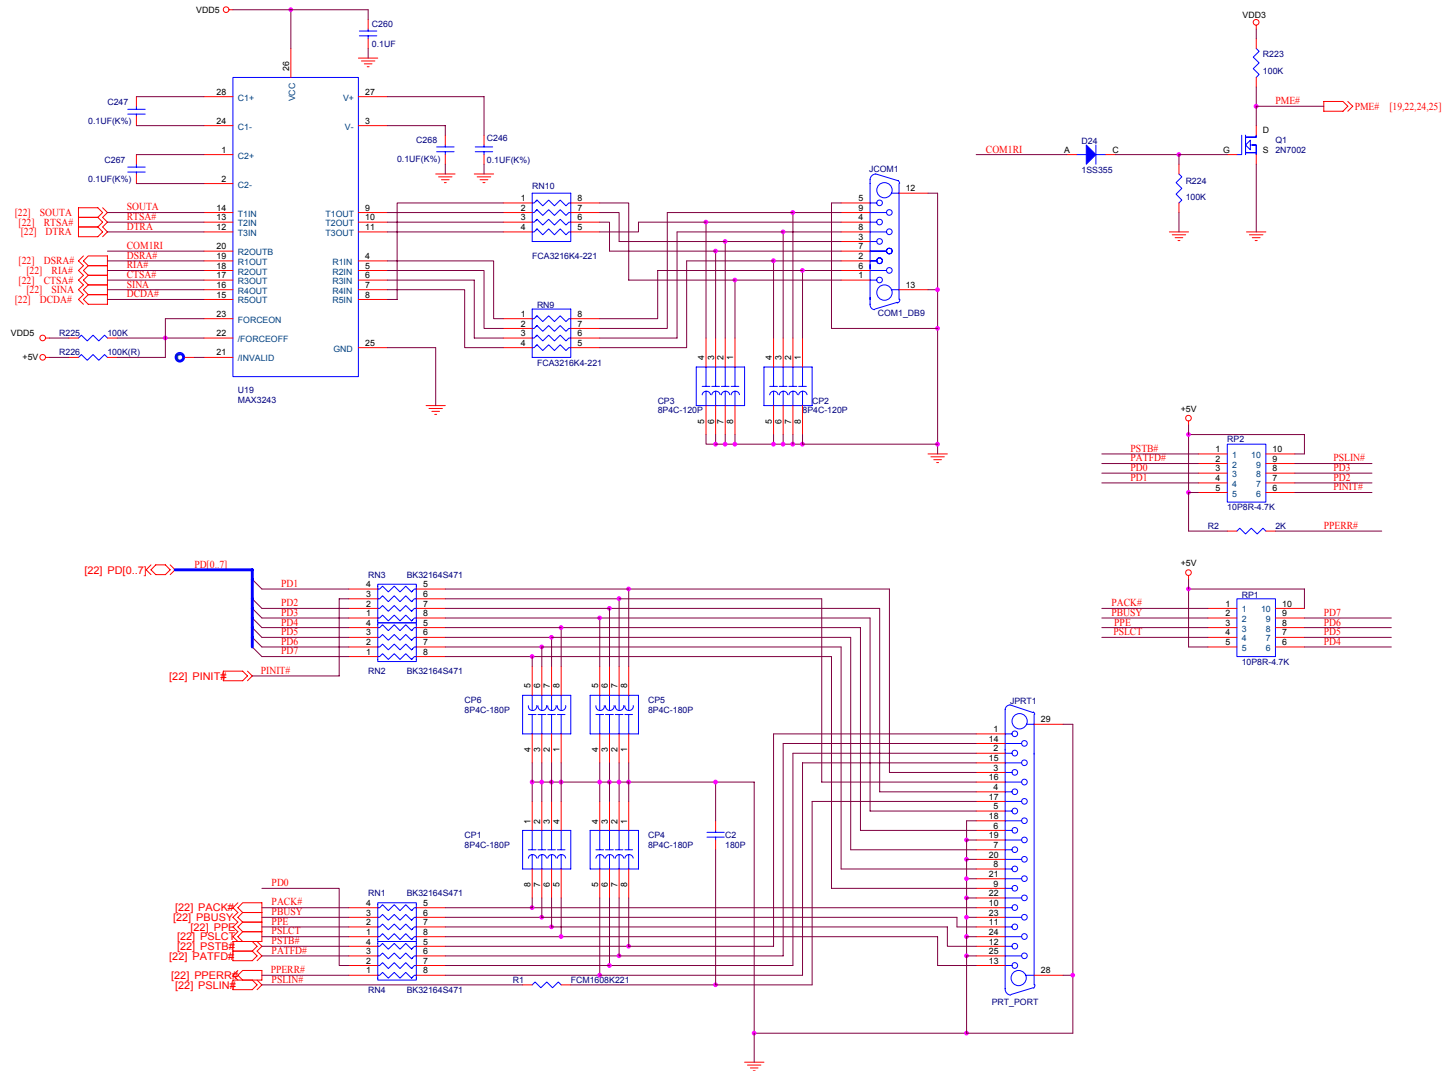


# LPC H8

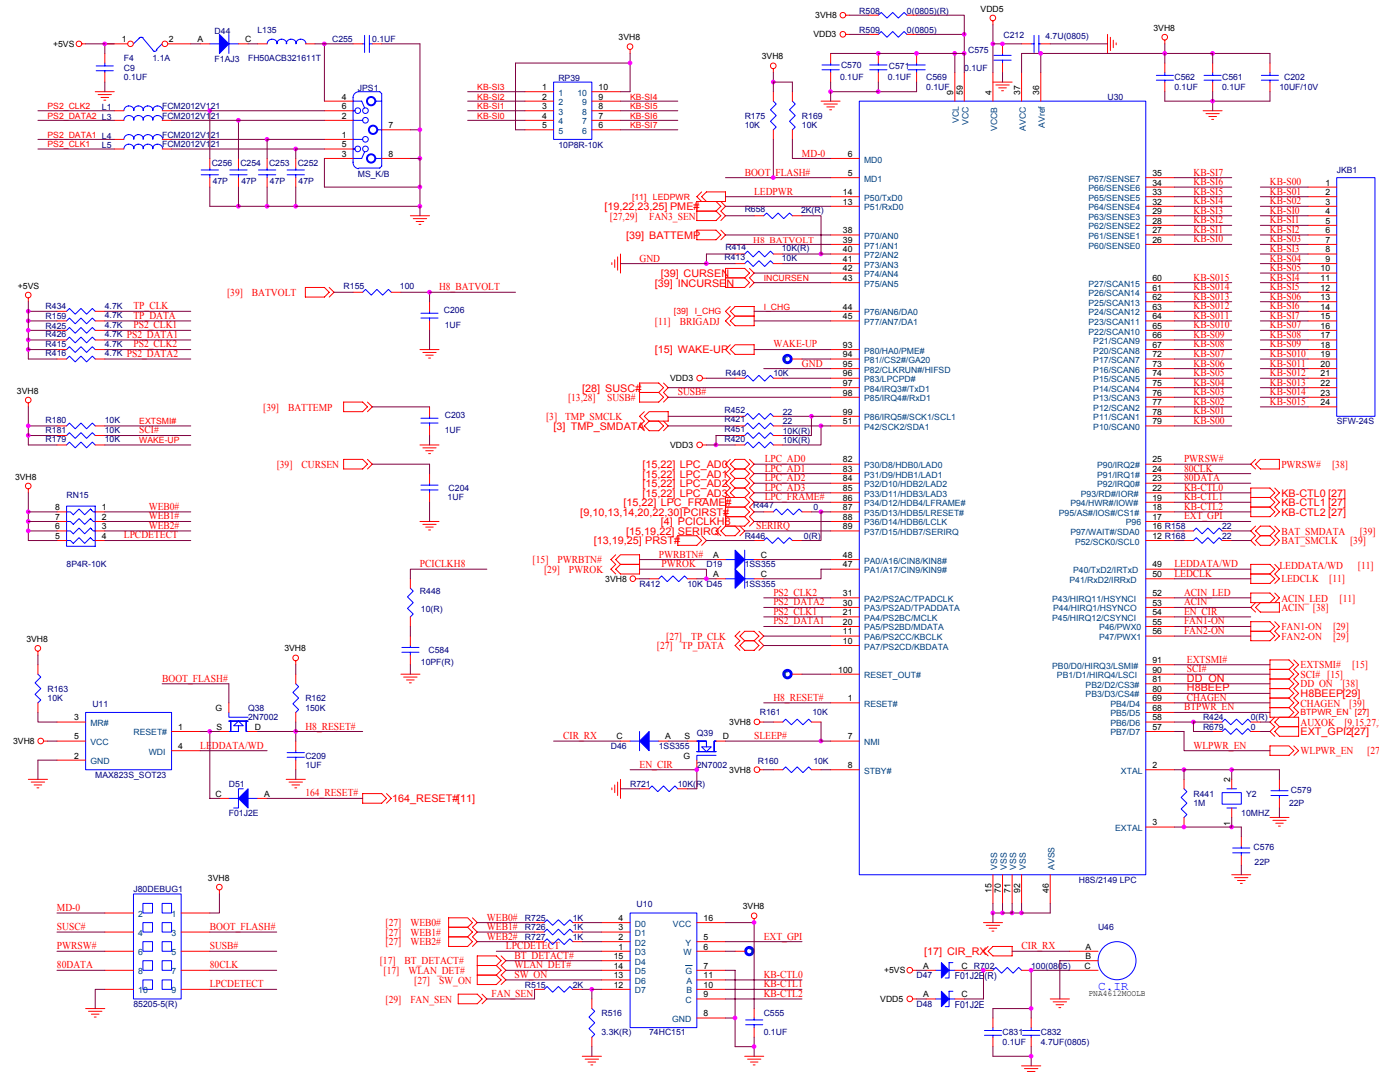

Sheet 24 of 41  
LPC H8

# LAN RTL8100BL


Sheet 25 of 41  
LAN RTL8100BL

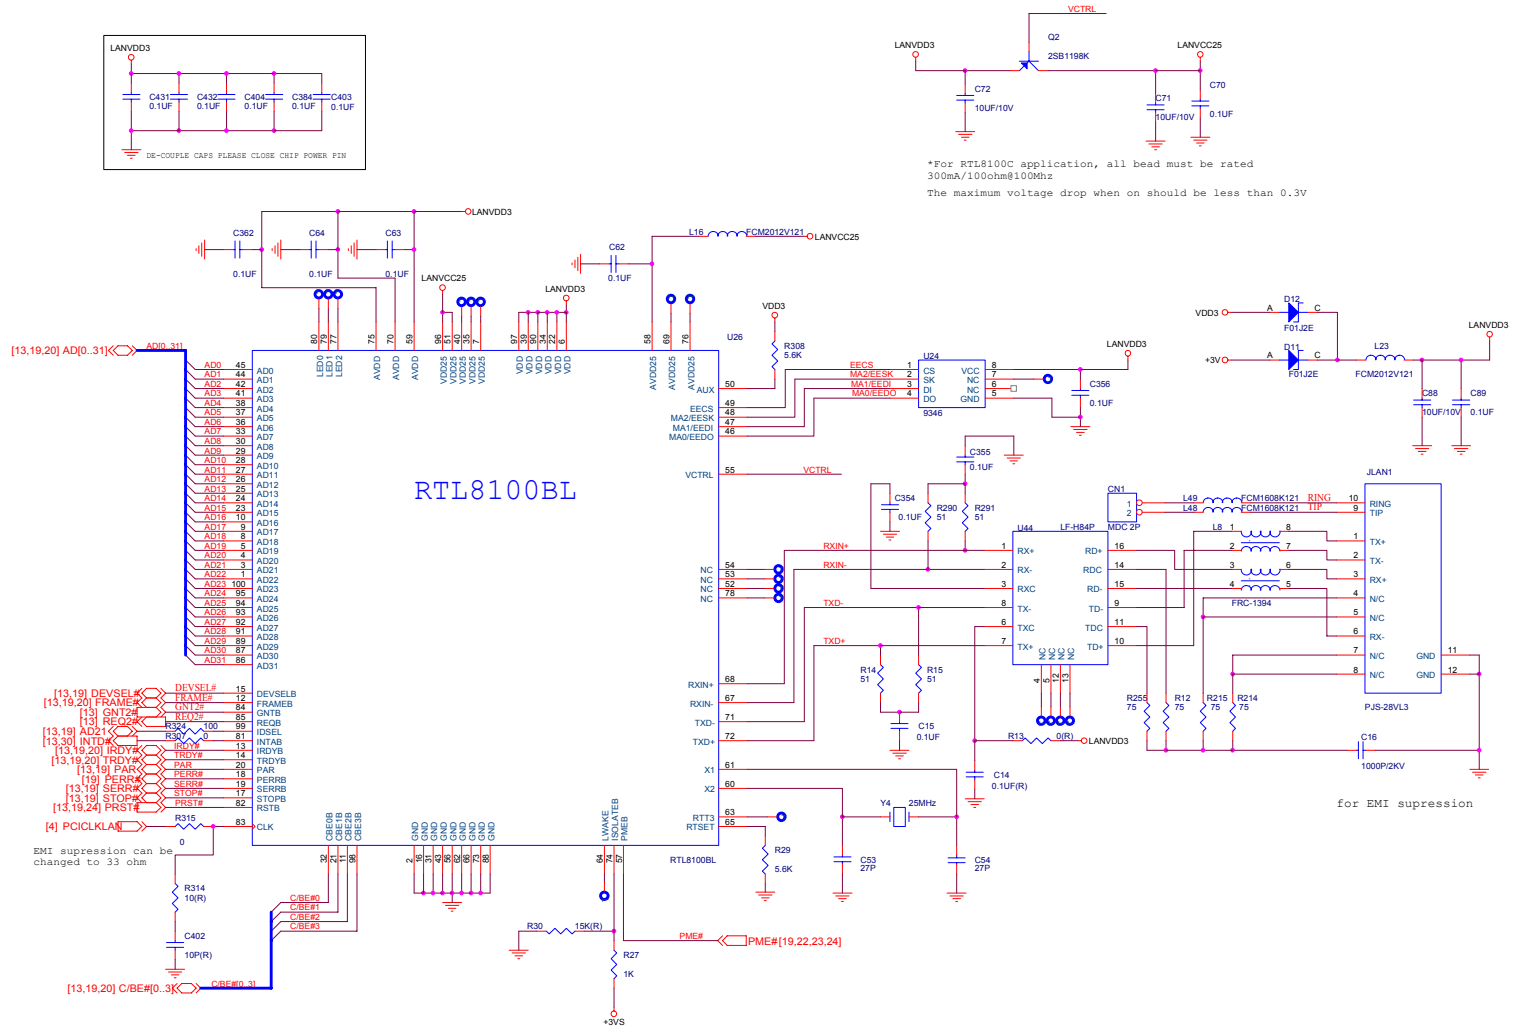




# Audio Out & Off Board Connectors

Sheet 27 of 41  
Audio Out & Off  
Board Connectors

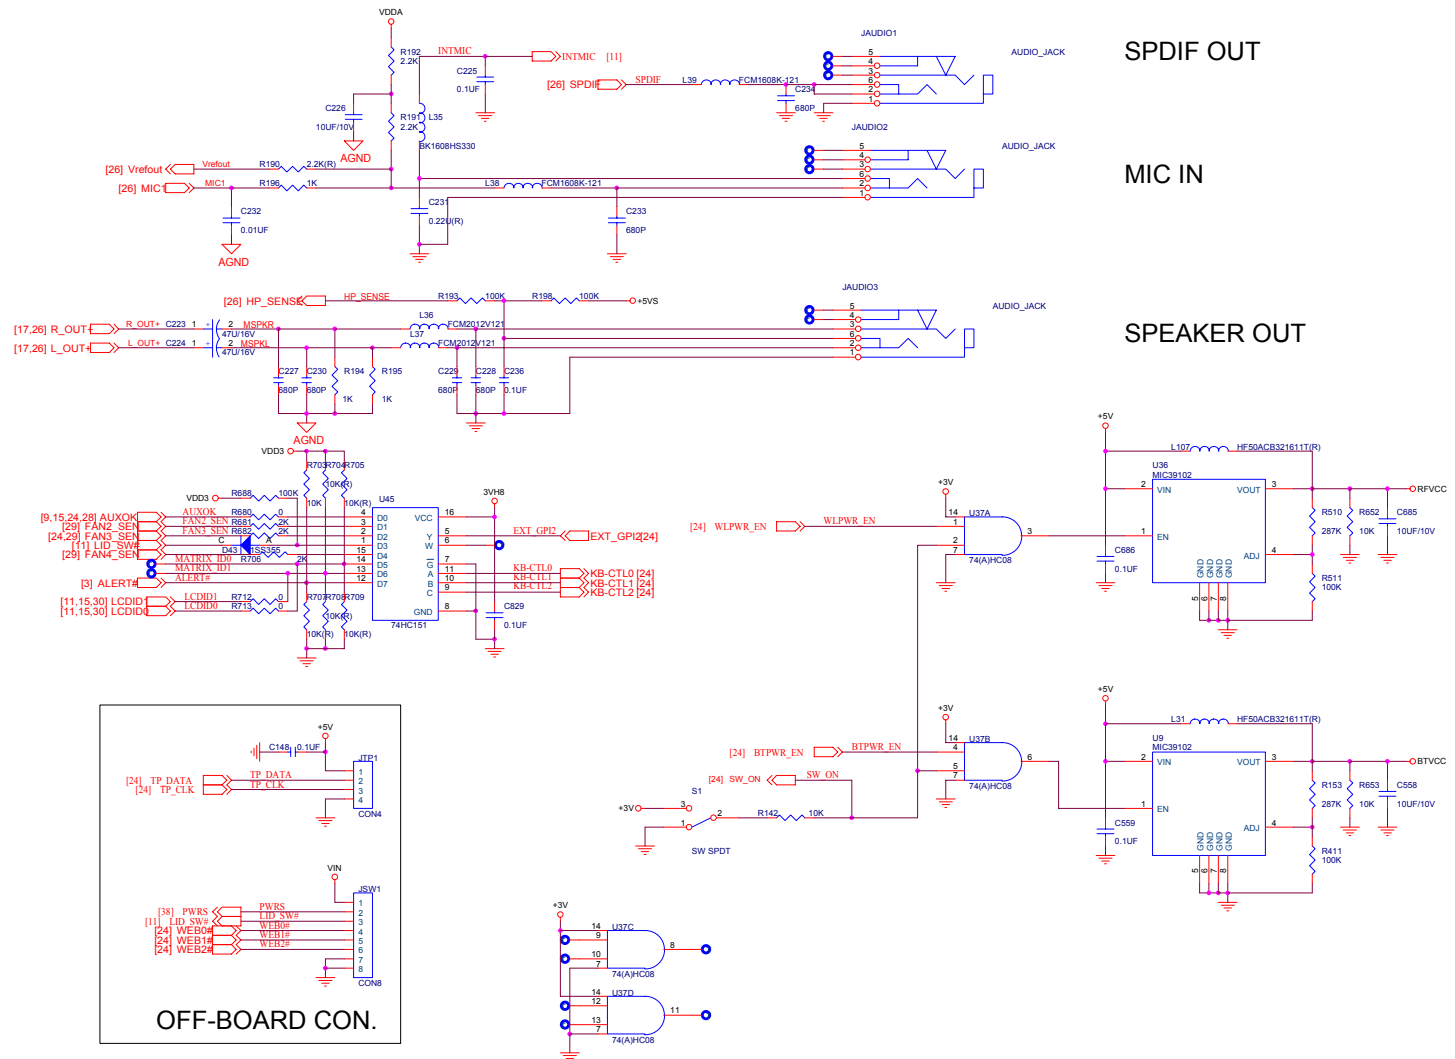











# System Power Control

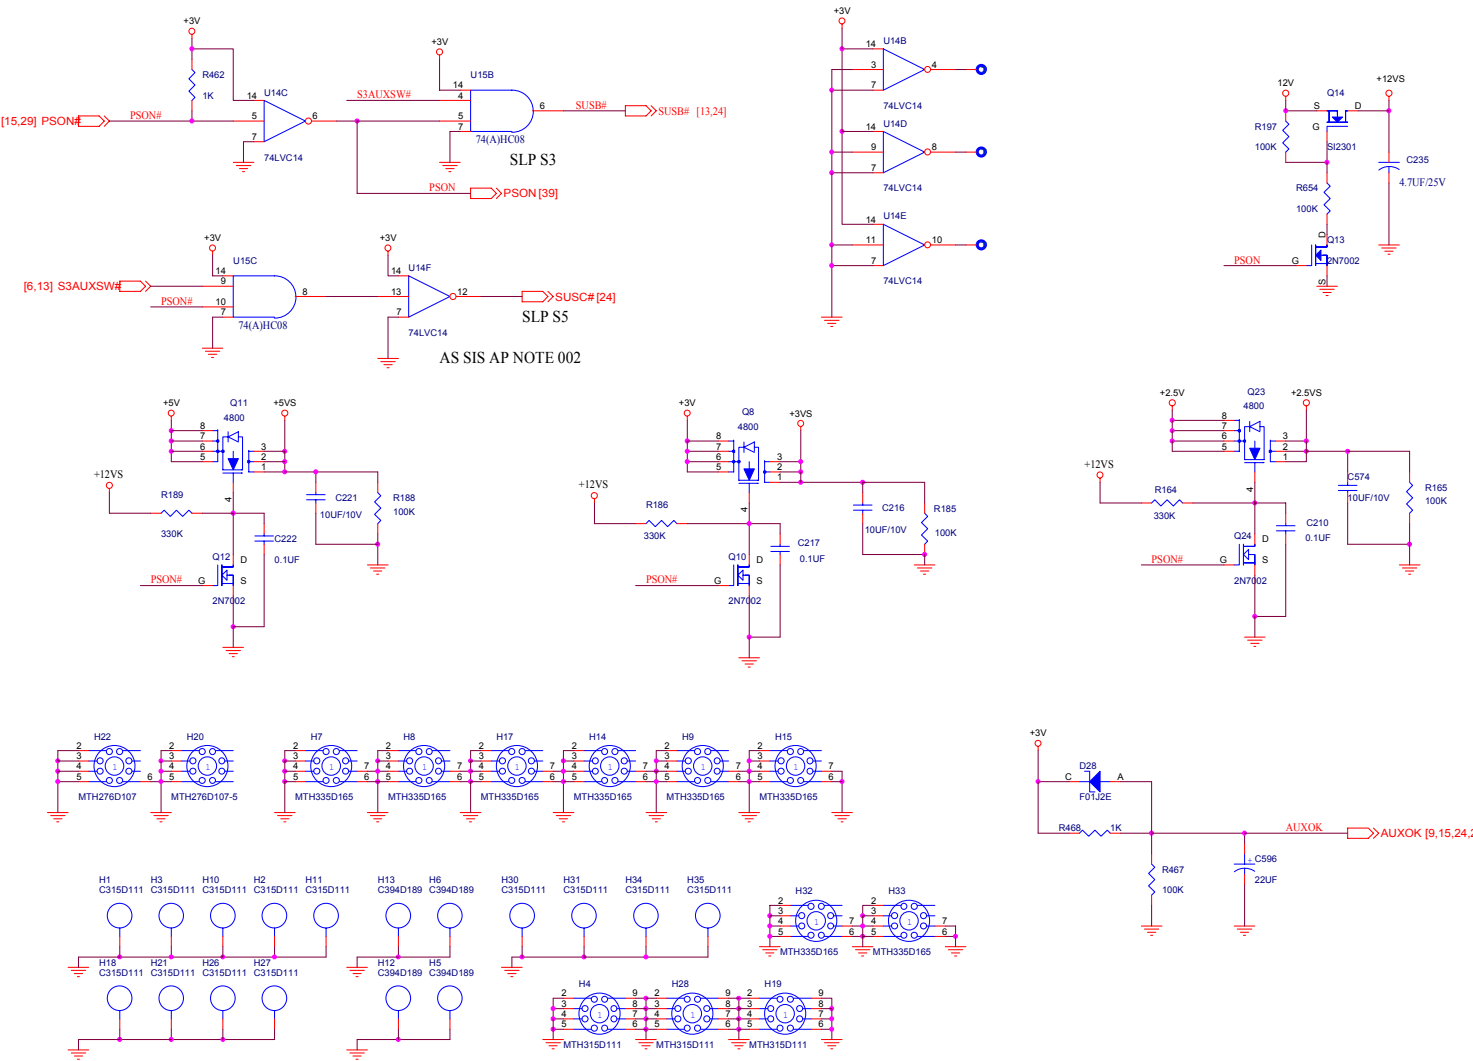


Sheet 28 of 41  
System Power  
Control

# Fan Control and SpeedStep

Sheet 29 of 41  
Fan Control &  
SpeedStep

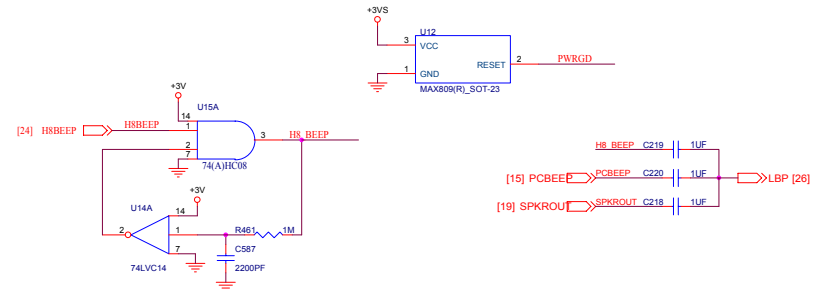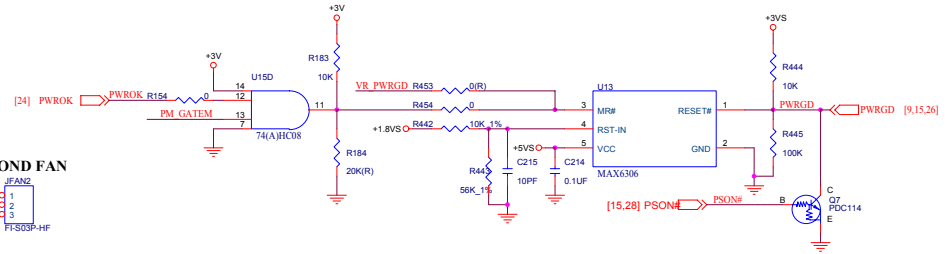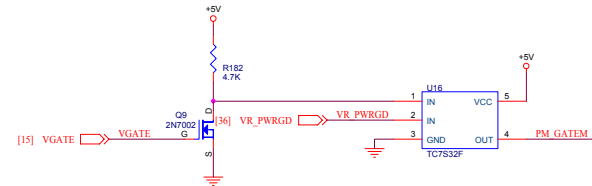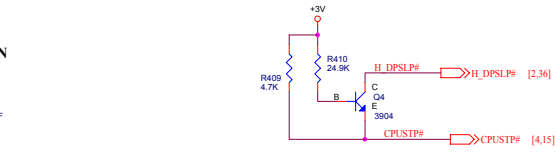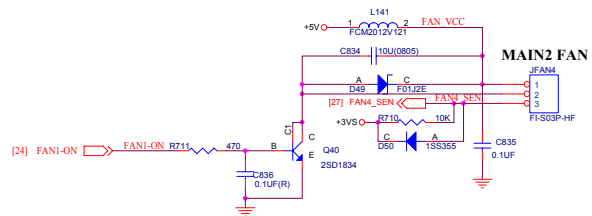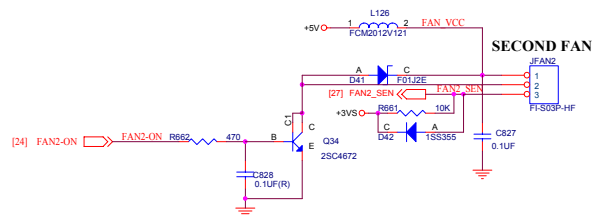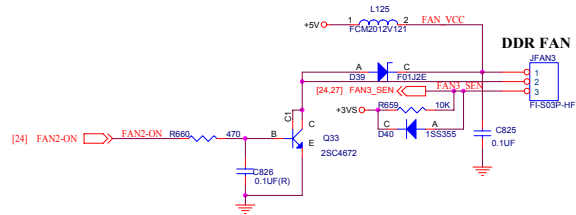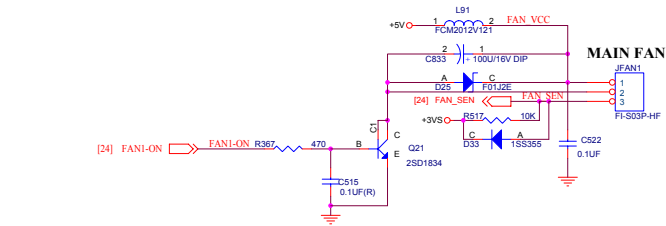

# VCORE

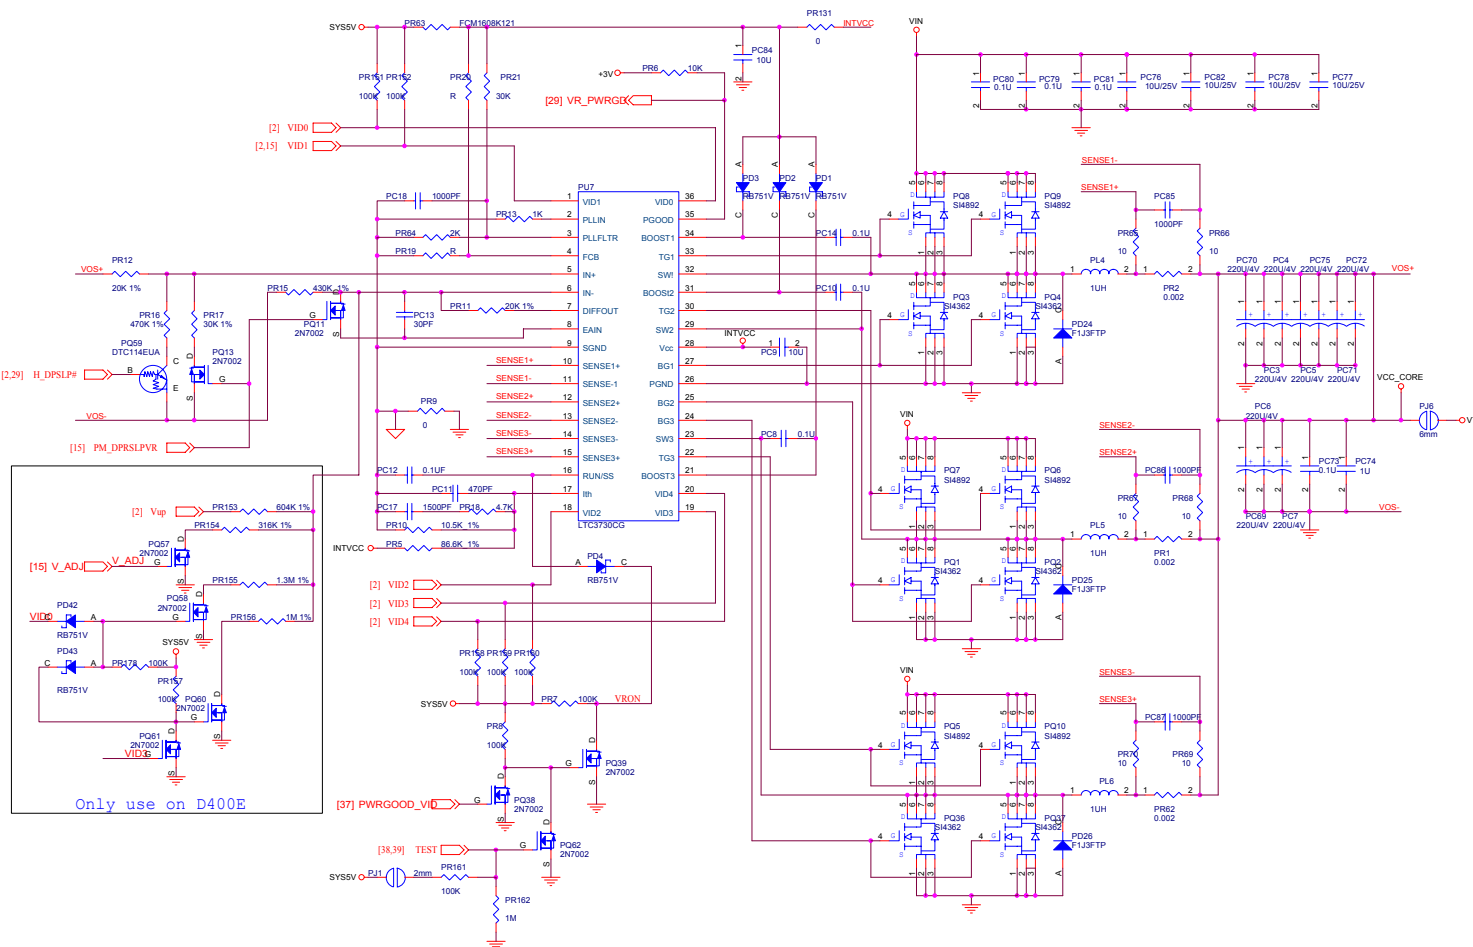

Sheet 30 of 41  
VCORE

B. Schematic Diagrams
















# SW Board and HotKey

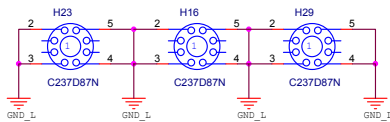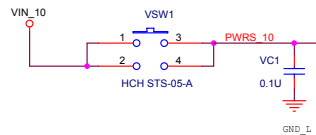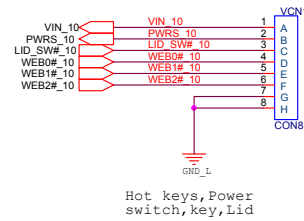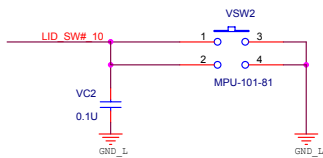

Sheet 34 of 41  
SW Board and  
HotKey

# TouchPad and Switch Board

Sheet 35 of 41  
TouchPad and  
Switch Board

